

Nikon 26347

Nikon COOLPIX S01 Digital Camera User Manual

Model: 26347

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Nikon COOLPIX S01 Digital Camera. The COOLPIX S01 is a compact digital camera featuring a 10.1-megapixel CCD sensor and a 3x optical Zoom-NIKKOR glass lens, designed for capturing high-quality photos and HD videos.

1.1. Key Features

- Incredibly compact design, fits your pocket.
- 3x optical Zoom-NIKKOR lens.
- Easy to use 2.5 inch touch screen.
- Shoots 720p HD videos.
- Built-in battery and 7.3 GB of internal memory.

1.2. Package Contents

Ensure all items listed below are present in your camera package:

- Nikon COOLPIX S01 Digital Camera
- AN-CP19 Strap
- UC-E16 USB Cable
- EH-69P AC Adapter/Charger
- Built-in Lithium Ion Battery



Figure 1.1: Front view of the Nikon COOLPIX S01 Digital Camera, silver model, showing the lens and brand logo.

2. SETUP

2.1. Charging the Battery

The camera features a built-in Lithium Ion battery. Before initial use, fully charge the battery.

1. Connect the UC-E16 USB Cable to the camera's USB port.
2. Connect the other end of the USB cable to the EH-69P AC Adapter/Charger.
3. Plug the AC Adapter/Charger into a wall outlet.
4. The charging indicator light on the camera will illuminate. Charging is complete when the light turns off.

2.2. Initial Power On and Settings

After charging, power on the camera for the first time.

1. Press and hold the Power button (ON/OFF) located on the top of the camera until the screen illuminates.
2. Follow the on-screen prompts to set the language, date, and time. Use the touchscreen to navigate and make selections.



3. OPERATING THE CAMERA

3.1. Basic Operation

- **Power On/Off:** Press the ON/OFF button on the top of the camera.
- **Touchscreen Interface:** The camera features an intuitive touchscreen display for navigation, settings adjustments, and photo review.



Figure 3.1: Rear view of the Nikon COOLPIX S01, displaying the touchscreen interface.

3.2. Taking Photos

The COOLPIX S01 captures 10.1-megapixel still images.

1. Turn on the camera.
2. Frame your shot using the touchscreen display.
3. Use the zoom control (T/W) on the side of the camera to adjust the 3x optical zoom.
4. Tap the shutter icon on the touchscreen to take a photo. The camera will automatically focus before capturing the image.

3.3. Recording HD Videos

The camera supports 720p HD video recording with sound.

- From the shooting screen, tap the video recording icon (usually a red circle or movie camera symbol) to start recording.

- Tap the icon again to stop recording.

3.4. Automatic Scene Selection

The COOLPIX S01 features an automatic scene selection function that detects the shooting conditions and automatically selects the optimal scene mode. This includes modes such as Portrait, Landscape, Night Portrait, Night Landscape, Close-up, or Backlighting.

3.5. Reviewing and Transferring Files

- **Review:** Tap the playback icon (usually a triangle) on the touchscreen to view your photos and videos. Swipe left or right to navigate through images.
- **Transfer:** Connect the camera to a computer using the supplied UC-E16 USB cable. The camera will appear as a removable drive, allowing you to copy files to your computer.

4. MAINTENANCE

4.1. Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water. Do not use alcohol, thinners, or other volatile chemicals.
- **Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens with your fingers.
- **Touchscreen:** Use a soft, lint-free cloth, specifically designed for screens, to gently wipe the display.

4.2. Battery Care

- Avoid exposing the camera to extreme temperatures, as this can affect battery performance.
- Charge the battery regularly, even if the camera is not in frequent use, to maintain its lifespan.

4.3. Storage

When not in use for extended periods, store the camera in a cool, dry place, away from direct sunlight and high humidity.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your COOLPIX S01 camera.

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted.	Charge the battery fully using the supplied AC adapter.
Photos are blurry.	Camera shake; insufficient light; dirty lens.	Hold the camera steady; use adequate lighting; clean the lens.
Cannot record video.	Insufficient internal memory.	Delete unnecessary photos/videos to free up space.

Problem	Possible Cause	Solution
Camera freezes or is unresponsive.	Temporary software glitch.	Press and hold the power button for 10 seconds to force a shutdown, then restart the camera.

If the problem persists after trying these solutions, please contact Nikon customer support.

6. SPECIFICATIONS

Technical specifications for the Nikon COOLPIX S01 Digital Camera.

Feature	Detail
Model Number	26347
Product Dimensions	3.03 x 0.67 x 2.05 inches
Item Weight	3.36 ounces
Sensor Type	10.1 MP CCD
Optical Zoom	3x
Lens	NIKKOR Glass Lens (4.1-12.3 mm, 1:3.3-5.9)
Display	2.5 inch Touch Screen
Video Recording	720p HD
Internal Memory	7.3 GB
Image Stabilization	Digital, Optical
Supported File Format	JPEG Exif 2.3
Power Source	Built-in Lithium Ion Battery



Figure 6.1: The Nikon COOLPIX S01 camera demonstrating its compact form factor when held in a hand.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or visit the official Nikon website. Warranty terms and conditions may vary by region.

7.2. Customer Support

If you require further assistance, have questions not covered in this manual, or need technical support, please contact Nikon customer service. You can find contact information on the official Nikon website:

[Nikon USA Service and Support](#)

© 2024 Nikon Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question