

Kodak Easyshare Series 3 Printer Dock 3

Kodak Easyshare Series 3 Printer Dock 3 User Manual

Your complete guide to setting up, operating, and maintaining your printer dock.

1. INTRODUCTION

Welcome to the user manual for your Kodak Easyshare Series 3 Printer Dock 3. This manual provides detailed instructions to help you get the most out of your printer dock, from initial setup to advanced printing features and troubleshooting.

The Kodak Easyshare Series 3 Printer Dock 3 is designed to provide convenient, high-quality photo printing directly from your Kodak Easyshare camera or other compatible devices. Its compact design and user-friendly interface make it ideal for printing vibrant, long-lasting photos at home.

2. SAFETY INFORMATION

Please read all safety instructions before using your Kodak Easyshare Series 3 Printer Dock 3 to prevent injury or damage to the device.

- Do not expose the printer dock to water or excessive moisture.
- Use only the power adapter supplied with the printer dock.
- Do not attempt to disassemble or repair the printer dock yourself. Refer all servicing to qualified service personnel.
- Keep the printer dock away from direct sunlight and heat sources.
- Ensure proper ventilation around the printer dock during operation.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Kodak Easyshare Series 3 Printer Dock 3

- AC Power Adapter and Power Cord
- Paper Tray
- Sample Photo Paper Pack
- Color Cartridge (pre-installed or separate)
- USB Cable (for computer connection)
- User's Guide (this manual)

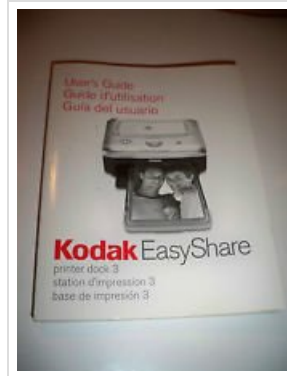


Image: The cover of the Kodak Easyshare Series 3 Printer Dock 3 User's Guide, showing the printer dock itself and the title in multiple languages. This image represents the manual you are currently reading.

4. SETUP

4.1 Connecting Power

1. Connect the AC power adapter to the DC IN port on the back of the printer dock.
2. Plug the power cord into a wall outlet. The power indicator light should illuminate.

4.2 Loading Paper

1. Open the paper tray cover.
2. Load Kodak photo paper into the paper tray with the glossy side facing up. Ensure the paper is aligned correctly.
3. Close the paper tray cover and insert the tray into the printer dock.

4.3 Installing the Color Cartridge

1. Open the cartridge access door on the side of the printer dock.
2. Carefully insert the color cartridge until it clicks into place.
3. Close the cartridge access door.

4.4 Connecting Your Camera (Optional)

For direct printing, dock your compatible Kodak Easyshare camera onto the printer dock's connector. Ensure it is securely seated.

5. OPERATING

5.1 Printing from a Kodak Easyshare Camera

1. Ensure your camera is docked and powered on.
2. Navigate through your camera's menu to select the desired photos for printing.

3. Follow the on-screen prompts on your camera to select print quantity and initiate printing.

5.2 Printing from a Computer

1. Connect the printer dock to your computer using the supplied USB cable.
2. Install the necessary printer drivers from the Kodak website or the included software CD (if applicable).
3. Open the image you wish to print in your preferred photo editing or viewing software.
4. Select 'Print' from the file menu and choose the Kodak Easyshare Series 3 Printer Dock 3 as your printer. Adjust print settings as desired.

5.3 Understanding Indicator Lights

- **Solid Green:** Printer is ready.
- **Flashing Green:** Printing in progress or data transfer.
- **Solid Amber:** Error, such as out of paper or cartridge issue.
- **Flashing Amber:** Paper jam or other critical error.

6. MAINTENANCE

6.1 Cleaning the Printer Dock

- Disconnect the power cord before cleaning.
- Wipe the exterior of the printer dock with a soft, dry, lint-free cloth.
- Do not use liquid cleaners or abrasive materials.

6.2 Replacing the Color Cartridge

1. When the print quality degrades or the printer indicates the cartridge is empty, open the cartridge access door.
2. Gently pull out the old cartridge.
3. Unpack a new Kodak color cartridge and insert it firmly until it clicks into place.
4. Close the access door.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not turning on	Power cord not connected; Power outlet issue	Ensure power cord is securely connected; Try a different outlet.
No paper detected	Paper tray empty or incorrectly loaded	Load paper correctly; Ensure paper tray is fully inserted.
Poor print quality	Low ink; Dirty print head; Incorrect paper type	Replace color cartridge; Clean the print head (refer to camera/software options); Use recommended Kodak photo paper.
Camera not recognized	Camera not docked properly; Incompatible camera model	Re-dock camera securely; Verify camera compatibility with the Series 3 dock.

8. SPECIFICATIONS

- **Product Name:** Kodak Easyshare Series 3 Printer Dock 3
- **Printing Technology:** Thermal Dye Sublimation
- **Print Size:** Standard photo sizes (e.g., 4x6 inches)
- **Connectivity:** Kodak Easyshare Camera Dock, USB (for PC connection)
- **Power:** AC Adapter (Input: 100-240V, 50/60Hz)
- **Compatible Cameras:** Kodak Easyshare System 3 and later digital cameras
- **Dimensions:** *(Approximate, specific dimensions not provided in source data)*
- **Weight:** *(Approximate, specific weight not provided for dock in source data)*

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is typically provided with your purchase documentation or on the manufacturer's official website. Please refer to the warranty card included in your original product packaging or visit the official Kodak support website for the most up-to-date information on warranty coverage, technical support, and service options.

For further assistance, you may also consult the comprehensive online resources available from Kodak, including FAQs and driver downloads.