

[Manuals.plus](#) /

› [Ameriwood Home](#) /

› Ameriwood Home Parsons Desk, Espresso - Instruction Manual

Ameriwood Home 9178696

Ameriwood Home Parsons Desk, Espresso - Instruction Manual

Model: 9178696

INTRODUCTION

This manual provides detailed instructions for the assembly, use, and maintenance of your Ameriwood Home Parsons Desk in Espresso. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: Ameriwood Home Parsons Desk, Espresso.

SAFETY INFORMATION

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the desk. Refer to the specifications section for maximum weight capacities.
- Keep small parts away from children during assembly.
- This product is intended for indoor use only.
- Do not stand on the desk.

PARTS LIST

Before beginning assembly, verify that all components listed below are present and undamaged.

- Desktop (Preassembled with drawer)
- Legs (4 pieces)
- Assembly Hardware (Screws, dowel pins, Allen wrench, wood glue)



Figure 2: Desk components including desktop and legs.

SETUP AND ASSEMBLY

Assembly requires attaching the four legs to the preassembled desktop. Two people are recommended for assembly.

1. **Prepare the Desktop:** Carefully place the desktop upside down on a clean, soft surface (e.g., a blanket or carpet)

to prevent damage to the finish.

2. Attach the Legs:

- a. Insert the provided dowel pins into the pre-drilled holes on the top of each leg. Apply a small amount of wood glue (if provided) into the dowel pin holes before insertion for added stability.
- b. Align each leg with the corresponding corner of the desktop. Ensure the leg is flush with the desktop's edge.
- c. Insert the screws with lock washers and washers through the pre-drilled holes in the desktop's side rails and into the top of each leg.
- d. Using the provided Allen wrench, tighten all screws securely. Do not overtighten.

- 3. Verify Stability:** With assistance, carefully turn the desk upright. Gently push on the desk from various angles to ensure it is stable and all connections are secure.



Figure 3: Detail of leg attachment for secure assembly.

OPERATING INSTRUCTIONS

Drawer Functionality

The Ameriwood Home Parsons Desk features a single, discreet drawer for convenient storage of small office supplies. To open, gently pull the drawer front. To close, push until it is flush with the desk frame.



Figure 4: The desk's integrated drawer for small item storage.

Weight Capacity

- **Desktop:** Maximum weight capacity is 150 lbs.
- **Drawer:** Maximum weight capacity is 6 lbs.

Do not exceed these limits to ensure the longevity and safety of the desk.

MAINTENANCE

To maintain the appearance and durability of your Ameriwood Home Parsons Desk, follow these care instructions:

- **Cleaning:** Dust and wipe with a dry cloth. If needed, a damp cloth may be used sparingly. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Wipe up spills immediately with a dry cloth to prevent staining or damage to the laminated finish.
- **Protection:** Use coasters under beverages and placemats under hot items to protect the desktop surface.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight. Re-tighten as necessary.

TROUBLESHOOTING

Desk is Wobbly

- Ensure all leg attachment screws are fully tightened.
- Verify the desk is on a level surface. Adjust leg levelers if present, or place shims under the legs if needed.

Drawer Does Not Slide Smoothly

- Check for any obstructions in the drawer glides.
- Ensure the drawer is properly aligned on its tracks.
- Avoid overloading the drawer, as this can impede smooth operation.

SPECIFICATIONS

Feature	Detail
Brand	Ameriwood Home
Model Number	9178696
Product Dimensions	19.7"D x 39"W x 30"H
Color	Espresso
Style	Transitional
Base Material	Engineered Wood
Finish Type	Laminated
Special Feature	Compact
Number of Drawers	1
Maximum Weight Capacity (Desktop)	150 Pounds
Maximum Weight Capacity (Drawer)	6 Pounds
Required Assembly	Yes
Recommended Number of People for Assembly	2

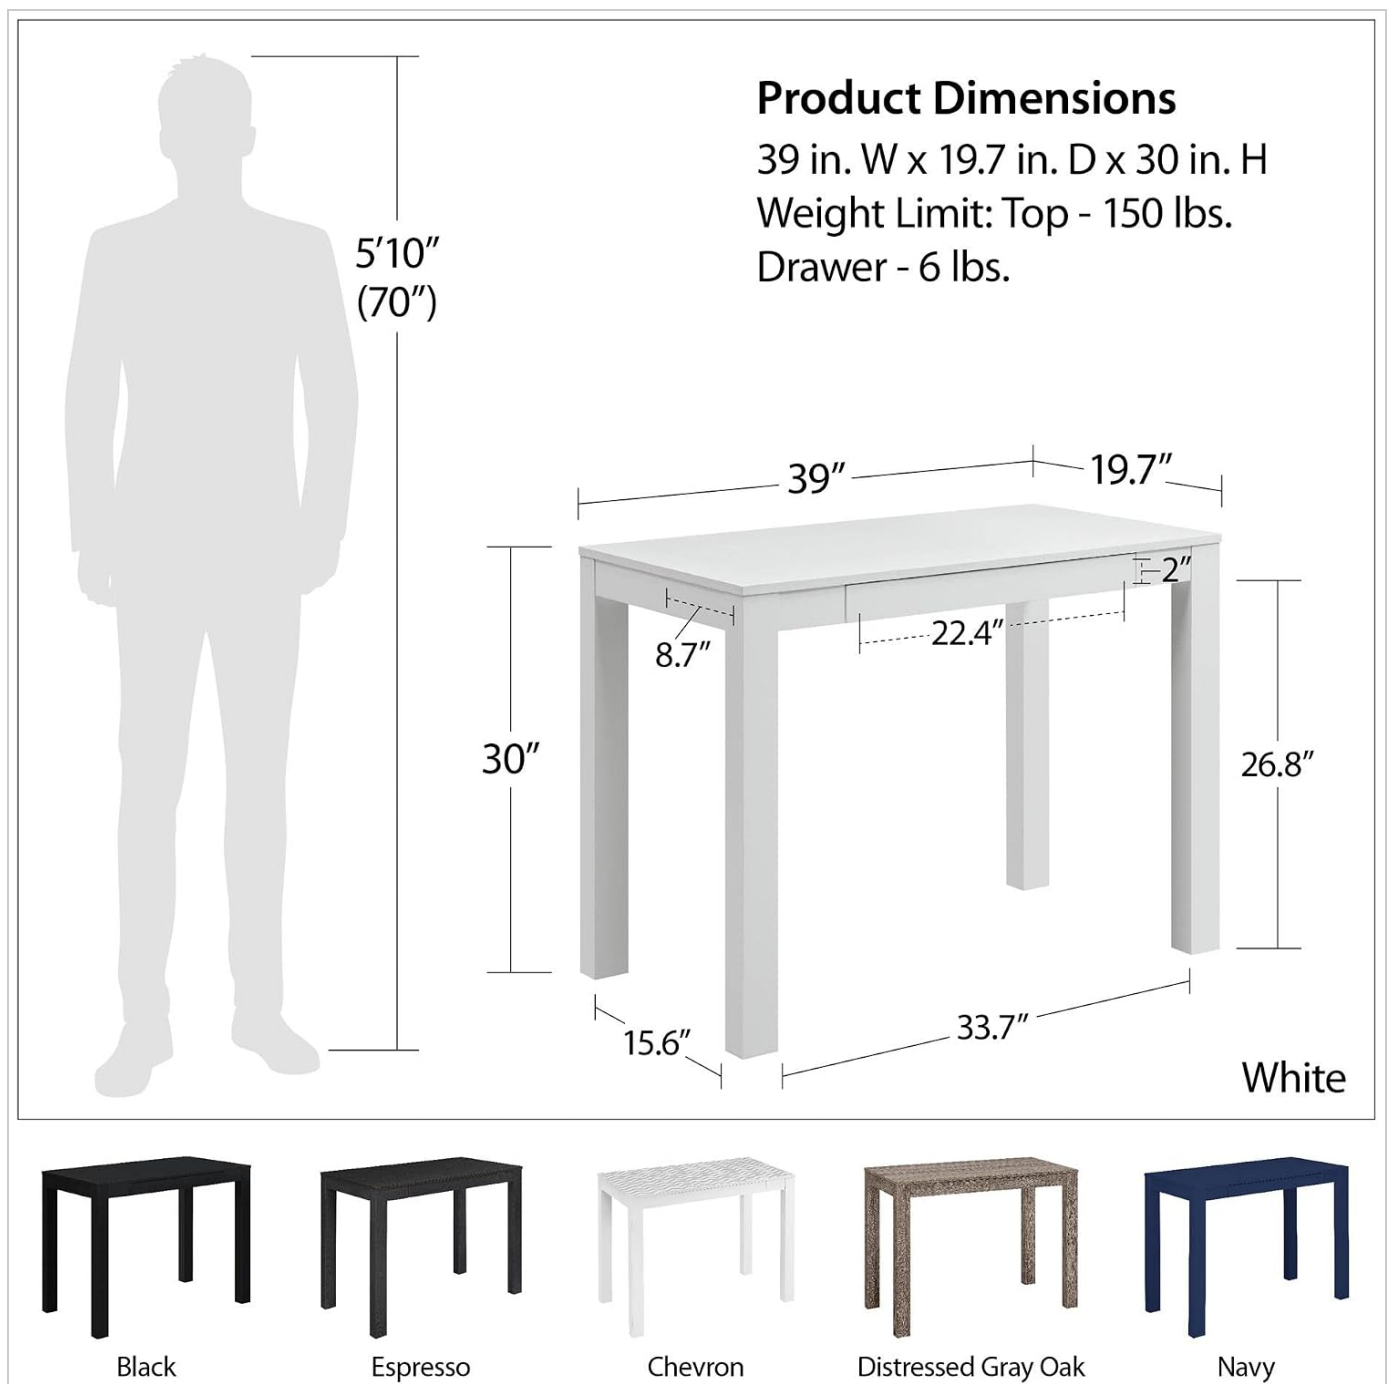


Figure 5: Detailed product dimensions and weight limits.

WARRANTY AND SUPPORT

The Ameriwood Home Parsons Desk is covered by a **1-Year Limited Warranty**. This warranty covers manufacturing defects and material flaws under normal use.

For warranty claims, missing parts, or technical assistance, please contact Ameriwood Home customer support. Refer to the product packaging or the Ameriwood Home official website for current contact information.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0091SXURW>

More documents and user manuals: <https://manuals.plus/>