

[Manuals.plus](#) /

› [Epson](#) /

› Epson Expression Premium XP-600 Small-in-One® Printer User Manual

Epson C11CC47201

Epson Expression Premium XP-600 Small-in-One® Printer User Manual

Model: C11CC47201

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Epson Expression Premium XP-600 Small-in-One® Printer. The XP-600 is a versatile device designed to deliver superior performance for printing, copying, scanning, and photo output, featuring Wi-Fi connectivity, automatic 2-sided printing, and a user-friendly 2.5-inch LCD touch panel. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your printer.

PRODUCT OVERVIEW



Figure 1: Front view of the Epson Expression Premium XP-600 printer, showing its compact design and a photo being printed.



Figure 2: Side view of the Epson Expression Premium XP-600 printer, illustrating its compact dimensions.

Key Features:

- Superior photo quality and sharp text output.
- Automatic 2-sided printing, copying, and scanning capabilities.
- Intuitive 2.5-inch touchscreen with gesture navigation for easy control.
- EPSON Connect for convenient mobile printing from various devices.
- Dedicated photo tray for specialized media.
- Built-in card slots for PC-free printing.
- Direct CD/DVD printing functionality.

SETUP GUIDE

1. Unpacking

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer.

2. Initial Setup

- **Power Connection:** Connect the power cord to the printer and then to a power outlet.
- **Ink Cartridge Installation:** Open the ink cartridge cover and install the five Claria Premium Ink Cartridges (Black, Photo Black, Cyan, Magenta, Yellow) into their respective slots. Ensure they click into place.
- **Paper Loading:** Load paper into the main paper tray or the dedicated photo tray. Refer to the "Paper Loading" section for detailed instructions on different paper types and sizes.

3. Wireless Connection

The XP-600 supports Wi-Fi connectivity for flexible placement.

1. On the printer's 2.5-inch LCD touch panel, navigate to the Wi-Fi setup menu.
2. Select your wireless network (SSID) from the list.
3. Enter your network password using the on-screen keypad. Exercise care when entering the password as the keypad can be sensitive.
4. Once connected, the Wi-Fi indicator light will illuminate.

4. Software and Driver Installation

Insert the provided CD-ROM into your computer's drive and follow the on-screen instructions to install the necessary software and drivers for Windows or Mac operating systems. Alternatively, you can download the latest drivers from the official Epson support website.

OPERATING INSTRUCTIONS

1. Printing

- **Document Printing:** From your computer, select "Print" from your application. Choose the Epson XP-600, adjust settings like paper size, quality (e.g., Standard, Draft, Fine), and select *"2-sided printing"* for automatic duplexing if desired.
- **Photo Printing:** For optimal photo quality, use the dedicated photo tray and select appropriate photo paper settings in your print driver. The printer supports resolutions up to 5760 x 1440 dpi.
- **Direct CD/DVD Printing:** Use the included CD/DVD printing tray. Place a printable CD/DVD in the tray and follow the on-screen instructions or software prompts to print directly onto the disc surface.

2. Copying

Place the document face-down on the scanner glass or use the automatic document feeder (if available). On the printer's control panel, select "Copy" and adjust settings such as number of copies, color/black & white, and paper size before initiating the copy.

3. Scanning

Place the item to be scanned on the scanner glass. From your computer, open the Epson Scan utility or other scanning software. Select scan settings (e.g., resolution up to 2400 dpi, color/grayscale, destination) and initiate the scan.

4. Mobile Printing

- **EPSON Connect:** Register your printer with EPSON Connect to enable printing from smartphones, tablets, and other mobile devices via email print or the Epson iPrint app.
- **Apple AirPrint:** For Apple iOS devices, ensure your device is on the same Wi-Fi network as the printer. Select the print option from your app and choose the XP-600.
- **Google Cloud Print:** Register your printer with Google Cloud Print to print from Chromebooks, Android devices, and other web-connected devices.

5. PC-Free Operations

The XP-600 allows direct printing from memory cards (SD/MS) and USB drives via its built-in card slots and USB port. Use the 2.5-inch LCD touch panel to preview, select, and print photos directly without a computer.

MAINTENANCE

1. Ink Cartridge Replacement

The printer uses individual ink cartridges. When an ink cartridge is low or empty, a message will appear on the LCD screen. To replace:

1. Open the printer cover. The print head will move to the replacement position.
2. Press the tab on the empty cartridge and lift it out.
3. Unpack a new Epson 273-series Claria Premium Ink Cartridge and insert it firmly into the correct slot until it clicks.
4. Close the printer cover. The printer will begin initializing the new ink.

Note: Only replace the color that is empty. Use genuine Epson ink cartridges for optimal performance and print quality.

2. Paper Loading

The XP-600 features a main paper tray and a dedicated photo tray.

- **Main Tray:** Pull out the paper tray located at the bottom front of the printer. Load up to 100 sheets of plain paper (8.5 x 11 inches) or other compatible media. Adjust the paper guides to fit the paper size.
- **Photo Tray:** This smaller tray is designed for photo paper (e.g., 4 x 6 inches, 8.5 x 11 inches). Load photo paper print-side down.

Tip: Ensure paper is not curled or creased to prevent feeding issues.

3. Cleaning

Regularly clean the exterior of the printer with a soft, damp cloth. If print quality degrades (e.g., streaks, missing lines), perform a nozzle check and head cleaning from the printer's maintenance menu or the printer driver software.

TROUBLESHOOTING

Common Issues and Solutions:

- **Printer Not Responding/Offline:**

- Check power connections.
- Verify Wi-Fi connection status on the printer and your network router.
- Ensure the printer is selected as the default printer on your computer.
- Restart the printer and your computer.

- **Paper Feeding Problems:**

- Ensure paper is loaded correctly and not exceeding the maximum capacity.
- Fan the paper stack before loading to prevent multiple sheets from feeding.
- Check for any paper jams inside the printer and carefully remove them.
- Use recommended paper types and weights.

- **Poor Print Quality (Streaks, Faded Colors):**

- Check ink levels and replace any low or empty cartridges.
- Perform a nozzle check and head cleaning cycle from the printer's maintenance menu.
- Ensure you are using genuine Epson ink cartridges.
- Verify that the correct paper type is selected in the print settings.

- **Slow Printing:**

- Adjust print quality settings to "Draft" or "Standard" for faster output when high quality is not required.
- Ensure your computer meets the system requirements for the printer.

For more detailed troubleshooting, refer to the comprehensive help guide available on the Epson support website or the software CD-ROM.

SPECIFICATIONS

Feature	Detail
Model Name	Expression Premium XP-600
Functions	Print, Copy, Scan, Photo, Wi-Fi
Printing Technology	Inkjet
Maximum Print Resolution	5760 x 1440 optimized dpi
Print Speed (Black)	Up to 12 ppm (ISO)
Print Speed (Color)	Up to 9 ppm (ISO)
Scanner Type	Color flatbed
Maximum Scan Resolution	2400 dpi
Display	2.5" LCD with Touch Panel
Connectivity	Wi-Fi, USB, Ethernet
Paper Capacity	100 sheets (main tray)
Duplex Printing	Automatic (2-sided)
Ink Type	Claria Premium Ink (5 individual cartridges)
Dimensions (Storage)	15.4" x 13.4" x 5.4" (W x D x H)
Weight	19 lbs

WARRANTY AND SUPPORT

Limited Warranty

The Epson Expression Premium XP-600 Small-in-One® Printer comes with a limited warranty. Please refer to the warranty documentation included with your product or visit the official Epson website for specific terms and conditions, including warranty period and coverage details.

Customer Support

For technical assistance, driver downloads, FAQs, or to contact customer service, please visit the official Epson support website. You can also find additional resources and troubleshooting tips there.

Epson Support Website: www.epson.com/support (This is a placeholder link, please refer to your product's specific support page.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0091Y07Y0>

More documents and user manuals: <https://manuals.plus/>