

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Prestige](#) /
- › [Prestige PIC 1.0 V2 1900-Watt Induction Cooktop User Manual](#)

## Prestige PIC 1.0 V2

# Prestige PIC 1.0 V2 1900-Watt Induction Cooktop User Manual

Model: PIC 1.0 V2 | Brand: Prestige

## INTRODUCTION

---

Thank you for choosing the Prestige PIC 1.0 V2 1900-Watt Induction Cooktop. This appliance is designed for efficient and safe cooking. Please read this manual thoroughly before operating the cooktop to ensure proper use, maintenance, and to prevent any potential hazards. Keep this manual for future reference.



PIC 1.0 V2

1900W  
Power



Induction  
cook top

Indian menu  
option



A Product.

Image: The Prestige PIC 1.0 V2 Induction Cooktop, showcasing its sleek black surface and control panel.

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only induction-compatible cookware.
- Ensure proper ventilation around the cooktop during operation.

## PRODUCT FEATURES

---

The Prestige PIC 1.0 V2 Induction Cooktop is equipped with several features designed for convenience and safety:

- **1900 Watts Power:** Provides rapid heating for efficient cooking.
- **Feather Touch Buttons:** Easy-to-use control panel for precise adjustments.
- **Anti-magnetic Wall:** Designed to block surplus magnetic radiation, ensuring safety and efficiency.
- **Anti-skid Steel Ring:** Enhances stability and prevents cookware from slipping.
- **Automatic Voltage Regulator:** Protects the appliance from voltage fluctuations.
- **Power Consumption Display:** Allows monitoring of energy usage.
- **Automatic Start Options:** Pre-set cooking programs for various dishes.
- **Dual Heat Sensors:** Ensures the appliance heats up within permissible safety bands, preventing overheating.
- **Indian Menu Options:** Dedicated presets for popular Indian dishes.
- **Eco-Friendly:** Flame-free heating process reduces environmental hazards.
- **Easy Maintenance:** Flat and smooth surface for quick and hassle-free cleaning.
- **Portable:** Compact design allows for use in various locations.

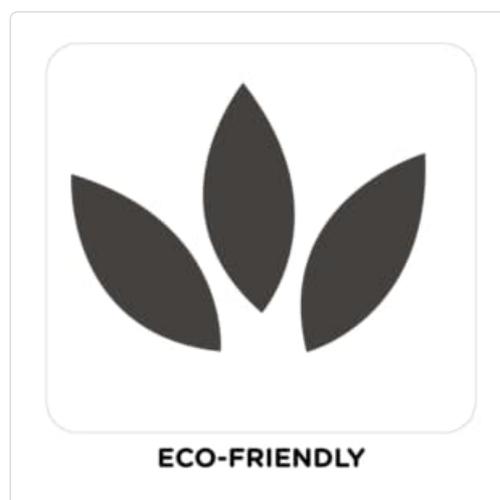


Image: An illustration of the Prestige Induction Cooktop, highlighting key features such as the control panel and cooking surface.

## SETUP

---

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the cooktop on a stable, flat, and heat-resistant surface. Ensure there is adequate ventilation around the appliance, keeping it away from walls or other objects that might obstruct airflow.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240 volts). Ensure the outlet matches the voltage requirements of the cooktop.
4. **Initial Cleaning:** Before first use, wipe the cooktop surface with a soft, damp cloth. Do not use abrasive cleaners.



Image: The packaging box of the Prestige Induction Cooktop, indicating the product is new and ready for setup.

## OPERATING INSTRUCTIONS

Follow these steps to operate your Prestige Induction Cooktop:

1. **Power On:** Place an induction-compatible cooking vessel containing food or liquid on the center of the cooktop. Press the "ON/OFF" button to power on the appliance.
2. **Select Mode:** Choose a cooking mode using the feather touch buttons. Options may include specific Indian menu presets (e.g., Curry, Dosa, Idli) or general functions like Deep Fry, Sauté, Boil.
3. **Adjust Temperature/Power:** Use the "+" and "-" buttons to adjust the temperature or power level as needed for your recipe. The power consumption display will show the current wattage.
4. **Timer Function:** If available, set a cooking timer using the dedicated timer buttons. The cooktop will automatically switch off once the timer expires.
5. **Power Off:** After cooking, press the "ON/OFF" button to turn off the cooktop. Remove the cooking vessel. The surface will remain hot for a short period due to residual heat.

**Note:** The cooktop will only generate heat when an induction-compatible vessel is placed on it. If no vessel is detected or an incompatible vessel is used, an error message may appear, and the cooktop will not heat.

Your browser does not support the video tag.

Video: An overview of the Prestige PIC 1.0 V2 1900-Watt Induction Cooktop, demonstrating its features and general appearance.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your induction cooktop:

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Cooktop Surface:** Wipe the glass-ceramic surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for induction cooktops. Rinse with a clean, damp cloth and dry thoroughly.
- **Control Panel:** Wipe the feather touch control panel with a soft, dry cloth. Do not use excessive moisture.
- **Ventilation Openings:** Ensure the ventilation openings on the underside and sides of the cooktop are free from dust and debris. Use a soft brush or vacuum cleaner to clear them.
- **Do Not Immerse:** Never immerse the cooktop in water or any other liquid.
- **Avoid Abrasives:** Do not use abrasive pads, harsh chemicals, or steel wool, as these can scratch or damage the surface.



Image: An icon symbolizing easy maintenance, depicting a cleaning brush, indicating the cooktop's simple cleaning process.

## TROUBLESHOOTING

If you encounter issues with your Prestige Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; loose plug; power outage.	Check power cord connection; ensure power outlet is functional; check household circuit breaker.
Cooktop turns on but does not heat.	Incompatible cookware; no cookware detected; cookware not centered.	Use induction-compatible cookware; ensure cookware is placed centrally on the cooking zone.

Problem	Possible Cause	Solution
---------	----------------	----------

Error code displayed.	Specific malfunction or condition (e.g., overheating, voltage issue).	Refer to the specific error code in the full user manual (if available) or contact customer support. Try resetting by unplugging for a few minutes.
Unusual noise during operation.	Normal fan operation; resonance from cookware.	A slight humming sound from the fan is normal. Some cookware may produce a faint buzzing sound due to induction. This is generally not a fault.

If the problem persists after attempting these solutions, please contact Prestige customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Prestige
Model Number	PIC 1.0 V2
Power (Wattage)	1900 Watts
Operating Voltage	220-240 Volts
Heating Elements	1
Control Type	Touch (Feather Touch Buttons)
Burner Type	Induction
Installation Type	Counter-Top
Color	Black
Heater Surface Material	Stainless Steel (Note: The cooking surface is typically glass-ceramic, while internal components or trim might be stainless steel.)
Item Dimensions (D x W x H)	43D x 35W x 12H Centimeters
Item Weight	3.17 Kilograms
Included Components	Induction Cooktop, Instruction Manual, Warranty Card

## WARRANTY AND SUPPORT

Your Prestige PIC 1.0 V2 Induction Cooktop comes with a **1-year warranty** on the product from the date of purchase. For warranty claims, technical assistance, or any product-related inquiries, please contact Prestige customer service:

**Manufacturer:** TTK PRESTIGE LIMITED

**Contact Number:** 1800-123-334411

**Address:** NO. 110/5, ARUNA ARCADE, 1st FLOOR, LALBAGH ROAD, SUDHAMANAGAR, NEAR URVASHI THEATRE, BANGALORE - 560027

Please retain your purchase receipt and warranty card for proof of purchase.

© 2026 Prestige. All rights reserved.