

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Prestige](#) /

› [Prestige POTG 19 PCR 19 Liters Oven Toaster Grill User Manual](#)

Prestige POTG 19 PCR

Prestige POTG 19 PCR 19 Liters Oven Toaster Grill User Manual

Model: POTG 19 PCR

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Prestige POTG 19 PCR 19 Liters Oven Toaster Grill. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation around the appliance.
- Unplug from outlet when not in use and before cleaning.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Oven Toaster Grill:

- Main Unit with Tempered Glass Door
- Temperature Control Knob
- Function Selector Knob
- Timer Knob

- Baking Tray
- Grill Rack
- Crumb Tray
- Rotisserie Rod and Forks (for models with rotisserie)
- Tray Handle



Figure 1: Front view of the Prestige POTG 19 PCR Oven Toaster Grill with the door closed, showing the main unit and control panel.



Figure 2: Interior view of the Prestige POTG 19 PCR Oven Toaster Grill with the door open, displaying the baking tray, grill rack, and crumb



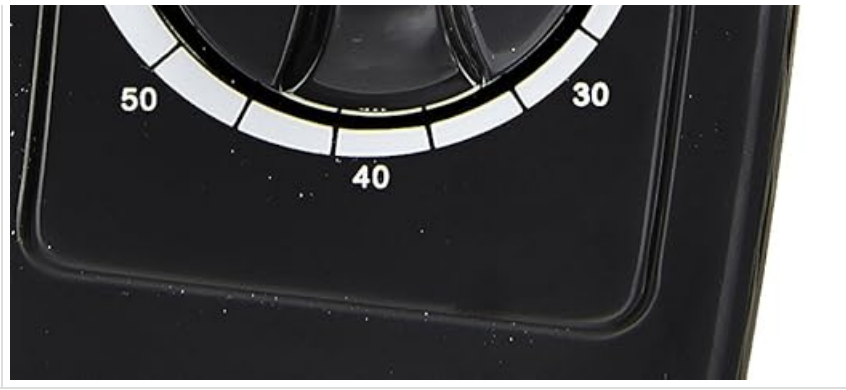


Figure 3: Close-up of the control panel featuring the Temperature, Selector, and Timer knobs.

SETUP

1. Unpack the appliance and all accessories. Remove any packaging materials.
2. Place the OTG on a flat, stable, and heat-resistant surface, ensuring adequate clearance (at least 10 cm) from walls and other appliances for proper ventilation.
3. Clean the interior and accessories with a damp cloth before first use.
4. Insert the crumb tray at the bottom of the oven.
5. Plug the power cord into a suitable electrical outlet (230V).
6. Before first use, operate the oven empty for approximately 15 minutes at maximum temperature (250°C) with the function selector set to both top and bottom heating elements. This will burn off any manufacturing residues and odors. Some smoke and odor are normal during this initial operation.

OPERATING INSTRUCTIONS

Control Panel Overview

- **Temperature Control Knob:** Adjusts the oven temperature from 100°C to 250°C.
- **Function Selector Knob:** Selects the heating elements to be used (top, bottom, or both).
- **Timer Knob:** Sets the cooking time up to 60 minutes. The oven will turn off automatically when the timer reaches "OFF".

General Operation

1. **Preheating:** For best results, preheat the oven for 10-15 minutes at the desired temperature before placing food inside.
2. **Place Food:** Carefully place food on the baking tray or grill rack. Use the tray handle to insert and remove hot trays.
3. **Set Temperature:** Turn the Temperature Control Knob to the desired temperature.
4. **Select Function:** Turn the Function Selector Knob to choose the appropriate heating mode (e.g., top heat for grilling, bottom heat for baking, both for general cooking).
5. **Set Timer:** Turn the Timer Knob to the desired cooking time. The oven will start operating. The indicator light will illuminate.
6. **Monitoring:** Monitor food through the tempered glass door.
7. **Completion:** When the timer reaches "OFF", a bell will ring, and the oven will switch off. If cooking finishes before the set time, turn the Timer Knob manually to "OFF".
8. **Removal:** Carefully remove cooked food using oven mitts and the tray handle.

Specific Cooking Modes

- **Baking:** Use both top and bottom heating elements. Place food on the baking tray.
- **Grilling:** Use the top heating element. Place food on the grill rack.
- **Toasting:** Use both top and bottom heating elements. Place bread slices on the grill rack.
- **Rotisserie (if applicable):** Insert the rotisserie rod through the food, secure with forks. Place the rod into the rotisserie slots inside the oven. Select the rotisserie function on the selector knob.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. Always unplug the OTG and allow it to cool completely before cleaning.
2. Do not use abrasive cleaners or metal scouring pads, as they can damage surfaces.
3. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Ensure all residue is wiped away.
4. **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the appliance in water.
5. **Accessories:** Wash the baking tray, grill rack, crumb tray, and rotisserie accessories in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.
6. **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; Timer not set; Power outage.	Ensure plug is securely in outlet; Set the timer knob; Check household power supply.
Food not cooking evenly.	Incorrect temperature/function setting; Food placed too close to heating elements.	Adjust temperature and function; Use appropriate rack position; Rotate food halfway through cooking.
Excessive smoke during operation.	Food residue or grease buildup; First-time use (normal).	Clean the interior and crumb tray thoroughly; Initial smoke is normal, ensure ventilation.
Timer bell does not ring.	Timer mechanism issue.	Contact customer support if the timer function is otherwise working but the bell is not.

SPECIFICATIONS

- **Model:** POTG 19 PCR
- **Capacity:** 19 Liters
- **Color:** Black
- **Product Dimensions:** 50D x 36W x 34H Centimeters
- **Control Type:** Knob
- **Special Features:** Temperature Control, Timer
- **Door Style:** Dropdown Door
- **Finish Type:** Stainless Steel

- **Door Material:** Tempered Glass
- **Power Source:** Electric
- **Temperature Range:** 100-250 Degrees Celsius
- **Item Weight:** 6 kg
- **Voltage:** 230V
- **Wattage:** 1380W

WARRANTY AND CUSTOMER SUPPORT

Your Prestige POTG 19 PCR Oven Toaster Grill comes with a **1-year warranty** from the date of purchase. For service, support, or warranty claims, please contact Prestige customer care:

- **Customer Care:** 080-46824000
- **Email:** Customercare@ttkprestige.com
- **Phone (National Service Manager):** 1800-123-334411
- **Registered Office:** TTK PRESTIGE LIMITED, PLOT NO. 38, SIPCOT INDUSTRIAL COMPLEX, HOSUR- 635126, INDIA.