

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio AE1200WH Series Digital Watch User Manual](#)

Casio AE1200WH-1A

Casio AE1200WH Series Digital Watch User Manual

Model: AE1200WH-1A

Brand: Casio

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Casio AE1200WH Series Digital Watch, model AE1200WH-1A. Designed for durability and functionality, this timepiece offers a range of features including world time, multiple alarms, stopwatch, countdown timer, and water resistance.



Front view of the Casio AE1200WH-1A Digital Watch, showcasing its digital display, world map, and various function labels.

KEY FEATURES

- **Dual Analog-Digital Display with World Map:** Combines a sleek analog display with a versatile digital interface, including a world map for easy global time tracking across 31 time zones and 48 cities.
- **Bright LED Light with Afterglow:** Features a selectable illumination duration and amber afterglow, making it effortless to read the display in low-light conditions.
- **Advanced Stopwatch & Countdown Timer:** Track time with precision using the 1/100-second stopwatch and a customizable countdown timer with a range of 1 second to 24 hours.
- **5 Daily Alarms & Mute Function:** Stay organized with up to five alarms and an hourly chime, or switch to silent mode with the convenient button tone on/off feature.
- **Durable 100M Water Resistance:** Designed for water activities, it's perfect for swimming and snorkeling,

offering reliability for depths up to 100 meters (330 feet).

- **10-Year Battery Life & Full Auto-Calendar:** Powered by a long-lasting CR2025 battery and equipped with a calendar programmed until 2099, ensuring hassle-free functionality for years.



An infographic illustrating the watch's features: LED Light, 5 Daily Alarms, 100-meter Water Resistance, and 1/100 second Stopwatch.

SETUP

Setting the Time and Date

1. In Timekeeping Mode, press the **ADJUST** button (top left) until the seconds begin to flash. This indicates the setting mode.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → DST (Daylight Saving Time) → Hour → Minute → Year → Month → Day.
3. Use the **SEARCH** button (top right) to increase the flashing value or the **LIGHT** button (bottom right) to decrease it. For seconds, pressing **SEARCH** will reset them to 00.
4. Once all settings are adjusted, press the **ADJUST** button again to exit the setting mode.

Selecting 12/24-Hour Format

In Timekeeping Mode, press the **SEARCH** button to toggle between 12-hour and 24-hour time formats.

OPERATING INSTRUCTIONS

World Time Mode

The watch can display the current time in 48 cities (31 time zones) around the world. To access World Time Mode, press the **MODE** button from Timekeeping Mode until "WORLD TIME" appears on the display.

- Use the **SEARCH** button to scroll forward through city codes.
- Use the **LIGHT** button to scroll backward through city codes.
- The small analog display will show the time for the currently selected World Time city.



The Casio AE1200WH-1A watch worn on a wrist, demonstrating its utility for travelers with a world map in the background.

Alarms

The watch features 5 independent daily alarms and an hourly time signal. To set an alarm:

1. From Timekeeping Mode, press **MODE** until "ALARM" appears.
2. Use **SEARCH** to cycle through alarms (AL1 to AL5) and the hourly time signal (SIG).
3. To set a specific alarm, press **ADJUST** while the desired alarm is displayed. The hour digits will flash.
4. Use **SEARCH** and **LIGHT** to set the hour and minute.
5. Press **ADJUST** to save the alarm setting.
6. To turn an alarm or hourly time signal on/off, navigate to it in Alarm Mode and press **SEARCH**.

Stopwatch

The stopwatch measures elapsed time, split times, and two finishes. It has a 1/100-second resolution for the first hour and 1-second resolution thereafter, up to 24 hours.

1. From Timekeeping Mode, press **MODE** until "STOPWATCH" appears.
2. Press **SEARCH** to start/stop the stopwatch.
3. Press **ADJUST** to reset the stopwatch to zero when it is stopped.
4. While the stopwatch is running, press **ADJUST** to record a split time. Press **ADJUST** again to release the split and return to elapsed time.

Countdown Timer

The countdown timer can be set for a period from 1 second to 24 hours. An alarm sounds when the countdown reaches zero.

1. From Timekeeping Mode, press **MODE** until "TIMER" appears.
2. Press **ADJUST** to enter setting mode. The hour digits will flash.
3. Use **SEARCH** and **LIGHT** to set the desired countdown time.
4. Press **ADJUST** to save the setting.
5. Press **SEARCH** to start/stop the countdown.
6. Press **ADJUST** to reset the timer to its starting value when it is stopped.

LED Light

Press the **LIGHT** button (top right) to illuminate the display. The illumination duration can be set to 1.5 seconds or 3 seconds via the watch's settings menu (refer to the full user manual for detailed light duration setting instructions).



The Casio AE1200WH-1A watch resting on a vintage map, emphasizing its world time functionality.

MAINTENANCE

Water Resistance (100M)

Your Casio AE1200WH-1A watch is rated for 100-meter water resistance, making it suitable for swimming, showering, and snorkeling. It is important to note the following:

- Do not operate buttons while the watch is submerged in water or wet.
- Avoid exposing the watch to hot water or steam, as this can compromise the water resistance seals.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.

Battery Life

The watch is equipped with a CR2025 battery designed to last approximately 10 years under normal usage. When the display becomes dim or the light function weakens, it may indicate a low battery. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.



Official logo indicating the 10-year battery life feature of the watch.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Consider professional battery replacement.
- **Time is inaccurate:** Ensure the time and date settings are correct. If the watch consistently gains or loses time significantly, it may require servicing.
- **Buttons are unresponsive:** Ensure the watch is not in a mode that locks buttons. If the issue persists, the internal mechanism may require inspection.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to dry it yourself, as this can cause further damage.

SPECIFICATIONS

Feature	Detail
Model Number	AE-1200WH-1BVDF
Product Dimensions	2.28 x 4.41 x 3.78 inches; 4 ounces
Material	Resin
Water Resistance	100M (330 feet)
Battery Type	CR2025 (included)
Battery Life	Approx. 10 years
Calendar	Full Auto-calendar (to year 2099)
Time Zones	31 time zones (48 cities + coordinated universal time)
Alarms	5 daily alarms, hourly time signal
Stopwatch	1/100-second stopwatch (Measuring capacity: 23:59'59.99")
Countdown Timer	Measuring unit: 1 second; Countdown range: 24 hours
Light	LED backlight with Afterglow

OFFICIAL PRODUCT VIDEOS

Casio Men's AE1200WH-1A World Time Multifunction Watch Overview

Your browser does not support the video tag.

This video provides a concise overview of the Casio AE1200WH-1A World Time Multifunction Watch, demonstrating its key features

and design.

WARRANTY AND SUPPORT

Specific warranty details for the Casio AE1200WH-1A watch are not provided in this document. Please refer to the warranty card included with your purchase or visit the official Casio website for detailed warranty information and support options.

For further assistance, you may consult the official user manual PDF available online:

[Download Official User Manual \(PDF\)](#)