

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ZXYEL](#) /

› Zyxel WRE2205 Wireless Range Extender User Manual

ZYXEL WRE2205-EU0101F

Zyxel WRE2205 Wireless Range Extender User Manual

Model: WRE2205-EU0101F

1. INTRODUCTION

This user manual provides detailed instructions for the installation, operation, and maintenance of your Zyxel WRE2205 Wireless Range Extender. Please read this manual thoroughly before using the device to ensure proper setup and optimal performance.

The Zyxel WRE2205 is designed to extend the coverage of your existing wireless network, eliminating Wi-Fi dead zones and providing reliable connectivity throughout your home or office. It supports 802.11b/g/n wireless standards and operates on the 2.4 GHz frequency band, offering data transfer rates up to 300 Mbps.

2. PACKAGE CONTENTS

Before proceeding with the installation, please verify that all items are present in the package:

- Zyxel WRE2205 Wireless Range Extender
- Quick Start Guide
- Ethernet Cable (optional, may not be included in all packages)

3. PHYSICAL OVERVIEW

Familiarize yourself with the various components and indicators of the Zyxel WRE2205.



Figure 3.1: Angled view of the Zyxel WRE2205, highlighting the front panel with status LEDs and the WPS button, and the integrated power plug on the side.

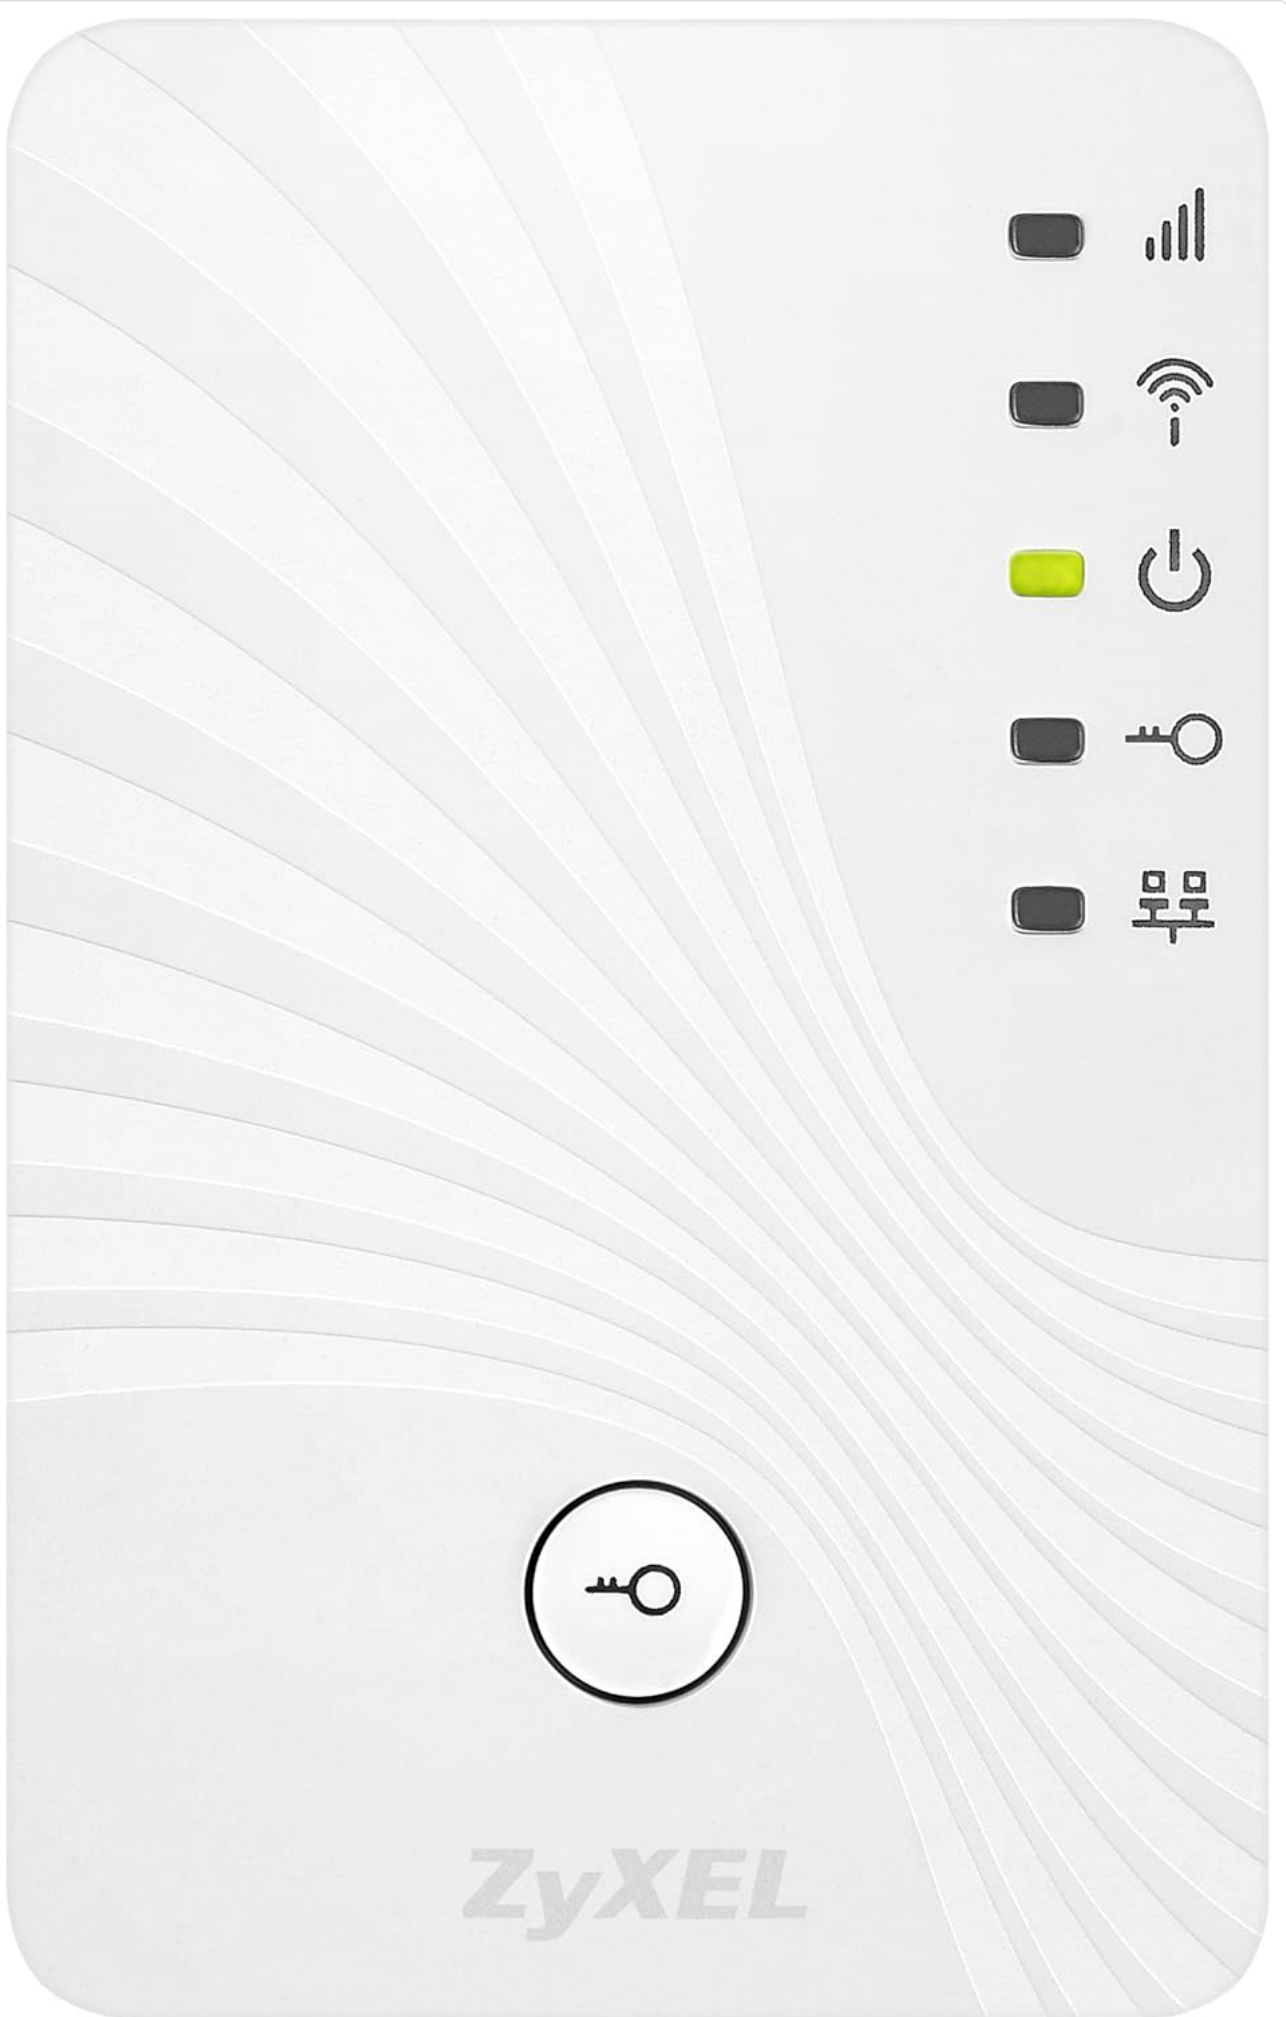


Figure 3.2: Front view of the Zyxel WRE2205, detailing the LED indicators for signal strength, power, WPS, and LAN activity,

along with the WPS button.



Figure 3.3: Bottom view of the Zyxel WRE2205, revealing the Ethernet port for wired connections.





Figure 3.4: Top view of the Zyxel WRE2205, displaying the integrated power switch for easy on/off control.

3.1. LED Indicators

LED Name	Status	Description
Power	Solid Green	Device is powered on.
	Off	Device is powered off.
Signal Strength	Green (3 bars)	Excellent signal strength from the root AP/router.
	Yellow (2 bars)	Good signal strength.
	Red (1 bar)	Weak signal strength. Consider relocating the extender.
	Off	No signal or not connected to a wireless network.
WPS	Flashing Green	WPS pairing in progress.
	Solid Green	WPS connection successful.
	Off	WPS not active or failed.
LAN	Solid Green	Ethernet cable connected.
	Flashing Green	Data activity on the LAN port.
	Off	No Ethernet cable connected or no activity.

4. SETUP AND INSTALLATION

The Zyxel WRE2205 can be set up using two primary methods: WPS (Wi-Fi Protected Setup) or through a web browser.

4.1. Setup using WPS (Recommended)

- Power On:** Plug the WRE2205 into a power outlet near your existing wireless router/access point. Ensure the Power LED turns solid green.
- Activate WPS on Router:** Press the WPS button on your wireless router/access point. Refer to your router's manual for the exact location and procedure.
- Activate WPS on Extender:** Within two minutes, press the WPS button on the front panel of the WRE2205. The WPS LED on the extender will start flashing green.
- Wait for Connection:** The WPS LED on the WRE2205 will turn solid green once the connection is successfully established. The Signal Strength LEDs will also illuminate, indicating the quality of the connection.
- Relocate Extender:** Unplug the WRE2205 and move it to a location halfway between your router and the area

with poor Wi-Fi coverage. Plug it into a power outlet. Ensure at least two Signal Strength LEDs are green for optimal performance.

4.2. Setup using Web Browser

1. **Power On:** Plug the WRE2205 into a power outlet near your computer. Ensure the Power LED turns solid green.
2. **Connect to Extender:** Connect your computer to the WRE2205 either wirelessly or via an Ethernet cable.
 - **Wireless:** On your computer, search for available Wi-Fi networks and connect to the network named "Zyxel_WRE2205_XXXX" (where XXXX are the last four digits of the MAC address, found on the device label). No password is required initially.
 - **Wired:** Connect an Ethernet cable from your computer's LAN port to the LAN port on the bottom of the WRE2205.
3. **Access Web Interface:** Open a web browser (e.g., Chrome, Firefox, Edge) and type <http://zyxelsetup> or <http://192.168.1.1> into the address bar and press Enter.
4. **Login:** Enter the default username "admin" and password "1234" when prompted.
5. **Follow Setup Wizard:** The setup wizard will guide you through selecting your existing wireless network and entering its password.
6. **Apply Settings:** Save the settings and wait for the WRE2205 to restart.
7. **Relocate Extender:** Unplug the WRE2205 and move it to a location halfway between your router and the area with poor Wi-Fi coverage. Plug it into a power outlet. Ensure at least two Signal Strength LEDs are green for optimal performance.

5. OPERATING THE ZYXEL WRE2205

Once configured, the Zyxel WRE2205 operates automatically to extend your wireless network. Devices within its extended range will connect to it seamlessly.

5.1. Connecting Devices

Devices such as smartphones, tablets, laptops, and smart TVs can connect to the extended network. The network name (SSID) will typically be the same as your original network, or it may append "_EXT" depending on your configuration during setup.

- **Wireless Devices:** Search for available Wi-Fi networks on your device and select the extended network. Enter the network password (same as your original network's password).
- **Wired Devices:** For devices like desktop computers, gaming consoles, or smart TVs that require a wired connection, you can connect them to the Ethernet port on the bottom of the WRE2205 using an Ethernet cable. This provides network access through the extender.

5.2. Optimizing Performance

- **Placement:** The placement of the extender is crucial. Ensure it is placed within the existing Wi-Fi coverage of your main router, but also close enough to the area where you need extended coverage. The Signal Strength LEDs are your guide.
- **Interference:** Avoid placing the extender near devices that emit radio frequency interference, such as

microwave ovens, cordless phones, or large metal objects.

- **Firmware Updates:** Periodically check the Zyxel support website for firmware updates. Updating the firmware can improve performance, stability, and security.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your Zyxel WRE2205.

- **Cleaning:** Gently wipe the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the ventilation holes are not blocked. Proper airflow prevents overheating.
- **Restarting:** If you experience network issues, try restarting the extender by unplugging it from the power outlet for 10 seconds and then plugging it back in.
- **Factory Reset:** In case of persistent issues or if you forget your login credentials, you can perform a factory reset. Locate the reset pinhole button (usually on the bottom or side) and use a paperclip to press and hold it for 5-10 seconds until the LEDs flash. This will revert all settings to factory defaults.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Zyxel WRE2205.

Problem	Possible Cause	Solution
No Power LED	Device is not plugged in or power outlet is faulty.	Ensure the extender is securely plugged into a working power outlet. Check the power switch on top (Figure 3.4).
Weak Signal Strength LED (Red)	Extender is too far from the main router.	Relocate the extender closer to your main router until at least two Signal Strength LEDs turn green or yellow.
Cannot connect to the extended network	Incorrect Wi-Fi password or extender not configured correctly.	Verify the Wi-Fi password. Re-run the setup process (WPS or web browser). Ensure the extender is within range of your main router.
Internet access issues on connected devices	Problem with the main router or ISP connection.	Check if your main router has internet access. Restart your main router and then the extender.
Forgot web interface login password	Password changed from default.	Perform a factory reset (see Section 6. Maintenance) to revert to default credentials (admin/1234).

8. SPECIFICATIONS

Feature	Detail
Model Number	WRE2205-EU0101F
Wireless Standard	IEEE 802.11b/g/n
Frequency Band	2.4 GHz
Data Transfer Rate	Up to 300 Mbps
Ethernet Port	1 x 10/100 Mbps LAN port
Dimensions (L x W x H)	1.65 x 1.81 x 2.87 inches (42 x 46 x 73 mm)
Weight	3 ounces (85 grams)
Power Consumption	Not specified
Operating Temperature	Not specified

Note: Specifications are subject to change without notice.

9. WARRANTY AND SUPPORT

ZYXEL provides a limited warranty for this product. Please refer to the warranty card included in your package or visit the official ZYXEL website for detailed warranty terms and conditions.

For technical support, product registration, or to download the latest drivers and firmware, please visit the ZYXEL support website:

www.zyxel.com/support

When contacting support, please have your product model number (WRE2205-EU0101F) and serial number ready.

© 2023 ZYXEL Communications Corp. All rights reserved.

Zyxel and the Zyxel logo are trademarks of Zyxel Communications Corp. All other brands, product names, and trademarks are the property of their respective owners.