

## BLACK+DECKER ECH183

# BLACK+DECKER Multi-Saw Head ECH183 Circular Saw Attachment User Manual

Model: ECH183 | Brand: BLACK+DECKER

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your BLACK+DECKER Multi-Saw Head ECH183. This circular saw attachment is designed for use with the EVO183 multi-tool system, offering versatility for various cutting tasks. Please read this manual thoroughly before operation and retain it for future reference.

## Key Features

- **Rotation Speed:** 0-3,400 RPM for efficient cutting.
- **Blade Diameter:** 85mm, suitable for various materials.
- **Max Cutting Depth:** 21mm, allowing for precise cuts.
- **Compatibility:** Specifically designed for the EVO183 multi-tool system.

## SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or property damage. Keep this manual accessible for quick reference.

## General Safety Guidelines

- Wear appropriate personal protective equipment (PPE), including safety glasses, hearing protection, and gloves.
- Ensure your work area is clean, well-lit, and free from obstructions.
- Keep children and bystanders away from the operating area.

- Always disconnect the power source (remove battery pack) before making any adjustments, changing accessories, or performing maintenance.
- Securely clamp or brace your workpiece to prevent movement during cutting.
- Do not force the tool; allow the blade to cut at its own pace.
- Inspect the blade for damage or dullness before each use. Replace if necessary.

## SETUP

Proper setup ensures safe and effective operation of your circular saw attachment.

### Attaching the Circular Saw Head

1. Ensure the multi-tool power unit is switched off and the battery pack is removed.
2. Align the circular saw head with the multi-tool power unit.
3. Push the head firmly onto the power unit until it clicks securely into place.
4. Verify that the attachment is firmly seated and does not wobble.



Figure 1: The BLACK+DECKER multi-tool system with various interchangeable heads, illustrating how the circular saw attachment connects to the main power unit.

### Blade Installation and Adjustment

1. With the power unit off and battery removed, press the spindle lock button.
2. Use the provided wrench to loosen the blade retaining screw.
3. Carefully remove the old blade and install the new blade, ensuring the teeth are oriented correctly for cutting.
4. Tighten the blade retaining screw securely with the wrench while holding the spindle lock button.



Figure 2: A detailed view of the ECH183 circular saw attachment, highlighting the blade and its protective guard.

## Adjusting Cutting Depth

1. Loosen the depth adjustment lever.
2. Raise or lower the base plate to achieve the desired cutting depth.
3. Ensure the blade extends approximately 3mm below the workpiece for optimal cutting.
4. Tighten the depth adjustment lever firmly.

**BLACK&DECKER®**

**multi**evo™



Figure 3: Demonstrates how to adjust the cutting depth on the circular saw attachment for precise cuts.

## OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your circular saw attachment.

### Making a Cut

1. Ensure the workpiece is securely clamped.

2. Hold the multi-tool firmly with both hands.
3. Place the front edge of the base plate on the workpiece, ensuring the blade is not touching the material.
4. Start the tool and allow the blade to reach full speed before beginning the cut.
5. Slowly guide the saw through the workpiece, maintaining a steady, even pressure.
6. Once the cut is complete, release the trigger and allow the blade to stop completely before lifting the tool from the workpiece.



Figure 4: The circular saw attachment in action, demonstrating a straight cut on a wooden board.

# BLACK&DECKER®

## multi<sup>ev</sup>o™

マルチツール用  
丸ノコヘッド



[www.blackanddecker-japan.com](http://www.blackanddecker-japan.com)



ECH183

Figure 5: A different perspective of the circular saw cutting wood, illustrating the cutting process and material removal.

## Video Demonstration

Video 1: This video demonstrates the operation of a 5-inch circular saw, similar to the ECH183 attachment, showing how it cuts through wood. Note that the specific model shown in the video may vary slightly.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your circular saw attachment.

## Cleaning

- After each use, disconnect the power unit from the battery and clean the saw head.
- Use a soft brush or cloth to remove sawdust and debris from the blade, guard, and base plate.
- Do not use solvents or harsh chemicals, as these can damage plastic parts.

## Blade Care

- Regularly inspect the saw blade for sharpness and damage.
- A dull or damaged blade can cause kickback and reduce cutting efficiency. Replace blades as needed.
- Store blades in a dry, safe place to prevent rust and damage.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your circular saw attachment.

Problem	Possible Cause	Solution
Saw does not start.	Battery not charged or improperly inserted.	Ensure battery is fully charged and correctly inserted into the power unit.
Blade binds or cuts slowly.	Dull or damaged blade; incorrect cutting depth; workpiece not secured.	Replace blade; adjust cutting depth; secure workpiece firmly.
Excessive vibration.	Loose blade or attachment; damaged blade.	Check that the blade and attachment are securely fastened. Inspect and replace damaged blades.

## SPECIFICATIONS

Detailed technical specifications for the BLACK+DECKER Multi-Saw Head ECH183.

Feature	Detail
Brand	BLACK+DECKER
Model Number	ECH183
Product Type	Electric Circular Saw Attachment
Color	Black
Blade Material	Metal
Recommended Use	Wood
Power Source	Rechargeable (Cordless, requires EVO183 power unit)

Feature	Detail
Features	Electric
Included Components	None (attachment only)
Product Dimensions (L x W x H)	17.5 cm x 10 cm x 12.5 cm
Voltage	18 Volts (when used with compatible power unit)
Product Weight	0.7 Kilograms
Speed	3400 revolutions per minute
Number of Batteries	0 (requires separate battery pack from multi-tool system)
Blade Length	85 mm
Country of Origin	China

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the documentation included with your main EVO183 multi-tool system or visit the official BLACK+DECKER website. Keep your proof of purchase for warranty claims.

**Online Resources:** [www.blackanddecker.com](http://www.blackanddecker.com)