

Oliver Hemming H58S14W

Oliver Hemming H58S14W 6 cm Travel Alarm Clock User Manual

Model: H58S14W

1. INTRODUCTION

Thank you for purchasing the Oliver Hemming H58S14W 6 cm Travel Alarm Clock. This compact and stylish analog alarm clock is designed for convenience and reliability, featuring a crystal glass lens and a durable alloy casing. This manual provides essential information for proper setup, operation, and maintenance to ensure optimal performance and longevity of your clock.

2. SAFETY INFORMATION

- Keep the clock away from water and high humidity to prevent damage.
- Avoid exposing the clock to extreme temperatures or direct sunlight for prolonged periods.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel.
- Keep batteries out of reach of children. Dispose of used batteries properly according to local regulations.
- Use only the specified battery type.

3. PACKAGE CONTENTS

The package contains the following items:

- 1 x Oliver Hemming H58S14W 6 cm Travel Alarm Clock
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

The Oliver Hemming H58S14W is a compact analog alarm clock. Familiarize yourself with its components:



Figure 1: Front view of the Oliver Hemming H58S14W Travel Alarm Clock, showing its 2.36-inch width and height. The clock features a silver-colored alloy casing, a white dial with black hour markers, and red hour, minute, and alarm hands. The Oliver Hemming logo is visible on the dial.

Note: The back of the clock typically features controls for setting the time and alarm, and a battery compartment. Specific controls may vary slightly but generally include a time setting knob, an alarm setting knob, and an alarm ON/OFF switch.

5. SETUP

5.1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or unscrewing it (depending on the design).
3. Insert one (1) AA battery (not included) into the compartment, ensuring the positive (+) and negative (-) terminals match the indicators inside.
4. Replace the battery compartment cover securely.

5.2. Setting the Time

1. Locate the time setting knob on the back of the clock.

2. Rotate the knob in either direction to move the hour and minute hands until the correct time is displayed.
3. Ensure the time is set accurately, especially considering AM/PM if the clock has a 12-hour display with an alarm indicator.

5.3. Setting the Alarm

1. Locate the alarm setting knob on the back of the clock. This is usually a separate knob from the time setting knob.
2. Rotate the alarm setting knob to move the alarm hand to your desired alarm time.
3. Be precise when setting the alarm hand to ensure the alarm sounds at the correct time.

6. OPERATION

6.1. Turning the Alarm ON/OFF

- Locate the alarm ON/OFF switch or button on the back or side of the clock.
- To activate the alarm, slide the switch to the "ON" position (or press the button). A small indicator (often a colored dot) may appear.
- To deactivate the alarm, slide the switch to the "OFF" position (or press the button again).

6.2. Stopping the Alarm

When the alarm sounds, it will typically continue for a set duration or until you manually turn it off. To stop the alarm, slide the alarm ON/OFF switch to the "OFF" position.

7. MAINTENANCE

7.1. Cleaning

- Wipe the clock's surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or crystal glass lens.

7.2. Battery Replacement

When the clock starts to lose time or the alarm weakens, it is an indication that the battery needs to be replaced. Follow the "Battery Installation" steps (Section 5.1) to replace the old battery with a new AA battery.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Dead or incorrectly installed battery.	Check battery polarity. Replace with a fresh AA battery.
Alarm does not sound	Alarm is not set or is turned OFF. Battery is low.	Ensure alarm time is set correctly and the alarm switch is ON. Replace battery.
Clock loses or gains time	Low battery. Environmental factors.	Replace battery. Ensure clock is not exposed to extreme temperatures.

9. SPECIFICATIONS

Brand	Oliver Hemming
Model Number	H58S14W
Display Type	Analog
Color	Silver
Material	Chrome (Frame), Glass (Lens)
Product Dimensions	2.36"W x 2.36"H (6 cm x 6 cm)
Item Weight	4.8 ounces
Power Source	Battery Powered (AA battery, not included)
Special Feature	Alarm
Indoor/Outdoor Usage	Indoor

10. WARRANTY & SUPPORT

Oliver Hemming products are manufactured to high-quality standards. For specific warranty information or technical support, please refer to the documentation provided with your purchase or visit the official Oliver Hemming website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question