

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Foster](#) /

› [Foster 7316 000 Halogen Ceramic Glass Hob User Manual](#)

Foster 7316 000

Foster 7316 000 Halogen Ceramic Glass Hob User Manual

Model: 7316 000

INTRODUCTION

This manual provides essential information for the correct installation, operation, and maintenance of your Foster 7316 000 Halogen Ceramic Glass Hob. Please read these instructions carefully before using the appliance and retain them for future reference. Proper use and care will ensure optimal performance and longevity of your hob.

SAFETY INSTRUCTIONS

Observe the following safety precautions to prevent personal injury or damage to the appliance:

- Ensure the hob is installed by a qualified technician in accordance with local regulations and standards.
- Do not operate the hob if the ceramic glass surface is cracked or broken. Disconnect power immediately.
- Keep children away from the appliance during operation and while it is cooling down. The surface remains hot after use.
- Do not store flammable materials near the hob.
- Use only cookware with flat bases that are suitable for ceramic hobs.
- Avoid placing metallic objects such as knives, forks, spoons, and lids on the hob surface as they can become hot.
- Always turn off the cooking zones after use.
- Do not clean the hob with steam cleaners.
- Ensure adequate ventilation around the appliance.

INSTALLATION AND SETUP

Installation must be carried out by a qualified professional. Incorrect installation can lead to hazards and void the warranty.

Unpacking

Carefully remove the hob from its packaging. Inspect for any damage during transit. Report any damage to your supplier immediately.

Placement

The hob is designed for integrated installation into a countertop. Ensure the countertop material is heat-resistant. Maintain minimum distances from walls and adjacent furniture as specified in the installation diagram (refer to separate installation guide for detailed diagrams).

Electrical Connection

The appliance requires a 220-230V electrical supply. The electrical connection must comply with local wiring regulations. Ensure the appliance is properly earthed. The power cable should not be trapped or come into contact with hot parts of the appliance.

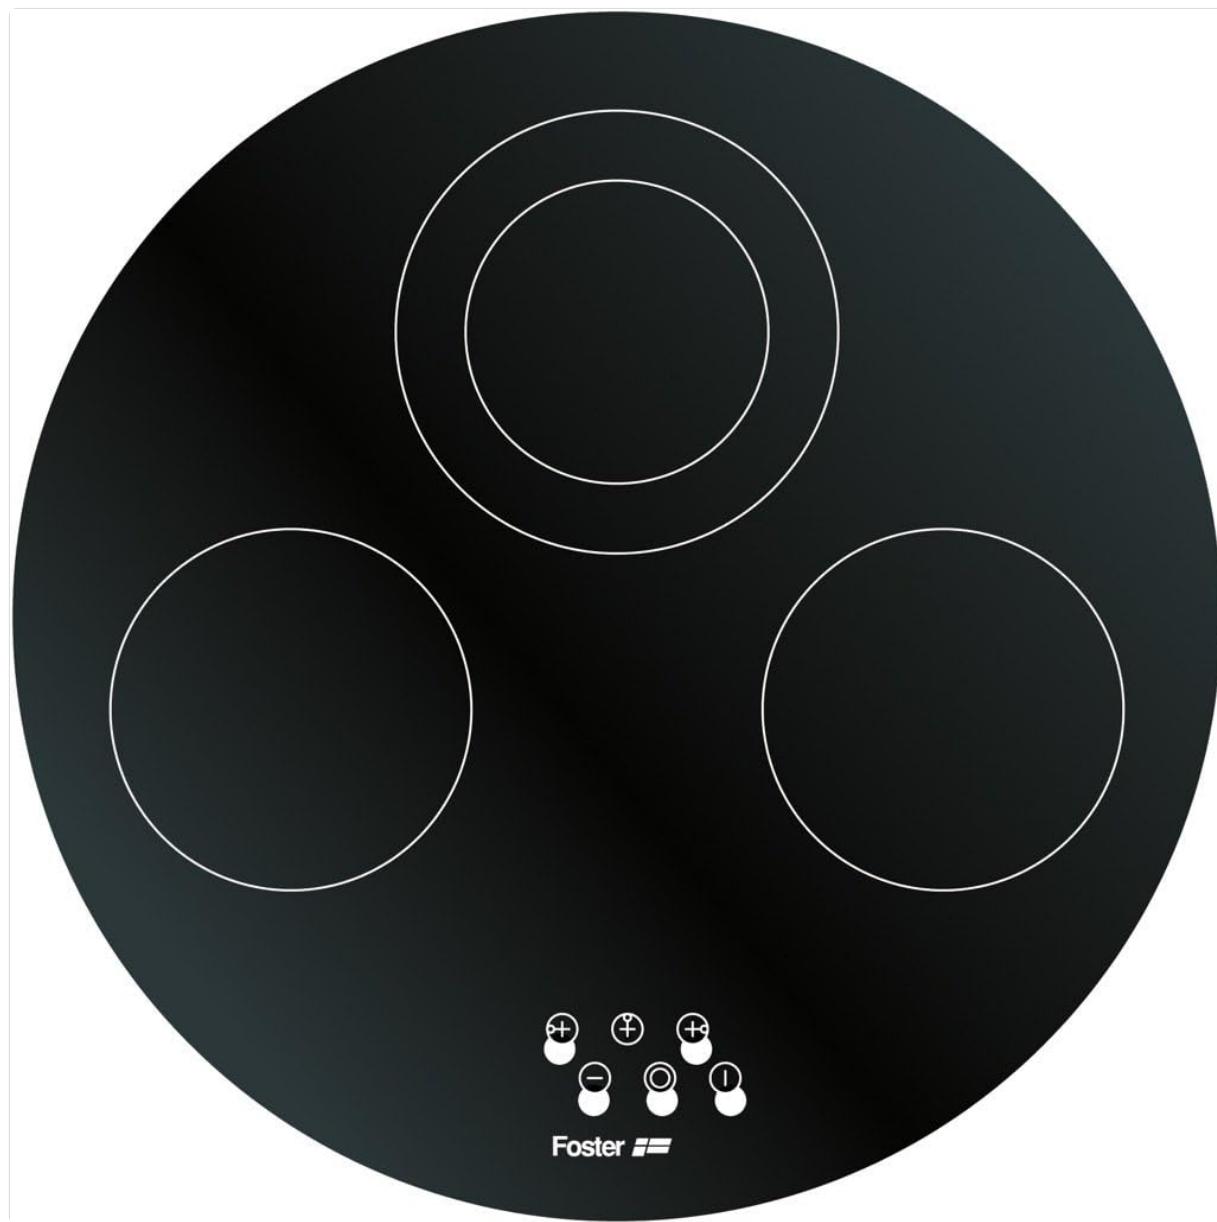


Image showing the Foster 7316 000 halogen ceramic glass hob with three cooking zones and touch controls. The hob is round and black, featuring three circular heating elements of varying sizes and a set of touch-sensitive controls at the bottom center.

OPERATING INSTRUCTIONS

Your Foster 7316 000 hob features touch controls for easy operation.

Turning On/Off

- To turn on the hob, touch and hold the main power symbol (usually a circle with a vertical line) for a few seconds.
- To turn off the hob, touch and hold the main power symbol again.

Selecting a Cooking Zone

Each cooking zone has its own dedicated control area. To activate a zone, touch the corresponding zone selection symbol.

Adjusting Heat Levels

Once a cooking zone is selected, use the '+' and '-' symbols to increase or decrease the heat intensity. The hob typically has multiple power levels, indicated by a display or light indicators.

Residual Heat Indicator

After use, the hob surface will remain hot. A residual heat indicator (often an 'H' symbol) will illuminate for the respective cooking zone until the temperature has dropped to a safe level.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will help preserve the appearance and functionality of your hob.

- Always ensure the hob is switched off and completely cool before cleaning.
- For light soiling, wipe the ceramic glass surface with a soft cloth and warm soapy water. Rinse and dry thoroughly.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for glass hobs. Follow the product instructions carefully.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals as they can scratch or damage the surface.
- Clean the control panel gently with a damp cloth. Ensure no moisture enters the control area.

TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; power cut; hob not properly connected.	Check household fuse/circuit breaker. Ensure hob is correctly plugged in or wired.
Cooking zone not heating.	Zone not selected; heat level too low; incorrect cookware.	Select the desired zone. Increase heat level. Use appropriate cookware with a flat base.
Controls are unresponsive.	Control panel is wet; lock function activated.	Wipe the control panel dry. Deactivate the child lock function (refer to operating instructions for specific symbol).

Problem	Possible Cause	Solution
Error code displayed.	Specific internal fault.	Note the error code and consult the full service manual or contact Foster customer support.

If the problem persists after attempting these solutions, contact a qualified service technician or Foster customer support.

TECHNICAL SPECIFICATIONS

Brand	Foster
Model	7316 000
Type	Halogen Ceramic Glass Hob (Integrated)
Control Type	Touch
Number of Heating Zones	3
Material	Ceramic Glass
Color	Black
Voltage	220-230V
Wattage	1200 watts (Total power, please verify with product label if different)
Product Dimensions (L x W x H)	52 x 52 x 4 cm
Product Weight	7.6 kg

WARRANTY AND SUPPORT

Your Foster 7316 000 Halogen Ceramic Glass Hob comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Foster customer support. Contact information can typically be found on the Foster official website or in the documentation provided with your appliance.

Always provide the model number (7316 000) and serial number (if applicable) when contacting support to ensure efficient service.