

[Manuals.plus](#) /

› [Demeyere](#) /

› Demeyere 120955 3-Door 1-Drawer Microwave Oven Cart Instruction Manual

Demeyere 120955

Demeyere 3-Door 1-Drawer Microwave Oven Cart

MODEL: 120955

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Demeyere 120955 3-Door 1-Drawer Microwave Oven Cart. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Product Overview

The Demeyere 120955 is a versatile kitchen unit designed for microwave storage, general kitchen storage, and as a food preparation surface. It features three doors and one drawer, offering ample storage solutions. The unit is constructed from wood with a melamine finish, ensuring durability and ease of cleaning.

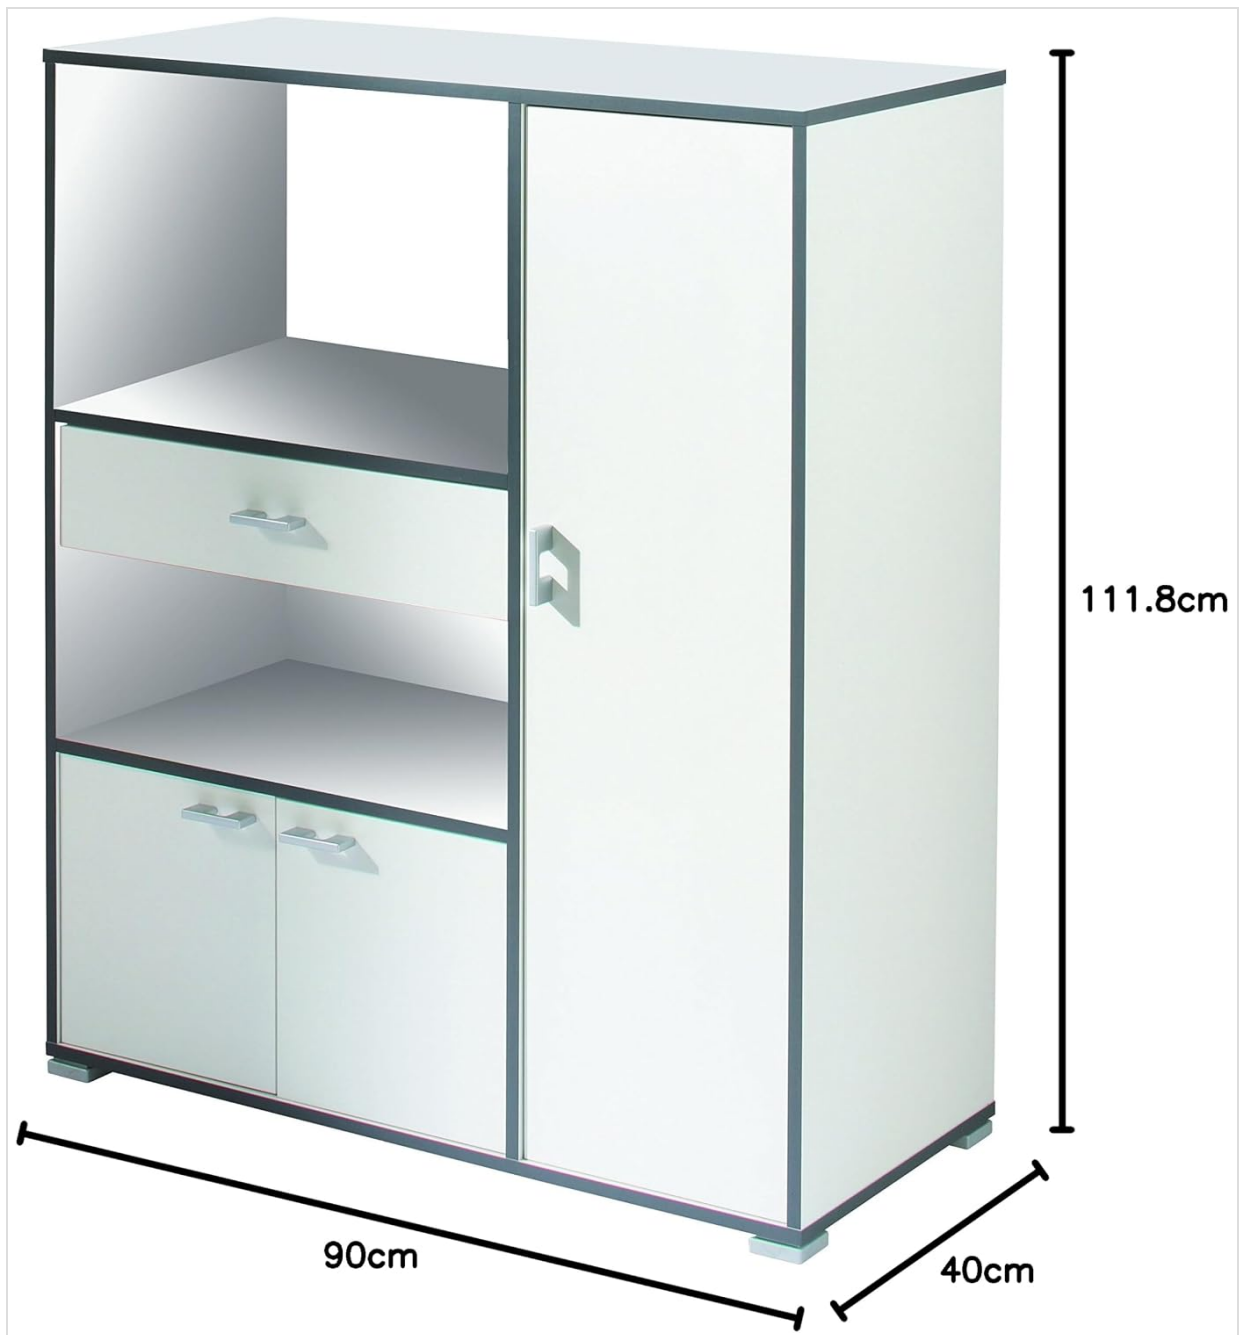


Image: The Demeyere 120955 Microwave Oven Cart, showing its three doors, one drawer, open shelf, and overall dimensions of 90cm width, 40cm depth, and 111.8cm height.

Safety Information

- **Read all instructions:** Ensure you understand all assembly steps before starting.
- **Use appropriate tools:** Only use tools recommended in the assembly guide.
- **Assemble on a soft surface:** To prevent scratching, assemble the unit on a clean, soft surface like a carpet.
- **Secure all fasteners:** Ensure all screws, bolts, and connectors are tightened securely. Periodically check and re-tighten if necessary.
- **Weight limits:** Do not exceed the recommended weight limits for shelves and the top surface. Overloading can cause instability and damage.
- **Placement:** Place the cart on a level, stable surface. Avoid placing it near heat sources or in direct sunlight.
- **Children and pets:** Keep small parts away from children and pets during assembly.

Package Contents

Before beginning assembly, verify that all components and hardware are present. If any parts are missing or damaged, contact customer support.

- Top Panel
- Bottom Panel
- Side Panels (Left and Right)
- Back Panel
- Shelf Panels
- Drawer Components (Front, Back, Sides, Bottom)
- Door Panels (x3)
- Hardware Pack (Screws, dowels, cam locks, hinges, drawer slides, handles, feet)

Assembly Instructions

Assembly is required for this unit. It is recommended to have two people for easier and safer assembly. You will need a screwdriver (Phillips head) and a hammer (optional, for dowels).

1. **Prepare the Base:** Attach the feet to the bottom panel using the provided screws.
2. **Assemble Side Panels:** Connect the side panels to the bottom panel using dowels and cam locks. Ensure the pre-drilled holes for shelves and drawer slides are facing the correct direction.
3. **Install Shelves:** Insert the fixed shelves into the designated slots or attach them using dowels and cam locks.
4. **Assemble Drawer:** Construct the drawer box by connecting the front, back, and side panels. Slide the drawer bottom into the grooves. Attach the drawer slides to the drawer sides and to the corresponding positions on the cart's side panels.
5. **Attach Top Panel:** Secure the top panel to the assembled structure using dowels and cam locks.
6. **Install Back Panel:** Carefully align and attach the back panel to the rear of the unit using small nails or screws.
7. **Mount Doors:** Attach hinges to the door panels and then mount the doors to the cart's frame. Adjust hinges as needed for proper door alignment.
8. **Attach Handles:** Secure the handles to the drawer front and door panels.
9. **Final Check:** Ensure all connections are tight and the unit is stable.

Operating (Usage)

- **Microwave Placement:** Place your microwave oven on the designated top shelf. Ensure it fits securely and does not overhang.
- **Storage:** Utilize the drawer for utensils or smaller items, and the three door-enclosed compartments for larger kitchen essentials, cookware, or pantry items.
- **Food Preparation:** The top surface can also serve as an additional workspace for food preparation.
- **Weight Distribution:** Distribute weight evenly across shelves and the top surface to maintain stability.

Maintenance and Care

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or ammonia-based products, as these can damage the melamine finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood material.
- **Hardware Check:** Periodically check all screws, bolts, and fittings to ensure they remain tight. Re-tighten if necessary to maintain structural integrity.
- **Avoid Excessive Moisture:** Do not expose the unit to excessive moisture or humidity, as this can cause swelling or warping of the wood.

Troubleshooting

- **Unit is wobbly:** Ensure the unit is on a level surface. Check all cam locks and screws for tightness. Re-tighten if loose.
- **Drawer does not slide smoothly:** Verify that the drawer slides are correctly installed and aligned. Ensure no obstructions are in the drawer tracks. Lubricate slides with a silicone-based spray if needed.
- **Doors are misaligned:** Adjust the hinges on the doors. Most hinges allow for minor adjustments in height, depth, and side-to-side movement.
- **Missing parts:** If you discover missing parts during assembly, refer to the 'Package Contents' section and contact Demeyere customer support with the model number and part description.

Specifications

Feature	Detail
Brand	Demeyere
Model Number	120955
Dimensions (D x W x H)	90D x 40B x 111.8H centimeters
Material	Wood (Melamine finish)
Color	Wood White (Espresso color mentioned in specifications is likely an error or alternative variant)
Number of Doors	3
Number of Drawers	1
Assembly Type	Floor Mounting, Freestanding
Assembly Required	Yes

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Demeyere website. Keep your proof of purchase for any warranty claims.

