

[manuals.plus](#) /

› [Candy](#) /

› [Candy 92130871 Washing Machine Replacement Belt Instruction Manual](#)

Candy 92130871

Candy 92130871 Washing Machine Replacement Belt Instruction Manual

Model: 92130871

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, maintenance, and troubleshooting of the Candy 92130871 washing machine replacement belt. Please read this manual thoroughly before attempting any installation or repair to ensure safe and effective operation.

2. SAFETY INFORMATION

- **Always disconnect the washing machine from the power supply** before attempting any installation, maintenance, or repair work. Failure to do so can result in electric shock or serious injury.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified technician.
- Keep children and pets away from the appliance during repair.
- Ensure all tools are in good condition and used correctly.

3. PRODUCT OVERVIEW

The Candy 92130871 is an authentic replacement drive belt designed for various Candy washing machine models. This belt is crucial for transmitting power from the motor to the drum, enabling the washing machine to operate correctly.



Image 1: The Candy 92130871 washing machine replacement belt. This image shows the black rubber belt, typically ribbed on one side for grip.

4. COMPATIBILITY

This replacement belt (Manufacturer Code: 92130871) is compatible with a wide range of Candy washing machine models. Please verify your washing machine's model number against the list below to ensure proper fitment.

Compatible Models include:

- CANDY AC16, ACTIVA50, ACTIVA51, ACTIVA60, ACTIVA61, ACTIVA64SLIM, ACTIVA66SL, ACTIVA6CI
- ALISE060, ALISE065, ALISE066, ALISE'160XT, ALISE190X, ALISE6190X0, ALISE'.610B, ALISE'65 ARG, ALISE'650, ALISE'696
- AQUAV.6, AQUAVIVA60, AQUAVIVA63, AQUAVIVA650, AQUAVIVA66
- C36ZXT, C532, C535T, C536T, C55XT (I), C564XT plata, C577T, C588XT, C58XT (I), C6077T, XT AQUAM, CM.608XT (I)
- C616XT (I), C625XT, C634XT, C634XT (CE), C634XT (NORD), C636XT, C647XT (I), C657XT (I)
- CB52T, CB52TCKD, CB53XTR, CB612XT, CB613TR, CB623XTTR HC, CB62T, CB62TR,

- CB633XTR, CB634XT, CB63TES, CB63TR, CB63TRCKD, CB63XTR
- CE520T, CE530, CE615, CE621T, CE623R, CE625TR, CE629T, CE637XT, CE650TR
- CG5444T, CG5544T, CG623T, CG644.3T, CG644T, CG654XT, CGAQ665XT
- CH630, CHIARA51XT, CHIARA540XTR, CHIARA552TR, CHIARA55XTR, CHIARA5XT, CHIARA5XTV, CHIARA642XTR, CHIARA65XTR, CHIARA65XT, CHIARA65XTV, CHIARA65XTR, CHIARA65X2XTR, CHIARA6XT
- CI50XTR, CI537T, CI57TR, CI589XT, CI60XTR, CI60XTR H/C, CI620TP, CI622T, CI624T, CI626XT, CI627T, CI637T, CI648XT, CI658XT
- CJ6514, CJ543T, CJ613XT, CJ643T, CJA52T
- CL66XT, CN50T, CN50T-04S, CN60T, CN63T, CN63T CI, CN63TCKD, CN63TRU-03S
- IPC 610, CR61, CS47XT (I), CSB640XTR, CSE640XTR, CSE615XT, CM.SE635XT, CSG624T, CSI615T, CSI635XTR, CSI635XTRSY, CSN62T, CSN62T-03S
- EXCL.S641XTR, EXCLUS.60, EXCLUS.6000, EXCLUS540XTR, EXCLUS65XTR
- HOL165XTR, HOL62, VACANZAS 6, HOLIDAY161, HOLIDAY60, HOLIDAY603, HOLIDAY61
- ICL60T, LADYC.623CKD, SEL.S643XTR, SELEC 0.631 XTR, SELECTA600, SELECTA60X, SELECTA61XXTR
- SL5000EXC, SL50EXCLUS., SLIM644AQUAV, SLIMMY508XT, SLIMMY634XT, SLIMMY655XT, SLIMMY6AQUAV, SLIMMYCB62XT, WM601.

5. INSTALLATION (SETUP)

Replacing a washing machine drive belt requires careful attention. Follow these general steps. Specific machine designs may vary, so refer to your washing machine's primary service manual if available.

1. Preparation:

- Disconnect the washing machine from the main power supply.
- Turn off the water supply to the machine.
- Pull the washing machine away from the wall to access the rear panel.

2. Access the Belt:

- Locate and remove the screws securing the rear access panel of the washing machine.
- Carefully remove the panel to expose the motor, drum pulley, and the old belt (if still present).

3. Remove the Old Belt:

- If the old belt is still partially attached, carefully pry it off the motor pulley and then the larger drum pulley. Note its orientation.

4. Install the New Belt:

- First, loop the new Candy 92130871 belt around the smaller motor pulley.
- Next, partially loop the belt around the larger drum pulley.
- While holding the belt firmly on the motor pulley and partially on the drum pulley, slowly rotate the drum pulley by hand. The belt should gradually roll onto the drum pulley until it is fully seated. Ensure the ribbed side of the belt (if applicable) faces the pulleys correctly.
- Check that the belt is centered on both pulleys and has proper tension. It should be snug but allow for a small amount of flex.

5. Reassemble:

- Replace the rear access panel and secure it with the screws.
- Push the washing machine back into its position.
- Reconnect the power supply and water supply.

6. Test:

- Run a short, empty wash cycle to ensure the belt operates smoothly and quietly.

6. MAINTENANCE

Regular inspection of the drive belt can help prevent future issues and extend the life of your washing machine.

- Periodic Inspection:** Every 1-2 years, or if you notice unusual noises or performance issues, inspect the belt for signs of wear, cracking, fraying, or stretching.
- Proper Tension:** Ensure the belt maintains proper tension. A loose belt can slip, causing the drum to not spin or spin intermittently. An overly tight belt can put undue stress on the motor and drum bearings.
- Cleanliness:** Keep the area around the motor and pulleys free from lint, debris, and moisture, which can affect belt performance and lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drum not spinning or spinning slowly	Broken, stretched, or slipped drive belt.	Inspect the belt. Replace if broken or severely worn. Re-seat if slipped.
Loud squealing or grinding noise during spin cycle	Worn or misaligned drive belt.	Check belt for wear and proper alignment on pulleys. Replace if worn.
Burning smell	Belt slipping due to improper tension or excessive load.	Check belt tension and ensure it's not overloaded. Replace if damaged from slipping.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance technician.

8. SPECIFICATIONS

- Brand:** Candy
- Model Number:** 92130871
- Product Type:** Washing Machine Replacement Belt
- Compatible Devices:** Washing Machine
- Package Dimensions:** 30 x 20 x 3 cm (approximately)
- Product Weight:** 100 g (approximately)

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or to purchase additional parts, please refer to the official Candy website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Official Candy Website: www.candy-group.com

© 2023 Candy. All rights reserved. This manual is for informational purposes only.