

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [New World](#) /

› [New World Cooker Knob Disc Spring C00016035 Instruction Manual](#)

### New World C00016035

# New World Cooker Knob Disc Spring C00016035 Instruction Manual

Model: C00016035

## INTRODUCTION

This manual provides essential information for the installation and maintenance of the New World Cooker Knob Disc Spring, model C00016035. This component is a genuine replacement part designed to restore proper function to your cooker's control knobs.

The disc spring plays a crucial role in providing the tactile feedback and secure positioning of the cooker knob, ensuring precise control over your appliance settings.

## COMPATIBILITY

The New World Cooker Knob Disc Spring C00016035 is compatible with a range of New World cooker models. Please verify your cooker's model number against the list below to ensure compatibility before installation.

### Compatible Models:

- APL0412MO, APL0422, APL0712MO, APL0722
- CKE13002BR, CKE13003, CKE13004BR, CKE13005, CKE13541, CKE13542BR, CKE13544BR, CKE13545, CKE13546BR, CKE13547, CKE13549, CKE13550BR, CKE13551, CKE13560GN, CKE13565BR, CKE13566, CKE13567BR, CKE13568, CKE13569GN, CKE13570BR, CKE13571
- CKG21010, CKG21017BR, CKG21018, CKG21019BK, CKG21034BR, CKG21059, CKG21064BR, CKG21065, CKG21072BR, CKG21073, CKG21076BR, CKG21077, CKG21078BR, CKG21079, CKG21080BR, CKG21081, CKG21092BR, CKG21093, CKG21099BR, CKG21100, CKG21101BR, CKG21102B, CKG21103BR, CKG21104, CKG21105BR, CKG21106, CKG21107BR, CKG21108, CKG21109BR, CKG21110, CKG2111BR, CKG21112, CKG21113BR, CKG21114, CKG21117BR, CKG21118, CKG21119, CKG21124BR, CKG21125BR, CKG21135, CKG21136BR, CKG21137, CKG21144, CKG21149GN, CKG21150GN, CKG21152BL, CKG21153GN, CKG21155BL, CKG21500BR, CKG21501, CKG21502, CKG21503, CKG21504BR, CKG21505, CKG21506BR, CKG21507, CKG21514BR, CKG21515, CKG21523, CKG21524BR, CKG21525, CKG21526BR, CKG21527, CKG21528BR, CKG21529, CKG21530BR, CKG21531, CKG21532BR, CKG21533, CKG21534BR, CKG21535, CKG21536BR, CKG21537, CKG21538BR, CKG21539, CKG21540BR,

CKG21541, CKG21543, CKG21550GN, CKG21551BR, CKG21552, CKG21553, CKG21554, CKG21555BR, CKG21557GN, CKG21558BR, CKG21559, CKG21560GN

- CKG32032BR, CKG32033, CKG32034BR, CKG32035, CKG32036BR, CKG32037, CKG32038BR, CKG32039, CKG32042BR, CKG32043, CKG32048BR, CKG32049, CKG32050BR, CKG32051, CKG32052BR, CKG32053, CKG32055BR, CKG32056, CKG32059BR, CKG32060, CKG32065BR, CKG32066, CKG32500BR, CKG32501, CKG32502BR, CKG32503, CKG32507, CKG32508BR, CKG32509, CKG32516BR, CKG32517, CKG32518BR, CKG32519, CKG32520BR, CKG32521, CKG32524GN, CKG32525BR, CKG32526

## SETUP AND INSTALLATION

---

Replacing a cooker knob disc spring requires careful handling. Always ensure the appliance is disconnected from the power supply before attempting any repairs.

1. **Safety First:** Disconnect your New World cooker from the main electrical supply. If it's a gas cooker, turn off the gas supply at the main valve.
2. **Remove the Knob:** Gently pull the faulty cooker knob directly off its spindle. It should slide off with moderate force.
3. **Access the Spring:** The old disc spring is typically located around the knob's spindle or within the knob itself. Carefully remove the old, damaged, or worn-out spring.
4. **Inspect the Area:** Clean any debris or residue from the knob's spindle and the surrounding area on the cooker panel.
5. **Install New Spring:** Place the new C00016035 disc spring onto the spindle. Ensure it sits correctly and securely. The spring is designed to provide tension and proper seating for the knob.
6. **Reattach the Knob:** Align the cooker knob with the spindle and push it firmly back into place. You should feel a slight resistance from the new spring, and the knob should sit flush and operate smoothly.
7. **Test Functionality:** Reconnect the power/gas supply to your cooker. Test the newly installed knob by rotating it through its settings to ensure it clicks into position correctly and provides the expected tactile feedback.



*Image: The New World Cooker Knob Disc Spring C00016035. This metal spring provides tension for the cooker's control knobs, ensuring they click into place and maintain their selected position. It is a coiled wire component, essential for the proper tactile function of the knob.*

## OPERATING PRINCIPLE

The disc spring C00016035 does not have an independent operational function; rather, it is an integral part of the cooker knob assembly. Its purpose is to provide the necessary tension and resistance for the knob to engage with the control mechanism. When the knob is rotated, the spring ensures a firm, positive click at each setting, preventing accidental changes and allowing for precise selection of cooking functions or temperatures.

## MAINTENANCE

The disc spring itself requires no specific maintenance. However, to ensure its longevity and the proper function of your cooker knobs:

- **Regular Cleaning:** Keep the area around the cooker knobs clean from food spills and grease, which can impede knob movement or corrode components.
- **Gentle Handling:** Avoid excessive force when operating or cleaning the knobs, as this can prematurely wear out the internal components, including the spring.
- **Inspection:** Periodically check the knobs for any looseness or lack of tactile feedback, which might indicate a worn spring or other internal issue.

## TROUBLESHOOTING

If you experience issues after replacing the disc spring, consider the following:

- **Knob is Loose or Falls Off:** Ensure the disc spring is correctly seated on the spindle and that the knob is fully pushed onto the spindle. Verify that the spindle itself is not damaged.
- **No Click or Resistance:** The spring might not be correctly positioned, or it could be defective. Re-check the installation steps.
- **Knob is Stiff:** Check for any obstructions or debris around the spindle or inside the knob that might be preventing smooth rotation. Ensure the spring is not bent or misaligned.
- **Incorrect Part:** Double-check that the C00016035 disc spring is the correct part for your specific New World cooker model. Refer to the compatibility list.

## SPECIFICATIONS

Attribute	Detail
Part Number	C00016035
Manufacturer	New World
Product Type	Cooker Knob Disc Spring
Number of Pieces	1
Batteries Required	No
Date First Available	8 Nov. 2013

## WARRANTY INFORMATION

Specific warranty details for this replacement part are not provided in the product information. Please refer to the original purchase documentation or contact the retailer for information regarding any applicable warranty.

## SUPPORT

For further assistance or technical support regarding the New World Cooker Knob Disc Spring C00016035, please contact the retailer from whom the part was purchased. For general cooker maintenance or repair, consult your New World cooker's main instruction manual or contact a qualified appliance technician.

 <b>newWORLD</b> 100cm Dual Fuel Range Cooker LOMOND100DFCRM MUNROS100DFIN  Instruction manual	<p><a href="#"><u>New World 100cm Dual Fuel Range Cooker LOMOND100DFCRM MUNROS100DFIN Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the New World 100cm Dual Fuel Range Cooker, models LOMOND100DFCRM and MUNROS100DFIN. Covers safety, installation, operation, maintenance, troubleshooting, and specifications.</p>
 <b>newWORLD</b> made for your world  CHEST FREEZER INSTRUCTION MANUAL MODEL NO: NW99CFV3	<p><a href="#"><u>New World NW99CFV3 Chest Freezer Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the New World NW99CFV3 Chest Freezer, covering safety, installation, operation, defrosting, cleaning, and product support.</p>
 <b>newWORLD</b> Instruction manual Built-in Double Ovens NWCMBUOI NWCMBUOB	<p><a href="#"><u>NewWorld Built-in Double Oven User Manual</u></a></p> <p>Comprehensive user manual for NewWorld Built-in Double Ovens (models NWCMBUOI, NWCMBUOB) covering safety, installation, functions, usage, care, maintenance, and troubleshooting. Includes technical specifications and guarantee information.</p>
 <b>newWORLD</b> Instruction manual NW 8KG COND WT TD 8kg Condenser Tumble Dryer	<p><a href="#"><u>New World NW 8KG COND WT TD 8kg Condenser Tumble Dryer: User Manual and Operation Guide</u></a></p> <p>Comprehensive user manual for the New World NW 8KG COND WT TD 8kg condenser tumble dryer, covering operation, programs, maintenance, safety, and energy efficiency.</p>
 <b>newWORLD</b> 90cm 3 Cavity Dual Fuel Range Cooker Cream NW92TDF3CR	<p><a href="#"><u>New World 90cm 3 Cavity Dual Fuel Range Cooker Cream (NW92TDF3CR) - Specifications and Features</u></a></p> <p>Detailed specifications and features for the New World 90cm 3 Cavity Dual Fuel Range Cooker in Cream, model NW92TDF3CR. Includes information on general features, hob, burners, cavities, dimensions, weight, energy rating, installation, safety, and warranty.</p>