

## Preethi Magic 750-Watt

# Preethi Magic 750-Watt Mixer Grinder User Manual

Model: Magic 750-Watt

## INTRODUCTION

Thank you for choosing the Preethi Magic 750-Watt Mixer Grinder. This appliance is designed for efficient and convenient grinding tasks in your kitchen. Please read this manual thoroughly before operating the mixer grinder to ensure safe and optimal performance. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the mixer grinder is placed on a stable, flat, and dry surface before operation.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Ensure the jar is properly locked in place before switching on the appliance. The safety switch prevents operation if the jar is not secured.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Unplug the appliance from the power outlet when not in use, before cleaning, or when changing accessories.
- Do not operate the mixer grinder with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Keep out of reach of children.
- Avoid overloading the mixer grinder. Refer to the operating instructions for recommended quantities.

## PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Preethi Magic 750-Watt Mixer Grinder Motor Unit
- 1 x 1.7 Litre Big Jar

- 1 x 1.2 Litre Big Jar with Flexilid
- 1 x 1.0 Litre Medium Jar
- 1 x 1.5 Litre Super Extractor
- 1 x 0.5 Litre Chutney Jar
- 1 x 0.3 Litre Chutney Jar with Flexilid
- 1 x Instruction Manual
- 1 x Warranty Card

## SETUP

---

1. Unpack all components and remove any packaging materials.
2. Place the mixer grinder motor unit on a clean, dry, and stable surface, away from water sources.
3. Before first use, wash all jars and lids thoroughly with mild soap and water. Rinse and dry completely.
4. Ensure the power cord is not damaged and is within reach of a suitable power outlet.

## OPERATING INSTRUCTIONS

---

### General Grinding

1. Select the appropriate jar for your ingredients. The mixer grinder includes 1.7L, 1.2L (with Flexilid), 1.0L, 0.5L, and 0.3L (with Flexilid) jars, and a 1.5L Super Extractor.
2. Place the ingredients into the chosen jar. Do not overfill; ensure the lid can close securely.
3. Secure the lid onto the jar.
4. Place the jar onto the motor unit and twist clockwise until it locks firmly into position. The safety switch will engage, allowing the appliance to operate.
5. Plug the mixer grinder into a 230-volt power outlet.
6. Turn the speed selector knob to the desired speed setting. Start with a lower speed and gradually increase if needed.
7. After grinding, turn the speed selector knob to "OFF" and unplug the appliance.
8. Wait for the blades to stop completely before removing the jar.
9. Twist the jar counter-clockwise to unlock and lift it from the motor unit.

### Using the Flexi Lid

The Flexi Lid allows for varying capacities within the same jar, providing flexibility for different quantities of ingredients. Ensure the Flexi Lid is securely fitted before operation.

### Using the Super Extractor

The 1.5 Litre Super Extractor is designed for extracting juices from fruits and vegetables. Follow the general operating instructions, ensuring the extractor attachment is correctly assembled before use.

### Chip n Salad Maker

The Chip n Salad Maker feature allows for slicing and shredding. Refer to the specific attachment instructions for assembly and safe operation. Always use the pusher provided to feed ingredients and keep hands clear of the blades.

## MAINTENANCE AND CLEANING

- **Always unplug the appliance before cleaning.**
- **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Jars and Lids:** Wash jars, lids, and blades immediately after use to prevent food from drying on. Use warm soapy water and a brush for thorough cleaning. Rinse well and dry completely before storing.
- **Blades:** Handle blades with extreme care as they are sharp.
- **Storage:** Store the mixer grinder and its accessories in a clean, dry place.

The mixer grinder features sealed oil-filled sintered bronze bushes for extended bush life, reducing the need for frequent maintenance in this area.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer grinder does not start.	Not plugged in. Jar not properly locked. Power outage.	Ensure the power cord is securely plugged into a working outlet. Twist the jar clockwise until it clicks into the locked position. Check your household's power supply.
Motor stops during operation.	Overload. Overheating.	Reduce the quantity of ingredients. Unplug and allow the motor to cool down for 15-20 minutes before restarting.
Ineffective grinding of small quantities.	Insufficient quantity for the jar size. Incorrect jar selection.	Ensure there is a minimum quantity of ingredients for effective grinding. Use the smaller chutney jars (0.5L or 0.3L) for very small quantities.

## SPECIFICATIONS

- **Model:** Preethi Magic 750-Watt Mixer Grinder
- **Power:** 750 Watts
- **Operating Voltage:** 230 Volts
- **Jars Included:** 1.7L, 1.2L (with Flexilid), 1.0L, 1.5L Super Extractor, 0.5L, 0.3L (with Flexilid)
- **Jar Material:** 100% Stainless Steel with flow breakers
- **Bush Type:** Sealed oil-filled sintered bronze bushes
- **Couplers:** High grade neoprene and delrin couplers
- **Safety Features:** Safety switch for jar lock
- **Item Weight:** Approximately 1 Kilogram (motor unit, without jars)

## WARRANTY AND SUPPORT

Your Preethi Magic 750-Watt Mixer Grinder comes with a **2-year warranty on the product** from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

Preethi also offers **life-long free service** for this product.

For customer service, support, or warranty inquiries, please contact:

Customer Service Number: [9940000005](tel:9940000005)

© 2024 Preethi. All rights reserved.