

## Casio AE-1200WHD-1AVEF

# Casio Collection Men's Watch AE-1200WHD-1AVEF Instruction Manual

Brand: **Casio** | Model: **AE-1200WHD-1AVEF**

## PRODUCT OVERVIEW

The Casio AE-1200WHD-1AVEF is a silver digital watch featuring a durable stainless steel bracelet. Its 42mm diameter case houses a precise quartz digital movement, protected by a mineral crystal. This timepiece is designed for reliability and functionality, offering various features for daily use and travel.

## Key Features:

- A light-emitting diode (LED) is used to illuminate the watch face.
- Local times can be called up quickly and easily for four different time zones.
- Displays the current time in major cities and specific areas around the world.



Front view of the Casio AE-1200WHD-1AVEF digital watch, showcasing its square silver-tone case, black digital display with world map, and stainless steel bracelet.

## SETUP

### Initial Time and Date Setting:

To set the time and date on your Casio AE-1200WHD-1AVEF watch, follow these steps:

1. In the Timekeeping Mode, press the **ADJUST** button (top-left) until the city code starts flashing. This indicates the setting mode.
2. Use the **SEARCH** button (top-right) and **LIGHT** button (bottom-right) to select your desired city code (time zone).
3. Press the **MODE** button (bottom-left) to cycle through the setting options: Daylight Saving Time (DST), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day.
4. Use the **SEARCH** and **LIGHT** buttons to change the flashing value for each setting.
5. Once all settings are adjusted, press the **ADJUST** button to exit the setting mode.

## Adjusting the Metal Bracelet:

The metal bracelet can be adjusted by removing or adding links to achieve a comfortable fit. This process typically requires specialized tools (a small pin pusher or jeweler's screwdriver) and careful handling to avoid scratching the watch or bracelet.

1. Identify the arrows on the inside of the bracelet links, which indicate the direction to push the pins out.
2. Place the bracelet on a soft surface or a watch band holder.
3. Using a pin pusher or a small, sturdy tool, push the pin in the direction of the arrow until it comes out.
4. Remove the desired number of links. Ensure an even number of links are removed from each side of the clasp for balance.
5. Reassemble the bracelet by inserting the pins in the opposite direction, ensuring they are fully seated.
6. For fine adjustments, the clasp often has micro-adjustment holes. Use a spring bar tool to move the spring bar to a different hole for a tighter or looser fit.

*If you are unsure about adjusting the bracelet, it is recommended to seek assistance from a professional jeweler or watch repair service.*

## OPERATING THE WATCH

---

### Navigating Modes:

Press the **MODE** button (bottom-left) to cycle through the different modes:

- **Timekeeping Mode:** Displays current time, date, and day of the week.
- **World Time Mode:** Shows the current time in various cities around the globe.
- **Alarm Mode:** Set daily alarms.
- **Stopwatch Mode:** Measure elapsed time.
- **Countdown Timer Mode:** Set a timer for a specific duration.

### World Time Feature:

In World Time Mode, use the **SEARCH** button (top-right) to scroll through different city codes. The world map display will highlight the selected time zone. The **LIGHT** button (bottom-right) can be used to quickly switch between standard time and Daylight Saving Time (DST) for the selected city.

### Using the Illuminator:

Press the **LIGHT** button (bottom-right) in any mode to illuminate the watch face for easy reading in low-light conditions. The LED light provides clear visibility of the digital display.

## MAINTENANCE

---

### Battery Life:

The Casio AE-1200WHD-1AVEF is equipped with a long-life battery, designed to last approximately 10 years under normal usage conditions. When the display becomes dim or functions start to malfunction, it may be an indication that the battery needs replacement. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.

### Water Resistance (WR100M):

This watch is water resistant up to 100 meters (10 bar), making it suitable for everyday use, showering, swimming, and snorkeling. It is not recommended for scuba diving or high-impact water sports. Avoid operating the buttons while the

watch is wet or submerged to prevent water intrusion.

## Cleaning:

To maintain the appearance and longevity of your watch, regularly wipe the case and band with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

## TROUBLESHOOTING

- Blank or Dim Display:** This usually indicates a low battery. Replace the battery as soon as possible.
- Incorrect Time/Date:** Re-enter the Timekeeping Mode and adjust the settings as described in the "Initial Time and Date Setting" section. Ensure the correct city code and DST setting are selected.
- Buttons Unresponsive:** Check if the watch is in a specific mode that locks button functions (e.g., some setting modes). If not, a low battery or internal malfunction might be the cause.
- Water Inside Display:** If condensation or water droplets appear inside the watch, stop using it immediately and take it to a professional watch repair service. This indicates a breach in water resistance.
- Alarm Not Sounding:** Ensure the alarm is set correctly and the alarm indicator (ALM) is displayed on the screen. Check the volume settings if applicable (though this model typically has a fixed alarm tone).

*For persistent issues not covered here, please refer to the detailed user manual provided with your watch or contact Casio customer support.*

## SPECIFICATIONS

<b>Model Number:</b>	AE-1200WHD-1AVEF
<b>Brand:</b>	Casio
<b>Department:</b>	Men
<b>Product Dimensions:</b>	0.49 x 1.66 x 1.77 inches
<b>Item Weight:</b>	1.76 ounces
<b>Batteries:</b>	1 Lithium Metal battery (included)
<b>Water Resistance:</b>	100 meters (WR100M)
<b>Crystal Material:</b>	Mineral Crystal
<b>First Available Date:</b>	September 25, 2012


## WARRANTY AND SUPPORT

Warranty information for your Casio AE-1200WHD-1AVEF watch is typically provided with your purchase documentation. Please refer to the warranty card or booklet included in the original packaging for specific terms and conditions.

For product support, troubleshooting assistance, or service inquiries, please visit the official Casio website or contact their customer service department directly. Contact information can usually be found on the Casio website or in your product's user manual.

*Note: No official seller videos were available for direct embedding in this manual. For additional visual guides, please check the manufacturer's official website.*

Documents - Casio – AE-1200WHD-1AVEF

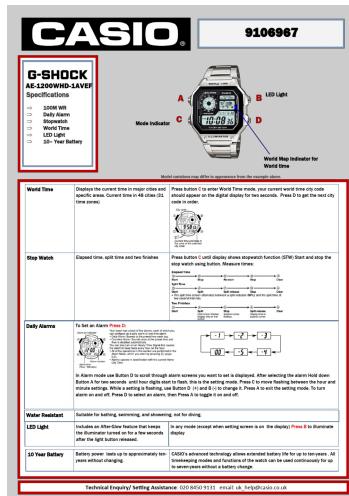


## [pdf] Specifications

Shani Reid 9106967 R D001 documents 4rgos it v1 static

9106967 AE-1200WHD-1AVEF Specifications 100M WR Daily Alarm Stopwatch

World Time LED Light 10 Year Battery A C Mode Indicator B LED Light D World Time  
World Map Indicator for World time Model variations may differ in appearance from  
the example above. Displays the current time in major c...

lang:en score:30 filesize: 407.15 K page\_count: 1 document date: 2016-08-26

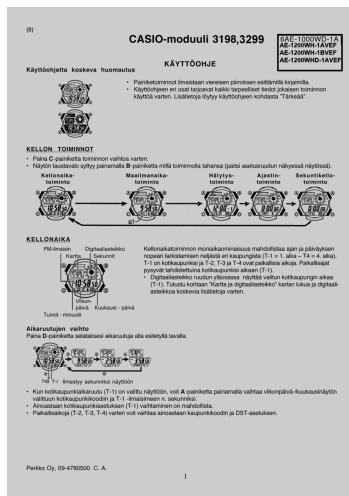

[pdf]

Untitled Casio 3198 3299 perkko fi simple file list Perkko Paina D painiketta käytössä olevan  
kotikaupunkiaikaruudun T 1 valintaan 2 Pidä A alas painettuna kunnes sekunnit alkavat vilkkuva mikä ilmai  
|||

AE-1200WH-1AVEF AE-1200WH-1BVEF **AE-1200WHD-1AVEF** 8 Kotikaupunkiajan ja pivysasetusten vaihto 1. Kyt D-painiketta kyttsi kotikaupunkiruudun T-1 valintaan. 2. Pid A-painiketta alas painettuna, kunnes sekunnit alkavat vilkkua, mik ilmaisee asetusruutua. 3. Paina C-painiketta siirtkseen vilkkuvaa ...

lang:fi score:22 filesize: 1.61 M page count: 8 document date: 2012-11-01