

Grundig SIS 8250

Grundig SIS 8250 Premium Steam Ironing Station User Manual

Model: SIS 8250 | Brand: Grundig

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Grundig SIS 8250 Premium Steam Ironing Station. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

Important Safety Instructions:

- Always ensure the appliance is connected to a grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- The soleplate and steam emitted are extremely hot. Avoid direct contact with skin.
- Never leave the iron unattended while it is switched on or connected to the power supply.
- Unplug the appliance from the power outlet before filling or emptying the water tank, and during cleaning or maintenance.
- Only use the appliance for its intended purpose of ironing garments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW

The Grundig SIS 8250 is a powerful steam ironing station designed for efficient garment care. It features a high-performance steam system and a durable ceramic soleplate.

Key Features:

- Professional steam performance with 100 g/min continuous steam output.

- Up to 4.5 bar steam pressure for effective wrinkle removal.
- Removable 1.7-liter XL water tank for extended ironing sessions.
- High-quality ceramic soleplate for smooth gliding.
- Fast heat-up time.
- Anti-calc function to prevent limescale buildup.
- Automatic shut-off for safety.
- Vertical steaming capability.
- Indicator light for operational status.

Components:



Figure 1: The Grundig SIS 8250 Premium Steam Ironing Station, showing the iron unit docked on its base with the transparent water tank visible. The iron features a black and silver design with a ceramic soleplate.



Figure 2: The Grundig SIS 8250 Steam Ironing Station positioned on an ironing board, ready for use. A stack of neatly folded, ironed clothes is visible next to the appliance, demonstrating its purpose in a home setting.



Figure 3: The iron component of the Grundig SIS 8250 emitting powerful steam over a variety of colorful fabrics, illustrating its steam performance and suitability for different garment types.



Figure 4: A close-up view of the ceramic soleplate of the Grundig SIS 8250 iron, highlighting its smooth surface and steam vents designed for efficient and even steam distribution.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials and ensure all components are present. Inspect the appliance for any signs of damage. Do not use if damaged.

3.2 Positioning the Ironing Station

Place the ironing station on a stable, heat-resistant surface, such as an ironing board designed for steam generators. Ensure there is adequate space around the unit for safe operation.

3.3 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Remove the 1.7-liter XL water tank from the base unit.
3. Fill the tank with clean tap water up to the 'MAX' indicator. Distilled or demineralized water is recommended in areas with hard water to prolong the appliance's life and prevent limescale buildup. Do not use perfumed water, water from tumble dryers, or chemically descaled water.
4. Replace the water tank securely into the base unit.

3.4 First Use Preparation

Before ironing valuable garments for the first time, it is recommended to iron an old piece of fabric to remove any manufacturing residues from the soleplate or steam system. This also helps to flush out any impurities.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heating Up

1. Plug the power cord into a suitable grounded electrical outlet.
2. Press the power button on the base unit. The indicator light will illuminate, indicating the appliance is heating up.
3. Wait for the iron to reach the selected temperature. The indicator light will change or turn off when ready, depending on the model. The fast heat-up feature ensures quick readiness.

4.2 Temperature Selection

Adjust the temperature dial on the iron according to the fabric type you are ironing. Always check the garment's care label. Start with lower temperatures for delicate fabrics and increase for tougher materials.

4.3 Steam Ironing

1. Once the iron has reached the desired temperature, press the steam trigger located on the iron handle to activate continuous steam.
2. For stubborn wrinkles, use the steam boost function (if available) by pressing the steam trigger multiple times or holding it down for a short burst of extra steam.
3. Move the iron smoothly over the fabric. The ceramic soleplate ensures excellent glide.

4.4 Vertical Steaming

The Grundig SIS 8250 supports vertical steaming for refreshing hanging garments, curtains, or delicate fabrics. Hold the iron vertically a few centimeters away from the fabric and press the steam trigger. Ensure the fabric is not in direct contact with the hot soleplate.

4.5 Automatic Shut-off

For safety and energy saving, the appliance is equipped with an automatic shut-off function. If the iron is left unattended for a certain period (e.g., 8 minutes vertically, 30 seconds horizontally), it will automatically switch off. To restart, simply move the iron or press the power button.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Grundig SIS 8250 Steam Ironing Station.

5.1 Cleaning the Soleplate

Allow the iron to cool completely. Clean the ceramic soleplate with a damp cloth and a non-abrasive liquid cleaner if necessary. Do not use metallic scouring pads or harsh chemicals, as these can damage the soleplate.

5.2 Descaling (Anti-Calc Function)

The appliance features an anti-calc function to reduce limescale buildup. However, regular descaling is still recommended, especially in hard water areas. Refer to the specific descaling instructions in your full product manual for detailed steps. Generally, this involves flushing the steam generator with clean water or a mild descaling solution.

5.3 Emptying and Storing the Water Tank

After each use, or before storing the appliance for an extended period, unplug the unit and allow it to cool. Remove the water tank and empty any remaining water. Store the appliance in a dry, safe place, ensuring the iron is securely docked on its base.

6. TROUBLESHOOTING

If you encounter issues with your Grundig SIS 8250, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty. Iron not hot enough. Steam button not pressed.	Fill the water tank. Wait for the iron to reach operating temperature. Press the steam trigger.
Water drips from the soleplate.	Iron temperature is too low for steam.	Increase the iron temperature setting. Wait for the iron to heat up sufficiently before using steam.
Iron does not heat up.	Appliance not plugged in. Power button not pressed. Automatic shut-off activated.	Check power connection. Press the power button. Move the iron to reactivate.
Limescale flakes on garments.	Limescale buildup in the steam generator.	Perform a descaling procedure as per the full manual. Use distilled water in hard water areas.

If the problem persists after trying these solutions, please contact Grundig customer support.

7. SPECIFICATIONS

Technical data for the Grundig SIS 8250 Premium Steam Ironing Station:

- **Model:** SIS 8250
- **Brand:** Grundig
- **Power:** 2400 Watt
- **Voltage:** 230 V
- **Steam Pressure:** Up to 4.5 bar
- **Continuous Steam Output:** 100 g/min
- **Water Tank Capacity:** 1.7 Liters (removable)
- **Soleplate Material:** Ceramic
- **Product Dimensions:** Approximately 36 x 28 x 46 cm
- **Item Weight:** 3.7 kg
- **Special Features:** Anti-calc function, Automatic shut-off, Continuous steam, Fast heat-up, Vertical steaming, Indicator light.

TEST RESULT

**Haus &
Garten
Test** 5.2012

www.hausgartentest.de

(1.4)
sehr gut

Grundig SIS 8250*

*baugleich zum getesteten Grundig SIS 7040

Dampfstoßmenge 1,0
Reinigung/Entkalken 1,0
Bedienerfreundlichkeit 1,3

Figure 5: A graphic displaying test results from 'Haus & Garten Test 5.2012', indicating a 'very good' rating (1.4) for the Grundig SIS 8250, with specific scores for steam output, cleaning/descaling, and user-friendliness.

8. WARRANTY AND SUPPORT

Grundig products are manufactured to high-quality standards and are covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service inquiries, please contact Grundig customer support. Keep your proof of purchase (receipt or invoice) readily available, as it will be required for any warranty claims.

You can find contact information for Grundig customer service on the official Grundig website or in the documentation provided with your appliance.



Figure 6: A QR code image labeled 'FILMCLIP' with the Grundig logo, which may link to additional product information or a video demonstration. Users can scan this code with a smartphone to access the content.