

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kikkerland](#) /

› [Kikkerland Retro Alarm Clock AC08-G User Manual](#)

## Kikkerland AC08-G

# Kikkerland Retro Alarm Clock (Model AC08-G) User Manual

*Your guide to setting up and using your Kikkerland Retro Alarm Clock.*

## INTRODUCTION

---

This manual provides instructions for the Kikkerland Retro Alarm Clock, model AC08-G. This battery-operated analog clock features a classic design, glow-in-the-dark hands, and a traditional alarm function. Please read this manual thoroughly before use to ensure proper operation and longevity of your device.



Image: Front view of the green Kikkerland Retro Alarm Clock, displaying the analog clock face with numbers and hands.

## PACKAGE CONTENTS

- 1 x Kikkerland Retro Alarm Clock (Model AC08-G)
- User Manual (this document)

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one (1) AA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

**Note:** Batteries are not included. Use a fresh AA alkaline battery for optimal performance.

### 2. Setting the Time

1. Locate the "TIME SET" knob on the back of the clock.
2. Rotate the "TIME SET" knob in either direction until the hour and minute hands display the correct current time.



Image: Rear view of the alarm clock, highlighting the time and alarm setting knobs.

### 3. Setting the Alarm

1. Locate the "ALARM SET" knob on the back of the clock.
2. Rotate the "ALARM SET" knob to set the desired alarm time. The small alarm hand on the clock face will move to indicate the set alarm time.

## OPERATING INSTRUCTIONS

---

### 1. Activating/Deactivating the Alarm

The alarm is controlled by a button located on the top of the clock.

- **To activate the alarm:** Press the button down until it clicks into place. The alarm will sound at the set time.
- **To deactivate the alarm:** Press the button down again. The button will pop up, indicating the alarm is off.



Image: A hand pressing the top button of the green alarm clock, demonstrating how to activate or deactivate the alarm.

## 2. Glow-in-the-Dark Feature

The clock hands are designed with a glow-in-the-dark material. For optimal visibility in low light conditions, expose the clock face to a bright light source for a period before use in the dark.

## MAINTENANCE

---

### Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

### Battery Replacement

When the clock's timekeeping becomes inaccurate or the alarm weakens, it is time to replace the battery. Follow the "Battery Installation" steps to replace the AA battery.

## TROUBLESHOOTING

---

### Common Issues and Solutions

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or low battery. Incorrect battery installation.	Replace with a fresh AA battery. Ensure correct polarity.
Alarm does not sound.	Alarm not activated. Alarm time not set correctly. Low battery.	Ensure the top alarm button is pressed down. Verify the alarm hand is set to the desired time. Replace battery.
Glow-in-the-dark feature is dim.	Insufficient light exposure.	Expose the clock face to a bright light source for a longer period.

## SPECIFICATIONS

---

### Product Details

- **Model:** AC08-G
- **Brand:** Kikkerland
- **Display Type:** Analog
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions:** 4.25" (Width) x 3.5" (Height) x 2.5" (Depth)
- **Material:** Plastic
- **Special Features:** Alarm, Glow-in-the-Dark Hands, Quartz Movement
- **Weight:** Approximately 4.8 ounces (0.3 lbs)

# DIMENSIONS

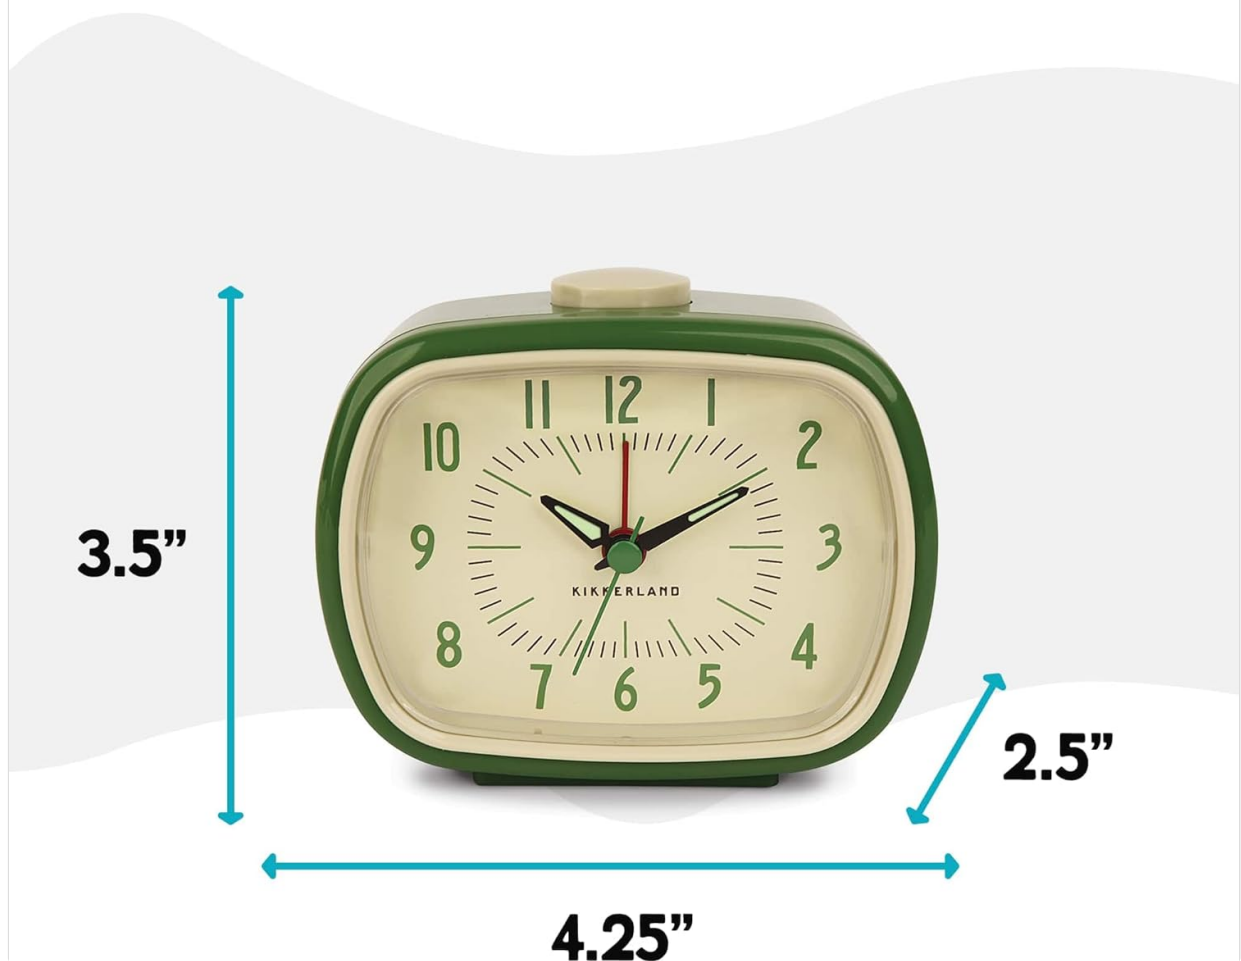


Image: Diagram illustrating the dimensions of the Kikkerland Retro Alarm Clock: 4.25 inches wide, 3.5 inches high, and 2.5 inches deep.

## WARRANTY AND SUPPORT

### Warranty Information

For information regarding product warranty, please refer to the product packaging or contact Kikkerland customer support directly.

### Customer Support

If you encounter any issues or have questions not covered in this manual, please visit the official Kikkerland website or contact their customer service department.

[Visit the Kikkerland Store on Amazon](#)