

[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland Glowing Moon Night Light Instruction Manual LP28

Kikkerland LP28

Kikkerland Glowing Moon Night Light

Model: LP28

INTRODUCTION

The Kikkerland Glowing Moon Night Light provides a soft, ambient glow, perfect for bedrooms, hallways, or any space requiring subtle illumination. Featuring a realistic 3D printed moon design, this plug-in night light includes a manual on/off switch for convenient control. It is designed for indoor use only.

Key Features:

- Realistic 3D printed moon design
- Manual on/off switch for easy operation
- Includes one 7-watt incandescent bulb
- Compact dimensions: approximately 7"D x 2.4"W x 4.7"H

SETUP

1. **Unpack:** Carefully remove the Kikkerland Glowing Moon Night Light from its packaging. Ensure all components, including the night light unit and the included 7-watt bulb, are present and undamaged.
2. **Insert Bulb:** Gently screw the included 7-watt incandescent bulb into the night light's socket. Do not overtighten.
3. **Plug In:** Locate a standard AC wall outlet in your desired indoor location. Plug the night light directly into the outlet. Ensure the night light is securely seated in the outlet.



Image: The Kikkerland Glowing Moon Night Light, featuring a detailed moon surface, plugged into a wall outlet and illuminated.

OPERATING INSTRUCTIONS

The Kikkerland Glowing Moon Night Light is designed for simple operation:

1. **Turn On:** Locate the manual on/off switch on the night light unit. Flip the switch to the 'ON' position to illuminate the moon.
2. **Turn Off:** To turn off the night light, flip the switch back to the 'OFF' position.

MAINTENANCE

- **Bulb Replacement:** If the bulb burns out, unplug the night light from the wall outlet. Allow the bulb to cool completely. Carefully unscrew the old bulb and replace it with a new 7-watt (or lower wattage) incandescent bulb with an E26 Medium base. Ensure the replacement bulb is suitable for night light use.
- **Cleaning:** Unplug the night light before cleaning. Wipe the surface of the night light with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.
- **Storage:** When not in use for extended periods, unplug the night light and store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Night light does not turn on.	No power to outlet, bulb is loose, or bulb is burnt out.	Check if the outlet is functional. Ensure the bulb is screwed in tightly. Replace the bulb if it is burnt out.
Light is too dim or too bright.	Bulb wattage is not ideal for desired brightness.	Replace the bulb with a lower wattage (for dimmer light) or a higher wattage (up to 7W for brighter light) E26 Medium base incandescent bulb.
Night light feels hot to the touch.	Normal operation for incandescent bulbs, or improper ventilation.	Incandescent bulbs generate heat. Ensure the night light is not covered or placed in an enclosed space. If excessive heat is observed or plastic melting occurs, discontinue use immediately and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	LP28
Product Dimensions	7"D x 2.4"W x 4.7"H
Item Weight	0.15 Pounds
Power Source	AC (Plug-in)
Light Source Type	Incandescent
Included Bulb Wattage	7 watts
Bulb Base	E26 Medium
Switch Type	Manual On/Off

Feature	Detail
Material Type	Plastic
Indoor/Outdoor Usage	Indoor Only
Water Resistance Level	Not Water Resistant

WARRANTY INFORMATION

This product is covered by the manufacturer’s standard warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the packaging or contact Kikkerland customer support directly. Keep your proof of purchase for warranty purposes.

SUPPORT

For further assistance, technical support, or inquiries regarding your Kikkerland Glowing Moon Night Light, please visit the official Kikkerland website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official online presence.

Kikkerland Official Website: [Visit Kikkerland Store on Amazon](#)

© 2024 Kikkerland. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

