

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SpaRoom](#) /

› [SpaRoom Aromamist Ultrasonic Essential Oil Diffuser User Manual](#)

**SpaRoom 852030004028**

# SpaRoom Aromamist Ultrasonic Essential Oil Diffuser User Manual

Model: 852030004028

## INTRODUCTION

---

The SpaRoom Aromamist Ultrasonic Essential Oil Diffuser disperses essential oils into the air using ultrasonic technology. It operates with a small amount of water and essential oil, providing continuous mist for up to 3 hours. The diffuser also features optional LED light settings, including blue, pink, or a revolving color display.

### Key Features:

- Ultrasonic elements produce a relaxing mist without heat or chemicals.
- Provides immediate aromatherapy with essential oils.
- Four color-changing LED light options for ambiance, or a no-light mode.
- Operates for up to 3 hours with 1/2 cup of tap water.

## PACKAGE CONTENTS

---

Please ensure all items are present in the package:

- SpaRoom Aromamist Ultrasonic Essential Oil Diffuser Unit
- Power Adapter
- Cleaning Brush



This image displays the power adapter and a small cleaning brush included with the SpaRoom Aromamist Diffuser. The white power adapter has a standard two-prong plug, and the cleaning brush is designed for maintaining the diffuser's reservoir.

## SETUP

---

1. **Placement:** Place the diffuser on a flat, stable surface away from direct sunlight, heat sources, and electronic devices.
2. **Open Lid:** Carefully remove the top lid of the diffuser.
3. **Fill Water Reservoir:** Fill the diffuser's water reservoir with approximately half a cup (about 120 ml) of clean tap or bottled water. Do not exceed the maximum fill line.
4. **Add Essential Oil:** Add a few drops of your preferred essential oil directly into the water reservoir.
5. **Close Lid:** Replace the top lid securely onto the diffuser unit.
6. **Connect Power:** Plug the power adapter into the diffuser's power input port, then plug the adapter into a standard electrical outlet.



This image shows the SpaRoom Aromamist Ultrasonic Essential Oil Diffuser from a top-down angle, highlighting its compact, circular design and the mist outlet on the top surface. The side features a textured band.

## OPERATING INSTRUCTIONS

---

The Aromamist diffuser features two control buttons on the front panel.

### Mist Control:

1. Press the **right button** once for continuous mist mode, which operates for approximately 3 hours.
2. Press the **right button** a second time for intermittent mist mode, which operates for approximately 6 hours (mist on for a period, then off for a period).
3. Press the **right button** a third time to turn off the mist function.

### Light Control:

1. Press the **left button** once to turn on the LED light. The light will cycle through various colors automatically.
2. To select a specific color, press the **left button** repeatedly until your desired color appears.
3. Press the **left button** again after selecting a color to turn off the light function.

**Automatic Shut-off:** The diffuser is equipped with an automatic shut-off feature that activates when the water level becomes too low, ensuring safe operation.

## MAINTENANCE

---

Regular cleaning is essential to maintain the diffuser's performance and longevity. Essential oil residue can build up over time.

1. **Disconnect Power:** Always unplug the diffuser from the power outlet before cleaning.
2. **Empty Water:** Carefully remove the lid and pour out any remaining water from the reservoir.
3. **Wipe Reservoir:** Use a soft cloth or tissue to wipe the inside of the water reservoir. For stubborn residue, a small amount of rubbing alcohol or white vinegar can be used on the cloth.
4. **Clean Ultrasonic Plate:** Gently clean the ultrasonic plate (the small disc at the bottom of the reservoir) with the provided cleaning brush or a cotton swab. Avoid scratching the plate.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the diffuser.

**Note:** Do not immerse the diffuser unit in water or allow water to enter the air outlet or power input port.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No mist is being produced.	Low water level. Diffuser is not plugged in. Ultrasonic plate is dirty.	Add water to the reservoir. Ensure power adapter is securely connected. Clean the ultrasonic plate as per maintenance instructions.
No light is working.	Light function is turned off. Power issue.	Press the left button to activate the light. Check power connection.
Diffuser turns off prematurely.	Water level is too low.	This is a safety feature. Refill the water reservoir.
Weak or no aroma.	Insufficient essential oil. Old or diluted essential oil.	Add more drops of essential oil. Use fresh, undiluted essential oil.

## SPECIFICATIONS

---

- **Model Number:** 852030004028
- **Product Dimensions:** 6.5 x 6.5 x 6 inches
- **Weight:** 12.35 ounces
- **Material:** Plastic
- **Special Feature:** LED Light
- **Color:** White



This image illustrates the SpaRoom Aromamist Diffuser with its approximate dimensions, showing a height of 3.6 inches (9 cm). This provides a visual reference for the product's size.

## WARRANTY INFORMATION

---

Specific warranty details for the SpaRoom Aromamist Ultrasonic Essential Oil Diffuser are not provided in this manual. For information regarding product warranty, please refer to the documentation included with your purchase or contact SpaRoom customer support directly.

## SUPPORT

---

If you encounter any issues or have questions not covered in this manual, please contact SpaRoom customer support for assistance. Refer to the SpaRoom official website or product packaging for current contact information.