

## Nintendo WUP-005

# Nintendo Wii U Pro Controller - White User Manual

## 1. INTRODUCTION

The Nintendo Wii U Pro Controller is designed to enhance your gaming experience on the Wii U console. It features an ergonomic design for comfortable, extended gameplay, dual analog sticks, and a familiar button layout. This controller is equipped with a rechargeable battery, offering up to 80 hours of use on a single charge. It is compatible with a variety of Wii U games, as indicated on game packaging or within game instructions. Please note that this controller is not compatible with the original Wii system or its games.



Figure 1: Front view of the White Nintendo Wii U Pro Controller.

## 2. SETUP

---

### 2.1 Charging the Controller

The Wii U Pro Controller includes a rechargeable battery. To charge, connect the provided USB charging cable to the controller's mini-USB port, located on the top edge of the controller. Connect the other end of the USB cable to a powered USB port on your Wii U console or a compatible USB wall adapter. The player indicator lights on the front of the controller will illuminate to show the charging status. A full charge can provide up to 80 hours of gameplay.

### 2.2 Pairing/Syncing the Controller

To connect your Wii U Pro Controller to your Wii U console:

1. Ensure your Wii U console is powered on.
2. Locate the small red SYNC button on the back of the Wii U Pro Controller, near the battery compartment. Press this button.
3. Next, locate and press the SYNC button on your Wii U console. This button is typically found behind the front cover of the console.
4. The player indicator lights on the front of the controller will flash and then remain steadily lit, indicating a successful connection. The number of lit indicators corresponds to the player number assigned to the controller.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Controller Layout and Functions

- **Dual Analog Sticks:** Used for movement and camera control in games.
- **D-Pad (Directional Pad):** Provides precise directional input.
- **A, B, X, Y Buttons:** Primary action buttons for in-game commands.
- **POWER Button:** Turns the controller on or off.
- **HOME Button:** Accesses the Wii U Home Menu.
- **SELECT (-) and START (+) Buttons:** Used for various in-game functions, such as pausing or menu navigation.
- **L, R, ZL, ZR Buttons:** Shoulder buttons and triggers for additional in-game actions.
- **Player Indicator Lights:** Four lights on the front indicate the assigned player number (1-4) and charging status.

### 3.2 Gameplay

The Wii U Pro Controller offers a traditional gaming experience. Its design is optimized for comfort during extended play sessions. Always check the game's packaging or digital description to confirm compatibility with the Wii U Pro Controller before playing.

### 3.3 Battery Life

A fully charged Wii U Pro Controller can provide approximately 80 hours of gameplay. Actual battery life may vary depending on usage patterns and game intensity.

Your browser does not support the video tag.

Video 1: A detailed overview of the Wii U Pro Controller. This video showcases the controller's design, button layout including the Power, Home, Select, Start, A/B/X/Y buttons, D-pad, and analog sticks. It also highlights the player indicator lights, the SYNC button on the back, and the mini-USB charging port on the top edge.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To maintain the cleanliness and longevity of your controller, wipe it regularly with a soft, dry cloth. For light dirt or smudges, a cloth slightly dampened with water can be used. Avoid using abrasive materials, solvents, or chemical cleaners, as these can damage the controller's surface and internal components.

### 4.2 Storage

When not in use, store the Wii U Pro Controller in a clean, dry environment. Protect it from extreme temperatures, direct sunlight, and excessive humidity. Do not place heavy objects on the controller to prevent physical damage.

## 5. TROUBLESHOOTING

---

### 5.1 Controller Not Connecting

- Ensure both the Wii U console and the Pro Controller are powered on.
- Re-attempt the pairing process as described in Section 2.2.
- Verify that the controller has sufficient battery charge.
- Ensure there are no obstructions or excessive distance between the controller and the console that could interfere with the wireless signal.

### 5.2 Charging Issues

- Check that the USB charging cable is securely connected to both the controller and the power source.
- Try using a different USB port on your Wii U console or a different compatible USB wall adapter.
- Inspect the USB cable for any signs of damage. If damaged, replace it with an official Nintendo charging cable or a compatible alternative.

### 5.3 Incompatible Games/Systems

The Wii U Pro Controller is designed exclusively for the Nintendo Wii U console. It will not function with the original Wii console or games designed specifically for the Wii Remote or Nunchuk. Always check game compatibility before purchase or play.

## 6. SPECIFICATIONS

---

- **Model:** WUP-005
- **Brand:** Nintendo
- **Compatible Devices:** Nintendo Wii U
- **Controller Type:** Gamepad
- **Connectivity Technology:** Wireless (USB for charging)
- **Button Quantity:** 16

- **Power Source:** Battery Powered (Rechargeable)
- **Battery Life:** Up to 80 hours per charge
- **Item Weight:** 231 Grams
- **Item Dimensions:** 6.5 x 5 x 3.25 inches
- **Color:** White

## 7. WARRANTY AND SUPPORT

---

For detailed warranty information regarding your Nintendo Wii U Pro Controller, please refer to the warranty documentation included with your product packaging. You can also visit the official Nintendo support website for the most up-to-date warranty terms and conditions.

For additional support, frequently asked questions (FAQs), and comprehensive troubleshooting guides, please visit the official Nintendo support portal. Contact information for customer service can also be found on their website.