

[manuals.plus](#) /› [Pentax](#) /› [Pentax Q10 Mirrorless Digital Camera User Manual](#)

## Pentax Q10

# Pentax Q10 Mirrorless Digital Camera User Manual

Model: Q10

## 1. INTRODUCTION

The Pentax Q10 is a super-compact and ultra-lightweight mirrorless digital camera designed to offer digital-SLR-quality photography in a highly portable form factor. Building upon its predecessor, the Q10 features a newly adopted CMOS image sensor and an upgraded algorithm, resulting in improved image quality and faster autofocus (AF) operation. This manual provides essential information for setting up, operating, and maintaining your Pentax Q10 camera.

## 2. WHAT'S IN THE Box

Verify that all items are present in your camera kit:

- Pentax Q10 Camera Body
- Zoom Lens (e.g., 02 Standard Zoom)
- Rechargeable Lithium-Ion Battery
- Battery Charger
- AC Plug Cord
- USB Cable
- Camera Strap
- Body Mount Cap
- Lens Caps (front and rear)

## 3. CAMERA COMPONENTS

Familiarize yourself with the main parts of your Pentax Q10 camera.



Image: The Pentax Q10 Mirrorless Digital Camera in red, shown with a zoom lens attached. The camera features a compact body, a prominent lens, and a rear LCD screen.

## Front View

- **Lens Mount:** For attaching interchangeable Q-mount lenses.
- **AF Assist Lamp/Self-Timer Lamp:** Illuminates for autofocus in low light or indicates self-timer operation.
- **Built-in Flash:** Pop-up flash for additional illumination.

## Top View

- **Shutter Button:** Press halfway to focus, fully to take a picture.
- **Mode Dial:** Selects shooting modes (e.g., Auto, Program, Scene).
- **Power Switch:** Turns the camera on or off.

## Rear View

- **LCD Monitor:** Displays live view, menus, and playback images.
- **Control Dial/Four-way Controller:** Navigates menus and adjusts settings.
- **Playback Button:** Enters playback mode.
- **Menu Button:** Accesses camera settings.

## 4. SETUP

## 4.1. Charging and Installing the Battery

1. Insert the included Lithium-Ion battery into the battery charger.
2. Connect the charger to a power outlet. The charging indicator will light up.
3. Once charging is complete (indicator light changes or turns off), remove the battery.
4. Open the battery cover on the bottom of the camera.
5. Insert the charged battery into the camera with the correct orientation, then close the cover securely.

## 4.2. Inserting a Memory Card

The Pentax Q10 uses SD/SDHC/SDXC memory cards (sold separately).

1. Open the memory card slot cover, usually located on the side or bottom of the camera.
2. Insert the memory card with the label facing the front of the camera until it clicks into place.
3. Close the memory card slot cover.

## 4.3. Attaching the Lens

1. Remove the body mount cap from the camera and the rear lens cap from the lens.
2. Align the red dot on the lens with the red dot on the camera's lens mount.
3. Insert the lens into the camera mount and turn it clockwise until it clicks into place.
4. Remove the front lens cap.

## 4.4. Initial Settings

Upon first power-on, you may be prompted to set the date, time, and language. Follow the on-screen instructions.

# 5. OPERATING THE CAMERA

---

## 5.1. Basic Photography

1. Turn the camera on using the power switch.
2. Rotate the mode dial to select your desired shooting mode (e.g., **P** for Program Auto, **AUTO** for fully automatic).
3. Frame your shot using the LCD monitor.
4. Press the shutter button halfway down to activate autofocus. The camera will focus on your subject.
5. Press the shutter button fully down to take the picture.

## 5.2. Video Recording

The Pentax Q10 supports Full 1080p HD video recording at 30 frames per second with H.264 compression.

1. Set the mode dial to the movie recording mode (usually indicated by a video camera icon).
2. Press the shutter button to start recording.
3. Press the shutter button again to stop recording.

## 5.3. Image Stabilization

The camera features a sensor-shift shake reduction system to help produce stabilized, blur-free images, especially in low-light conditions. This system operates automatically.

## 5.4. Using the Built-in Flash

The Q10 includes a built-in pop-up flash with extra high extension, covering up to 23 feet at ISO 200.

- In automatic modes, the flash may pop up automatically when needed.
- In certain manual modes, you can manually pop up the flash and select flash modes (e.g., Fill-flash, Red-eye

reduction) via the camera menu.

## 5.5. Continuous Shooting

For capturing fast-action situations, the camera can capture up to 5 frames per second in continuous shooting mode. This setting can typically be found in the drive mode menu.

## 5.6. Playback

To view your captured photos and videos:

1. Press the **Playback** button.
2. Use the four-way controller to navigate through images.
3. Press the **OK** button or a dedicated zoom button to zoom in on an image.

## 6. MAINTENANCE

---

### 6.1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water or a mild cleaning solution, then wipe dry.
- **Lens:** Use a lens blower brush to remove dust, then gently wipe with a lens cleaning cloth and lens cleaning solution if necessary. Avoid touching the lens surface with your fingers.
- **LCD Monitor:** Use a soft, dry cloth. For smudges, use a specialized LCD cleaning wipe.

### 6.2. Dust Reduction

The Pentax Q10 features an integrated DRII (Dust Removal II) dust reduction system. This system vibrates the image sensor at high speed to shake off dust particles. You can activate this function manually through the camera's setup menu or set it to operate automatically upon power-on/off.

### 6.3. Battery Care

- Always use the genuine Pentax battery and charger.
- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Pentax Q10, refer to the following common solutions:

- **Camera does not turn on:** Ensure the battery is charged and correctly inserted. Check if the power switch is fully engaged.
- **Blurry photos:** Check if the lens is clean. Ensure the camera is properly focused. Use the shake reduction feature or a higher shutter speed in low light.
- **Flash does not fire:** Check flash settings in the menu. Ensure the flash is popped up. The flash may not fire in certain shooting modes or if ambient light is sufficient.
- **Memory card error:** Ensure the memory card is inserted correctly. Try formatting the card (this will erase all data). Use a different, compatible memory card.
- **Camera freezes:** Turn the camera off and remove the battery for a few seconds, then reinsert and turn on.

If problems persist, consult the Pentax support website or contact customer service.

## 8. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	4.02 x 1.34 x 2.28 inches
Item Weight	7 ounces
Item Model Number	Q10
Batteries	1 Lithium Ion battery (included)
Manufacturer	Pentax
Compatible Mountings	Pentax Q
Photo Sensor Technology	CMOS
Supported File Format	RAW (DNG), JPEG (Exif 2.3), DCF2.0
Image Stabilization	Sensor-shift
Maximum Focal Length	15 Millimeters (with kit lens)
Optical Zoom	1x (body only, lens dependent)
Maximum Aperture	3.5 Millimeters (with kit lens)
Expanded ISO Minimum	200
Metering Description	Multi, Center-weighted, Spot

## 9. WARRANTY AND SUPPORT

Your Pentax Q10 camera is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or additional product information, please visit the official Pentax website or the [Pentax Store on Amazon](#).