

Redi-Remote RTAKB41681201

Redi-Remote Replacement Remote Control User Manual

Model: RTAKB41681201 for LG AKB41681201, HT963SA, LHT584, HT963PA, LHT854

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific LG home theater systems and devices. This remote is a direct replacement and requires no programming for the listed compatible models. Please read this manual thoroughly to ensure proper use and care of your remote control.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries (included). To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control.

2. Initial Use (No Programming Required)

This Redi-Remote replacement remote control is pre-programmed for immediate use with the specified LG models. No additional setup or programming steps are required. Simply insert the batteries, and the remote is ready to operate your compatible LG device.



Image: Front view of the Redi-Remote replacement remote control. It features a standard layout of buttons for power, volume, channel, and playback controls. The lower section of the remote has a sliding cover to reveal additional buttons.

OPERATING INSTRUCTIONS

The remote control provides full functionality for your compatible LG device. Point the remote directly at the device's infrared receiver for optimal performance.

Basic Functions

- **Power Button:** Turns the device on or off.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes the channel (if applicable to your device).
- **Input/Source:** Selects the input source (e.g., DVD, AUX).
- **Mute:** Silences the audio output.

Advanced Functions (Sliding Cover)

The lower half of the remote control features a sliding cover. Slide this cover downwards to reveal additional buttons for advanced functions specific to your LG home theater system, such as menu navigation, playback controls (play, pause, stop, fast forward, rewind), and other system settings.

The effective operating range for this remote control is approximately 20 feet.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes inconsistent or stops working. Always replace all 4 AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries or different types of batteries.

Storage

When not in use for extended periods, remove the batteries from the remote control to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the device's infrared receiver.
 - Make sure you are within the effective operating range (approximately 20 feet).
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the non-working buttons, to remove any dirt or debris.
 - Ensure the sliding cover is fully open if you are trying to access buttons underneath it.
- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure consistent line of sight to the device.

SPECIFICATIONS

Brand	Redi-Remote
Model Number	RTAKB41681201
Compatible LG Models	AKB41681201, HT963SA, LHT584, HT963PA, LHT854
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Special Feature	No Programming Required
Number of Batteries	4 AAA batteries (included)
Battery Type	Alkaline
Maximum Range	20 feet
Item Weight	4.5 ounces

SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This remote is designed to function as a direct replacement without additional programming.

© 2023 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question