

- [Manuals.plus](#) /
- › [Redi-Remote](#) /
 - › Redi-Remote Replacement Remote Control Instruction Manual for SANSUI COM1307AD and Compatible Models

Redi-Remote RT076R0CG010

Redi-Remote Replacement Remote Control Instruction Manual

For SANSUI Models: COM1307AD, VT1322A, COM1320, and others

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, model RT076R0CG010. This remote is designed to function as a direct replacement for specific SANSUI TV and VCR units, eliminating the need for programming. It replicates the functions of the original SANSUI remote control number 076R0CG010.

2. PRODUCT OVERVIEW



Image: Redi-Remote replacement remote control. The remote is black with a top section featuring power, channel, volume, and number buttons. A lower section, initially covered, slides down to reveal additional VCR and advanced function buttons.

2.1 Key Features

- **No Programming Required:** Ready to use with compatible SANSUI units immediately after battery installation.
- **Dedicated Functionality:** Performs all functions for the specific unit it is designed to control. It cannot be programmed to control auxiliary devices.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Sliding Cover:** A protective cover conceals the lower half of the remote, revealing additional buttons when slid down.

2.2 Button Layout and Functions

The remote control features a standard layout for TV and VCR operations. The upper section primarily handles TV functions, while the lower section, accessible by sliding down the cover, provides VCR and advanced controls.

- **PWR (Power):** Turns the connected unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Toggles between TV and video input modes.
- **DISP (Display):** Shows on-screen information.
- **VOL +/- (Volume):** Adjusts the audio volume.
- **MUTE:** Silences the audio output.
- **CH +/- (Channel):** Changes TV channels.
- **MENU:** Accesses the on-screen menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly selects channels or enters numerical values.
- **ENT (Enter):** Confirms selections or channel entries.

Lower Section Buttons (under sliding cover):

- **TV MONI (TV Monitor):** Selects TV monitor mode.
- **EJECT:** Ejects a tape from the VCR.
- **CALL:** Initiates a call function (if supported by the unit).
- **Q.V. (Quick View):** Provides a quick view function.
- **INPUT SELECT:** Cycles through available input sources.
- **REC/OTR (Record/One Touch Record):** Starts recording or initiates one-touch recording.
- **SPEED:** Adjusts VCR playback speed.
- **ENTER:** Confirms selections.
- **Playback Controls (Play, Stop, Pause, Fast Forward, Rewind):** Standard VCR transport controls.
- **SET/TRACKING +/-:** Adjusts VCR tracking.
- **CANCEL:** Cancels current operation.
- **PROGRAM:** Accesses programming functions.
- **AUTO TRACKING:** Activates automatic VCR tracking adjustment.
- **TV/CAP/TEXT:** Toggles TV captioning or text display.
- **TIMER REC (Timer Record):** Sets up timer recordings.
- **SKIP SEARCH:** Skips forward during playback.
- **COUNTER RESET:** Resets the tape counter.
- **ZERO RETURN:** Returns the tape to the zero counter position.

3. COMPATIBILITY

This Redi-Remote replacement control is specifically designed to be compatible with the following SANSUI unit models:

- COM1307AD
- VT1322A
- COM1320
- 62180145
- GOJ12333
- GOJ12331
- COM0952
- MVT2137
- 07660CG040
- COM312AD
- EH8150
- EH8151A
- DBVT1333
- 0766093040
- VT1975
- VT1975A
- DBVT1341
- COM1320A
- MVT2197
- 076R0CG010
- COM1950
- COMO950A
- VT9110A
- GOJ12312
- GOJ12326
- COMO950G
- 076R0BH020
- MVT2136
- TVCR1340AD
- JCTV1586
- 0766093160
- TVBR1304Y
- COM1912
- VT1922A
- COMO953
- COMO950F
- COM0950
- COM2551C

- COM1312D
- MVT2090A
- 076R084010
- COM3101A
- MVT2139
- 076R0BH01A
- VT2522DB
- VT3110
- TVCR1900C
- 07660CG030
- TVCR0950BW
- COMO953A
- COM1312
- CTSG2799C
- VT9110
- TVCR8118CTC
- VT2522DA
- TVCR950BW
- 076R0CG080
- DBVT1342
- MVT2135
- 076R0BH01B
- VT3110A
- VT1313A
- MVT2135A
- 251925
- COM7200
- TVCR1900AC
- COM3101
- CTSG8118CTC
- TVCR1325ADC
- GOJ12332
- T09084
- 0766093100
- 0766093120
- 076R0CG020
- COM3100D
- JCTV1600S

4. SETUP

4.1 Battery Installation

The remote control requires 4 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Initial Use

This Redi-Remote control is pre-programmed for the compatible SANSUI units listed. No additional programming steps are required. Once batteries are installed, the remote is ready for immediate use.

5. OPERATION

5.1 Basic TV Control

- **Power On/Off:** Press the **PWR** button to turn your SANSUI TV/VCR unit on or off.
- **Volume Adjustment:** Use the **VOL +** and **VOL -** buttons to increase or decrease the volume.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Channel Selection:** Use the **CH +** and **CH -** buttons to change channels sequentially. For direct channel entry, use the number buttons (0-9) followed by **ENT**.
- **Input Source:** Press the **TV/VIDEO** button to switch between TV tuner and video input sources.

5.2 VCR Control (Sliding Cover)

To access VCR and advanced functions, gently slide down the cover located on the lower half of the remote control. This will reveal additional buttons.

- **Recording:** Insert a recordable tape into your VCR. Press **REC/OTR** to begin recording.
- **Playback:** Insert a recorded tape. Use the **Play** button (triangle icon) to start playback.
- **Stop:** Press the **Stop** button (square icon) to halt playback or recording.
- **Pause:** Press the **Pause** button (two vertical lines icon) to temporarily stop playback. Press again to resume.
- **Fast Forward/Rewind:** Use the **Fast Forward** (double arrow right) and **Rewind** (double arrow left) buttons to navigate through the tape.
- **Eject:** Press the **EJECT** button to remove the tape.
- **Tracking Adjustment:** Use **SET/TRACKING +/-** to manually adjust the VCR tracking for optimal picture quality during playback.

6. MAINTENANCE

6.1 Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it is time to replace the batteries. Follow the steps outlined in Section 4.1.

6.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the SANSUI unit's infrared sensor.
 - Confirm that the remote is pointed directly at the unit.
- **Remote controls some functions but not others:**
 - Verify that your SANSUI unit model is listed in the compatibility section (Section 3).
 - Ensure the sliding cover is in the correct position for the desired function (e.g., slid down for VCR controls).
- **Remote does not control auxiliary devices (e.g., DVD player, cable box):**
 - This Redi-Remote is designed to control only the specific SANSUI TV/VCR unit it replaces and cannot be programmed for other devices.

8. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT076R0CG010
Product Dimensions	7.5 x 2.25 x 0.75 inches (19 x 5.7 x 1.9 cm)
Item Weight	4.5 ounces (127.5 grams)
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Needed
Max Number of Supported Devices	1 (Specific SANSUI TV/VCR unit)

9. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement control after purchase, please contact the seller directly for assistance. Ensure you have your purchase details and the remote's model number (RT076R0CG010) available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009D5ITMY>

More documents and user manuals: <https://manuals.plus/>