

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for GO Video Models GV4060, GV4600, 633108, 104060RM

Redi-Remote RT69099633108

Redi-Remote Replacement Remote Control User Manual

For GO Video Models GV4060, GV4600, 633108, 104060RM

INTRODUCTION

This document provides comprehensive instructions for the Redi-Remote replacement remote control, designed for seamless compatibility with specific GO Video VCR/DVD combo units. This remote is a direct replacement for the original GO Video remote control number 69099633108 and is compatible with models 633108, GV4060, GV4600, and 104060RM. It offers full functionality for these units without requiring any programming.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase. To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.



This image displays the Redi-Remote replacement remote control. The upper section features power, channel, volume, mute, menu, and number buttons. The lower section, revealed by sliding down a cover, includes VCR/DVD playback controls, deck selection, and advanced functions like copy/tape, tracking, and index.

OPERATING INSTRUCTIONS

Button Layout Overview

The Redi-Remote features a two-part design: an upper section with primary controls and a lower section with advanced functions, accessible by sliding down a cover.

Upper Section Buttons

- **PWR (Power):** Turns the GO Video unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Toggles between TV tuner input and video input sources (e.g., VCR/DVD).
- **DISP (Display):** Shows on-screen information such as current channel, time, or playback status.
- **CH+ / CH- (Channel Up/Down):** Changes the channel sequentially.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences the audio output. Press again to restore sound.
- **MENU:** Accesses the unit's main menu for settings and adjustments.
- **RECALL:** Switches to the previously viewed channel.
- **Number Buttons (0-9, 100):** Used for direct channel entry or inputting numerical values.
- **ENT (Enter):** Confirms a selection or entered number.

Lower Section Buttons (Under Slide Cover)

To access these functions, gently slide the lower cover of the remote downwards.

- **COPY/TAPE:** Initiates the copying process between VCR decks or other connected devices.
- **LCV:** Line Control Video function, typically used for specific VCR operations.
- **CLEAR:** Clears current input or selection.
- **MEMORY:** Accesses or sets memory functions.
- **CLK/CTR (Clock/Counter):** Displays or sets the clock and tape counter.
- **DECK 1 / DECK 2:** Selects the primary or secondary VCR deck for operation.
- **Playback Controls (Rewind, Play, Fast Forward, Stop, Pause, Record):** Standard controls for VCR and DVD playback and recording.
- **TV VIEW:** Switches the display to the TV tuner input.
- **-SLOW+:** Adjusts the speed of slow-motion playback.
- **SKIP:** Skips forward during playback.
- **AIR:** Selects the antenna/air input source.
- **INDEX:** Used for index search functions on VCR tapes.
- **TRACKING/MENU+:** Adjusts VCR tracking or navigates menus.
- **MENU:** Accesses the unit's menu (may duplicate upper section menu button for convenience).
- **QUIT:** Exits current menu or function.
- **SHUTTLE:** Provides variable speed playback control.
- **BEGIN:** Jumps to the beginning of the current tape or disc.
- **END:** Jumps to the end of the current tape or disc.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Replacement:** If the remote's performance degrades, replace all batteries with new ones. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Issue	Solution
Remote is not responding.	• Ensure batteries are correctly installed with proper polarity. • Replace old batteries with new AAA batteries. • Check for any obstructions between the remote and the GO Video unit's infrared sensor. • Ensure you are within the effective range of the remote control.
Buttons are unresponsive or sticky.	• Clean the remote surface with a soft, dry cloth. • Avoid pressing buttons with excessive force.
Remote range is limited.	• Replace batteries with fresh ones. • Ensure there are no strong light sources (like direct sunlight) interfering with the infrared signal.

SPECIFICATIONS

- **Product Dimensions:** 7 x 2.5 x 1 inches
- **Item Weight:** 4.5 ounces
- **Compatible Devices:** GO Video VCR/DVD Combo Units (Models: 633108, 69099633108, GV4060, GV4600, 104060RM)
- **Connectivity Technology:** Infrared (IR)
- **Batteries:** 4 x AAA batteries (included)
- **Special Feature:** No Programming Required

SUPPORT

If you encounter any issues or have concerns regarding your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. They can provide specific troubleshooting steps or support for your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question