

Redi-Remote RTNF110UD

Redi-Remote Replacement Remote Control User Manual

For MAGNAVOX Models CD130MW9 and NF110UD

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with MAGNAVOX units CD130MW9 and NF110UD. This remote is a custom-built replacement and is not an original equipment manufacturer (OEM) product. It is engineered to perform all functions of the original remote for the specified MAGNAVOX models.

The remote features a sliding cover that conceals the lower half of the buttons. Slide the cover down to access these additional functions.

PRODUCT FEATURES

- **Dedicated Functionality:** This Redi-Remote is designed to control specific MAGNAVOX units (CD130MW9, NF110UD) and cannot be programmed for auxiliary devices.
- **Compact Design:** The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.
- **Standard Operation:** This remote operates using infrared technology and does not include laser pointers or LED lights.

SETUP: BATTERY INSTALLATION

The remote requires four (4) AAA batteries for operation. These batteries are included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS: BUTTON FUNCTIONS

This section details the functions of the buttons on your Redi-Remote control. Refer to the image below for visual reference.



Image: Redi-Remote Replacement Remote Control. The upper section features power, volume, channel, and number buttons. The lower section, revealed by sliding down the cover, contains playback and menu navigation buttons.

Upper Section Buttons

- **PWR (Power):** Turns the MAGNAVOX unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH +/- (Channel Up/Down):** Changes the television channel.
- **MENU:** Accesses the main menu of the MAGNAVOX unit.
- **RECALL:** Returns to the previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers or menu selections.
- **ENT (Enter):** Confirms a selection or entered number.

Lower Section Buttons (Slide Down to Reveal)

To access these buttons, gently slide the lower cover of the remote downwards.

- **PICTURE-SLEEP:** Likely related to picture settings or an additional sleep function.
- **SELECT:** Used for making selections within menus.
- **OP/CL (Open/Close):** For disc tray operation (if applicable to the MAGNAVOX unit).
- **Playback Controls (, ►, ■ ,):** Standard controls for media playback (Rewind, Play, Stop, Pause, Fast Forward).
- **SETUP:** Accesses system setup menus.
- **TITLE:** Displays the title menu of a disc (if applicable).
- **CLEAR:** Clears current input or selection.
- **ENTER:** Confirms selections or actions.
- **Directional Arrows (▲, ▼, ◀, ▶):** Navigates through menus and options.
- **RETURN:** Goes back to the previous menu or screen.
- **MODE:** Switches between different operating modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes. Refer to the "Setup: Battery Installation" section for instructions.
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Obstruction between remote and unit; low batteries.	Ensure a clear line of sight to the MAGNAVOX unit. Replace batteries if needed.
Certain buttons do not work.	Remote is not compatible with that specific function on your unit; button malfunction.	Verify the remote's compatibility with your MAGNAVOX model. If issues persist, contact support.

SPECIFICATIONS

- **Brand:** Redi-Remote
- **Model Number:** RTNF110UD
- **Compatible MAGNAVOX Models:** CD130MW9, NF110UD
- **Connectivity Technology:** Infrared
- **Max Number of Supported Devices:** 1 (the specified MAGNAVOX unit)
- **Power Source:** 4 x AAA Batteries (included)
- **Product Dimensions:** 7 x 2.5 x 1 inches (approximate)
- **Item Weight:** 4.5 ounces (approximate)
- **Special Feature:** No programming required; ready to use.

SUPPORT

For any concerns or questions regarding your Redi-Remote replacement control after purchase, please contact the seller directly for assistance.