



[Manuals.plus](#) /

› [Redi-Remote](#) /

› Instruction Manual for Redi-Remote Replacement Remote Control Model RT87000066

Redi-Remote RT87000066

Redi-Remote Replacement Remote Control User Manual

Model: RT87000066 | Brand: Redi-Remote

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your new **Redi-Remote Replacement Remote Control**. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

This remote control is a custom-built replacement designed to be compatible with various LOEWE television models. It is not an original LOEWE remote control.

PRODUCT OVERVIEW



Figure 1: Front view of the Redi-Remote Replacement Remote Control. The image displays the remote's layout, including the power button, channel and volume controls, numeric keypad, and a sliding cover at the bottom revealing additional function buttons.

The Redi-Remote Replacement Remote Control is designed to provide full functionality for specific LOEWE units. It features a standard button layout for easy navigation and control of your television.

A unique feature of this remote is the sliding cover located at the lower half, which conceals additional buttons for advanced functions. Slide this cover down to access these controls.

SETUP

1. Battery Installation

Your remote control requires four (4) AAA batteries. These batteries are typically included with your purchase.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

This Redi-Remote is pre-programmed and does not require any additional setup or programming for the compatible LOEWE models. Simply install the batteries, and it is ready for use.

Note: This remote cannot be programmed to control auxiliary devices.

OPERATING INSTRUCTIONS

The remote control is designed for intuitive operation. Below is a guide to its primary functions:

- **PWR (Power) Button:** Located at the top, typically red. Press to turn your LOEWE television on or off.
- **CH+ / CH- (Channel Up/Down):** Used to change television channels.
- **VOL+ / VOL- (Volume Up/Down):** Used to adjust the television's volume.
- **MUTE Button:** Silences the television audio. Press again to restore sound.
- **Numeric Keypad (0-9):** Used to directly enter channel numbers.
- **MENU Button:** Accesses the television's main menu.
- **DISP (Display) Button:** Shows on-screen information.
- **RECALL Button:** Switches between the current and previously viewed channel.
- **Sliding Cover Functions:** Slide the bottom cover down to reveal additional buttons for functions such as AUDIO, VIDEO, INPUT, CH EDIT, FAV, FREEZE, EXIT, INFO, OK, FORMAT, WINDOW, PIP, and SWAP. Refer to your LOEWE television's manual for specific usage of these advanced functions.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance degrades or it stops responding. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical shocks and drops, which can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote only works intermittently.	Low battery power; Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's infrared receiver.
Certain buttons do not work.	Dirt or debris under the button; Internal malfunction.	Clean the remote surface. If problem persists, contact customer support.
Remote does not control my TV.	Incompatible TV model; Remote is not designed for your specific LOEWE unit.	Verify your LOEWE TV model is listed as compatible. This remote is specifically designed for models such as PLA350PL, ACO9303S, CAL232AS, PLA530PL, ARC332C, ART636MB, PLANUS 4681, ACO9303LS, ACO9383PB, PLA5303PL, L87000063, ART736MB, ACO9303PV, 5672Z, 87000066, ACO9383S, CAL2323MB, ACO9303PB, PLC530, 5663Z, ARC332PB, ACO9383PV, PLA530MB, CAL232MB, ACO9303, PLA5303.

If you continue to experience issues after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT87000066
Product Dimensions	7 x 2.5 x 1 inches (approx.)
Item Weight	4.5 ounces
Batteries Required	4 x AAA (included)
Connectivity Technology	Infrared
Max Supported Devices	1 (Specific LOEWE TV models)
Special Feature	Ergonomic design, Sliding button cover

WARRANTY INFORMATION

Redi-Remote products are designed for durability and performance. For specific warranty details, please refer to the documentation provided with your purchase or contact Redi-Remote customer support directly. Standard warranty

typically covers manufacturing defects for a limited period from the date of purchase.
This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Redi-Remote Replacement Remote Control, please contact the seller directly. The seller, **RemotesPro**, is available to assist with any post-purchase inquiries. For general inquiries or to verify compatibility, you may also visit the Redi-Remote brand page or contact their support channels as available.

Seller Contact: [RemotesPro Seller Page](#)