

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for AIWA CXNMA945U, CXZHT63, NSXHMA86U, 8ZNFV702010

Redi-Remote RT8ZNFV702010

Redi-Remote Replacement Remote Control Instruction Manual

For AIWA Models: CXNMA945U, CXZHT63, NSXHMA86U, 8ZNFV702010, NSXMA945, CXNMT725, NSXMT725, RCZAS05, CXNHMA86U, NSXHMT76, NSXMTD9, NSXHMT75, CXNMTD9U, CXZHT63U

INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control, designed for specific AIWA audio systems. This remote is a custom-built replacement and is not an original AIWA product. It is pre-programmed to operate the compatible AIWA units listed below without additional setup.

Compatible AIWA Models: CXNMA945U, CXZHT63, NSXHMA86U, 8ZNFV702010, NSXMA945, CXNMT725, NSXMT725, RCZAS05, CXNHMA86U, NSXHMT76, NSXMTD9, NSXHMT75, CXNMTD9U, CXZHT63U.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries (included). To install:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

No programming is required for this remote control. It is ready for use with your compatible AIWA unit immediately after battery installation.

OPERATING INSTRUCTIONS

The remote control features a standard layout with a sliding cover to reveal additional functions. Refer to the image below for button identification.



Figure 1: Redi-Remote Replacement Remote Control. This image displays the full remote control with its upper and lower sections. The upper section includes power, volume, channel, mute, and numeric buttons. The lower section, revealed by sliding down a cover, contains buttons for specific audio functions like disc selection, tuner, tape, karaoke, and various sound adjustments.

Upper Section Buttons

- **PWR (Power):** Turns the AIWA unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and Video input sources.
- **DISP (Display):** Changes the display mode or information shown on the unit.
- **VOL +/- (Volume):** Increases or decreases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **CH +/- (Channel):** Changes radio channels or tracks on a CD/Tape.
- **MENU:** Accesses the system menu.
- **RECALL:** Recalls previous settings or stations.
- **Numeric Keypad (0-9, 100, ENT):** Used for direct input of channel numbers, track numbers, or other numerical selections.

Lower Section Buttons (Slide Down to Reveal)

To access these functions, slide the lower cover of the remote control downwards.

- **TIMER:** Sets or adjusts the timer functions.
- **MONO/TUNER/CLOCK:** Selects mono audio, tuner mode, or sets the clock.
- **CD EDIT/CHECK:** For editing CD programs or checking disc information.
- **PRGM (Program):** Programs CD tracks or radio stations.
- **RANDOM/REPEAT:** Toggles random play or repeat functions for audio playback.
- **DISC 1-7:** Direct selection buttons for specific discs in a multi-disc changer.
- **TAPE:** Selects the tape deck function.
- **SURROUND:** Activates or adjusts surround sound modes.
- **TUNER:** Selects the radio tuner function.
- **MANUAL/SELECT:** For manual tuning or selection in various modes.
- **DOLBY PROLOGIC:** Activates Dolby Pro Logic sound processing.
- **T-BASS:** Adjusts the bass enhancement feature.
- **GEQ (Graphic Equalizer):** Accesses or adjusts equalizer settings.
- **VIDEO:** Selects the video input source.
- **KARAOKE:** Activates karaoke functions.
- **OPEN/CLOSE:** Opens or closes the CD tray.
- **REC/REC MUTE:** Initiates recording or mutes recording input.
- **PAUSE/SET:** Pauses playback or confirms settings.
- **CD:** Selects the CD player function.
- **Play/Pause, Stop, Fast Forward, Rewind, Skip Track:** Standard playback control buttons.
- **CLEAR:** Clears current selections or inputs.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the AIWA unit's infrared sensor.
 - Ensure you are within the effective range and line of sight of the AIWA unit.
- **Specific functions not working:**
 - Verify that the AIWA unit is powered on and in the correct mode (e.g., CD mode for CD functions).
 - Some functions may require the lower cover to be slid down to reveal the corresponding buttons.
- **Remote controls other devices:**
 - This remote is specifically designed for the listed AIWA models and cannot be programmed to control auxiliary devices. If it is affecting other devices, ensure it is pointed directly at the AIWA unit.

If issues persist, please contact Redi-Remote customer support for assistance.

SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT8ZNFV702010
Compatible AIWA Models	CXNMA945U, CXZHT63, NSXHMA86U, 8ZNFV702010, NSXMA945, CXNMT725, NSXMT725, RCZAS05, CXNHMA86U, NSXHMT76, NSXMTD9, NSXHMT75, CXNMTD9U, CXZHT63U
Connectivity Technology	Infrared
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Specific AIWA unit)

WARRANTY INFORMATION

Specific warranty details are not provided in the product description. For information regarding warranty coverage, please refer to the documentation included with your purchase or contact Redi-Remote customer support directly.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Redi-Remote Replacement Remote Control, please contact the seller or Redi-Remote customer support for assistance. The product description states: "If you have any concerns with the remote after purchase, please contact me directly."

For general inquiries, you may refer to the Redi-Remote brand page on Amazon:[Redi-Remote on Amazon](#)

© 2025 Redi-Remote. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009D5PWWY>

More documents and user manuals: <https://manuals.plus/>