

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Redi-Remote](#) /
- › [Redi-Remote Replacement Remote Control for NIKO RC00104P, SV3706 User Manual](#)

### Redi-Remote RTRC00104P

# Redi-Remote Replacement Remote Control User Manual

Model: RTRC00104P

Compatible with NIKO RC00104P, SV3706

## INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, model RTRC00104P. This remote is designed to function as a direct replacement for NIKO remote control models RC00104P and SV3706. It is a custom-built replacement and not an original NIKO product. This remote control is pre-programmed and requires no additional setup for the specified NIKO units.

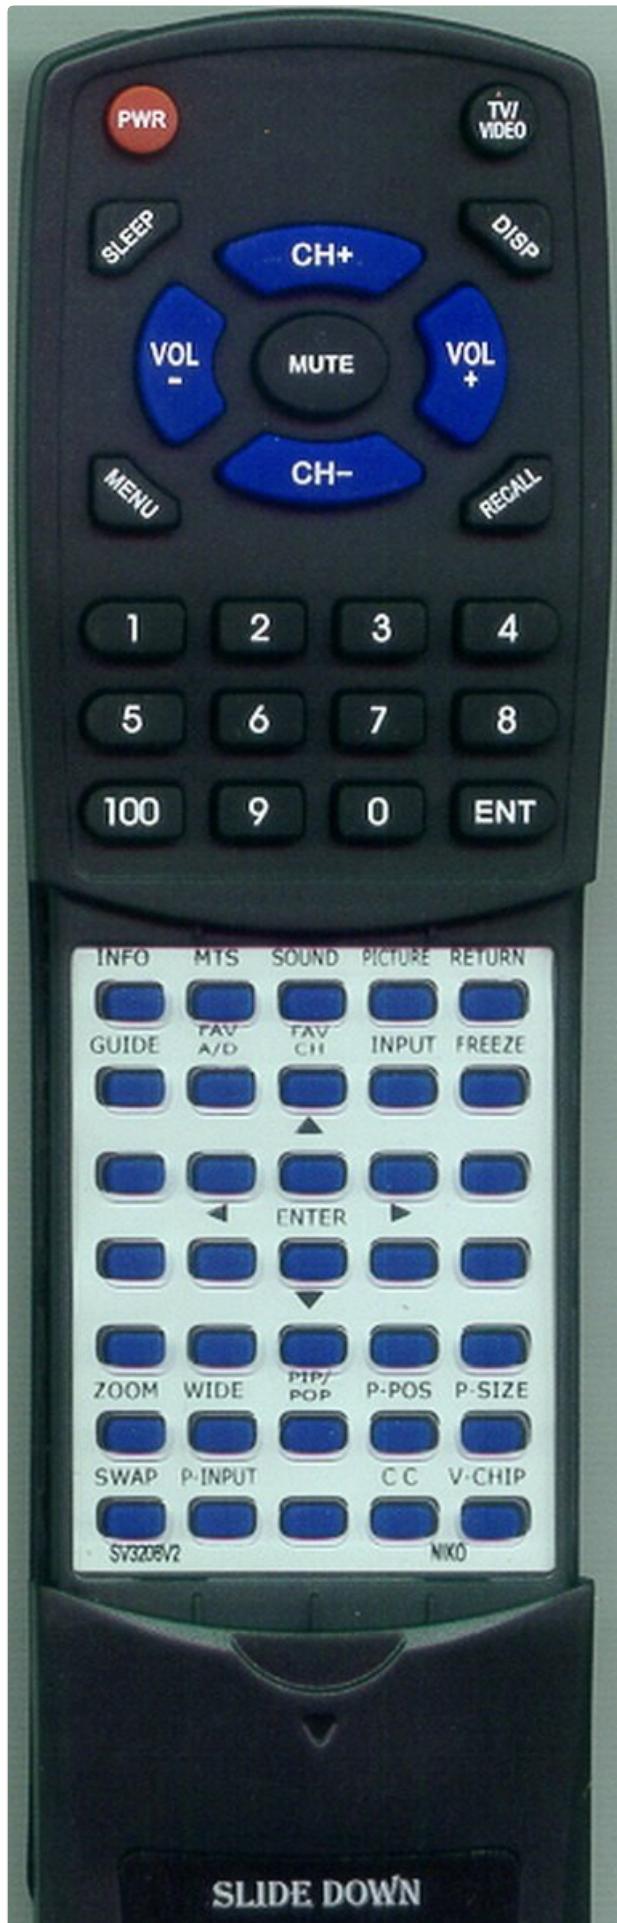


Image: The Redi-Remote replacement remote control, featuring a standard rectangular shape with various buttons for television operation. The lower half of the remote has a sliding cover.

## SETUP

---

### 1. Battery Installation

The remote control requires 4 AAA batteries, which are included. To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

### 2. Initial Use

This Redi-Remote is pre-programmed for NIKO RC00104P and SV3706 units. No additional programming is required. Once batteries are installed, the remote is ready for use with your compatible NIKO television.

## OPERATING INSTRUCTIONS

---

The remote control provides standard functions for operating your NIKO television. Point the remote directly at the television's infrared receiver.

### Basic Functions

- **Power Button:** Turns the television on or off.
- **Channel Up/Down:** Changes the television channel.
- **Volume Up/Down:** Adjusts the sound volume.
- **Mute Button:** Silences the television audio.
- **Number Buttons (0-9):** Directly input channel numbers.

### Sliding Cover Feature

The remote features a sliding cover over its lower half. To access additional buttons, gently slide this cover downwards. Slide it back up to conceal the buttons when not in use.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

If the remote control's performance degrades or it stops responding, replace all 4 AAA batteries with new ones. Always replace all batteries at the same time and ensure correct polarity.

## TROUBLESHOOTING

---

- **Remote not responding:**

- Check if the batteries are installed correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the television's infrared receiver.
- Make sure you are pointing the remote directly at the television.

- **Limited functionality:**

- This remote is designed to control only the specific NIKO units (RC00104P, SV3706) and cannot be programmed for auxiliary devices.
- Ensure the sliding cover is positioned correctly to access all buttons if needed.

## SPECIFICATIONS

Feature	Detail
Model Number	RTRC00104P
Compatible Devices	NIKO RC00104P, SV3706 Televisions
Connectivity Technology	Infrared
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces
Special Feature	No Programming Required

## SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This remote is manufactured by Redi-Remote.