

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Replacement Remote Control for Daewoo DVT5DN, DVT84N, DVT27N, DVT47N, DVT8DN, 97P1R2TDA0

Redi-Remote RT97P1R2TDA0

Replacement Remote Control User Manual

FOR DAEWOO DVT5DN, DVT84N, DVT27N, DVT47N, DVT8DN, 97P1R2TDA0

Product Overview

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific Daewoo VCR models. This remote is a custom-built replacement and is not an original Daewoo product. It is specifically compatible with Daewoo units including DVT5DN, DVT84N, DVT27N, DVT47N, DVT8DN, 97P1R2TDA0, and DVT3DN.



Figure 1: Redi-Remote Replacement Remote Control. The image displays the full remote, with the upper section showing power, channel, volume, and number buttons, and the lower section, revealed by sliding down a cover, showing VCR playback and programming controls.

Setup

The Redi-Remote replacement remote control is designed for immediate use with compatible Daewoo VCR models without requiring any programming. It is pre-configured to perform all functions for the specific unit it is designed to control.

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the indicators inside the compartment. Four AAA batteries are included with the remote.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: *This remote cannot be programmed to control any auxiliary devices. It is solely for the specific Daewoo VCR models listed.*

Operating Instructions

This section details the functions of the buttons on your Redi-Remote replacement control.

Upper Panel Controls

The upper section of the remote provides primary control functions for your Daewoo VCR.

- **PWR (Power):** Turns the VCR on or off.
- **TV/VIDEO:** Switches between TV and VCR input modes.
- **SLEEP:** Activates the sleep timer function (if supported by the VCR).
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **CH +/- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the VCR's on-screen menu.
- **RECALL:** Switches between the current and previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms numerical entries or selections.

Lower Panel Controls (Slide Down)

A cover protects the lower half of the remote. Slide this cover downwards to reveal additional VCR control buttons.

- **INPUT:** Selects video input sources.
- **EJECT:** Ejects the video cassette.
- **+ TRACK -:** Adjusts video tracking during playback.
- **+ SLOW -:** Controls slow-motion playback speed.

- **Play (▶):** Starts video playback.
- **Pause (⏸):** Pauses video playback.
- **Stop (■):** Stops video playback or recording.
- **Rewind (◀◀):** Rewinds the video cassette.
- **Fast Forward (▶▶):** Fast forwards the video cassette.
- **Record (● / OTR):** Initiates recording. OTR (One Touch Record) starts recording immediately.
- **SPEED:** Adjusts playback speed.
- **CM SKIP:** Skips forward by a set number of minutes (Commercial Skip).
- **CLEAR:** Clears entries or cancels operations.
- **PROG (Program):** Accesses programming functions.
- **- INDEX +:** Navigates through recorded index points.
- **ATR:** Auto Tracking (if supported by the VCR).
- **CHILD LOCK:** Activates or deactivates the child lock feature.

Maintenance

Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section to replace the four (4) AAA batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use abrasive cleaners or solvents.

Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the VCR's infrared sensor.
 - Confirm you are within the effective operating range and pointing the remote directly at the VCR.
- **Remote functions are incorrect or erratic:**
 - This remote is pre-programmed and does not require user programming. If functions are incorrect, verify that your Daewoo VCR model is listed as compatible (DVT5DN, DVT84N, DVT27N, DVT47N, DVT8DN, 97P1R2TDA0, DVT3DN).
 - Ensure no other infrared devices are interfering with the signal.
- **Lower buttons not visible:**

- The lower half of the remote is covered by a sliding panel. Gently slide the panel downwards to reveal these buttons.

Specifications

Feature	Detail
Brand	Redi-Remote
Model Number	RT97P1R2TDA0
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Compatible Devices	Daewoo VCR models: DVT5DN, DVT84N, DVT27N, DVT47N, DVT8DN, 97P1R2TDA0, DVT3DN
Special Feature	No Programming Required

Warranty and Support Information

Information regarding specific warranty terms or direct customer support contact details for this Redi-Remote product was not available in the provided product data. For any concerns with the remote after purchase, please refer to the seller's contact information or the platform where the purchase was made.

The product description states: *"If you have any concerns with the remote after purchase, please contact me directly,"* suggesting direct seller support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question