

Redi-Remote RTREMVR185CC

User Manual for Redi-Remote Replacement Remote Control

Model: RTREMVR185CC

PRODUCT OVERVIEW

This Redi-Remote replacement remote control is specifically designed to be compatible with Jensen units, including models VR185 CC, REMVR185CC, and VR187. It functions as a direct replacement, requiring no programming for operation with the specified devices.

- No programming needed for immediate use.
- Designed to control all functions for the specific unit.
- Features a sliding cover to reveal additional buttons.

REMOTE CONTROL LAYOUT



Figure 1: Full view of the Redi-Remote replacement remote control. The top section features primary controls, while the lower section is revealed by sliding down the cover.

The remote control is divided into two main sections: the upper fixed section with frequently used controls and a lower section

hidden by a sliding cover, containing less frequently used or advanced functions.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote control is designed for immediate use with compatible Jensen units and does not require any programming.

OPERATING INSTRUCTIONS

Upper Section Buttons

Button	Function
PWR	Power On/Off for the Jensen unit.
SLEEP	Activates sleep timer function.
TV/VIDEO	Switches between TV and Video input modes.
DISP	Changes display information.
CH+ / CH-	Navigates through channels up or down.
VOL+ / VOL-	Adjusts volume up or down.
MUTE	Mutes or unmutes audio output.
MENU	Accesses the main menu of the unit.
RECALL	Recalls the previously selected channel or input.
Number Pad (0-9)	Direct channel entry or numerical input.
ENT	Confirms selection or enters numerical input.

Lower Section Buttons (Slide Down to Reveal)

To access these buttons, slide the lower cover of the remote control downwards. Note that some buttons may have dual functions or specific uses depending on the Jensen unit's mode.

Button	Function
POWER	Additional power control, possibly for specific components.
MOD	Mode selection.
SEL	Select function.
AUX	Switches to auxiliary input.
TUNE/CH +/-	Tunes radio frequencies or navigates tracks/chapters.

Button	Function
WB	Weather Band selection.
BAND	Cycles through radio bands (AM/FM).
AMS	Automatic Memory Scan.
ENTER	Confirms input or selection.
REPEAT	Repeats current track or chapter.
SCAN	Scans through channels or tracks.
DIS	Disc function or display related.
SHUFFLE	Plays tracks in random order.
PAUSE	Pauses playback.
SAT	Satellite radio function.
DISC/CAT	Disc or category selection.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always use new AAA batteries and ensure correct polarity. Do not mix old and new batteries or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure there are no obstructions between the remote and the Jensen unit's infrared receiver.
 - Verify that the remote is pointed directly at the unit.
- **Certain buttons not working:**
 - For lower section buttons, ensure the sliding cover is fully open.
 - Clean the remote surface around the unresponsive buttons to remove any debris.
- **Limited range:**
 - Replace batteries with fresh ones.
 - Ensure no strong light sources (like direct sunlight) are interfering with the infrared signal.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTREMR185CC
Compatible Devices	Jensen VR185 CC, REMVR185CC, VR187 (Car Stereo)
Connectivity Technology	Infrared
Special Feature	No Programming Needed
Max Number of Supported Devices	1
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)

SUPPORT

For any concerns or issues with the remote control after purchase, please contact the seller directly for assistance. This remote is a custom replacement and direct support is provided by the manufacturer/seller, Redi-Remote.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009D5QIFE>

More documents and user manuals: <https://manuals.plus/>