

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Mazda CX9 Entertainment Center (2007-2015)

Redi-Remote RTTD13669L0

Redi-Remote Replacement Remote Control Instruction Manual

For Mazda CX9 Entertainment Center Model Years 2007-2015

1. INTRODUCTION AND OVERVIEW

This manual provides essential instructions for the Redi-Remote replacement remote control, model RTTD13669L0. This remote is designed to operate the entertainment system in Mazda CX9 vehicles from model years 2007 through 2015. It is a custom-built replacement and is not an original Mazda product. The remote requires no programming and is ready for use once batteries are installed.

The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in height, and weighs about 5 ounces.



Figure 1: Redi-Remote Replacement Remote Control (Model RTTD13669L0)

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA alkaline batteries for operation. To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert four new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote is now ready for use with your Mazda CX9 entertainment system.

3. OPERATING INSTRUCTIONS

This Redi-Remote is designed for immediate use without any programming. It functions via infrared (IR) technology, requiring a clear line of sight to the entertainment system's IR receiver. The maximum effective range is approximately 20 feet.

3.1 Basic Operation

- **Power:** Press the **POWER** button to turn the entertainment system on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Channel/Track Selection:** Use the **CH+** and **CH-** buttons or directional arrows to navigate menus or select tracks/channels.
- **Playback Controls:** Buttons such as **PLAY**, **PAUSE**, **STOP**, **REWIND**, and **FAST FORWARD** control media playback.

3.2 Sliding Cover for Additional Buttons

The remote features a sliding cover over its lower half. To access additional functions and buttons, gently slide this cover downwards. Once revealed, these buttons provide extended control over the entertainment system's features.

3.3 Device Compatibility

This remote is specifically designed to control the DVD/Blu-ray player component of your Mazda CX9 entertainment system. It cannot be programmed to control auxiliary devices such as televisions, soundbars, or other external media players.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Care

- Replace all four AAA batteries simultaneously. Do not mix old and new batteries, or different types of batteries.

- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Verify there is a clear path between the remote control and the entertainment system's IR receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the maximum operating range of 20 feet.

5.2 Some Buttons Not Functioning

- **Sliding Cover:** Confirm that the sliding cover is fully open to reveal all buttons. Some functions may be located under this cover.
- **System Compatibility:** Remember that this remote is designed for the entertainment system's DVD/Blu-ray player. It will not control other vehicle functions or auxiliary devices.

If issues persist, refer to your Mazda CX9 vehicle's entertainment system manual for specific operational details or contact customer support.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Name	RTTD13669L0
Model Number	RTTD13669L0
Compatible Devices	DVD/Blu-ray Player (Mazda CX9 Entertainment Center 2007-2015)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1
Special Feature	No Programming Required
Color	Black
Button Quantity	58
Maximum Range	20 Feet
Battery Type	4 x AAA Alkaline
Item Dimensions (L x W x H)	7.5" x 2.25" x 0.75"
Item Weight	5 Ounces

7. SUPPORT

For any concerns or questions regarding the operation or functionality of your Redi-Remote replacement remote control, please contact the seller directly. Provide your purchase details and the model number (RTTD13669L0) for efficient assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question