

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTAE006056

Redi-Remote Replacement Remote Control User Manual

Models: 076D0KG01A, AE006056, DCSB1, MD13Q11, MD13Q41, RTAE006056

INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control, designed to operate specific television and video units. This remote is a direct replacement and does not require programming for the specific unit it is designed to control. It is not equipped with laser pointers or LED lights and cannot be programmed to control auxiliary devices.



Figure 1: Redi-Remote Replacement Remote Control (Model AE006056 shown)

This image displays the full remote control. The top part features standard TV controls like power, volume, channel, and number buttons. The bottom part slides down to reveal additional media playback and menu navigation buttons, including those for DVD functions.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Initial Use

This Redi-Remote is designed as a direct replacement and typically requires no programming. Once batteries are installed, it should function immediately with the compatible unit (e.g., Toshiba TV/DVD player) it was designed for.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your Redi-Remote. The remote has two main sections: the fixed top section for primary TV controls and a slide-down bottom section for additional media playback and menu functions.

Top Section Controls

- **PWR (Power):** Turns the connected device on or off.
- **SLEEP:** Activates the sleep timer function on the device.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume):** Increases or decreases the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **CH +/- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the main menu of the connected device.
- **RECALL:** Switches to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms numerical input or selection.

Bottom Section Controls (Slide Down)

To access these controls, slide the bottom part of the remote downwards. The model number AE006056 is visible in this section.

- **OP/CL (Open/Close):** Opens or closes the disc tray (for DVD/CD players).
- **JUMP:** Skips to a specific point in media or jumps between sections.
- **SUB-T (Subtitle):** Toggles subtitles on or off.
- **INPUT/ZOOM:** Changes input source or activates zoom function.
- **AUD. SEL. (Audio Select):** Selects audio tracks or modes.
- **PLAY MODE:** Changes playback mode (e.g., repeat, shuffle).
- **DVD MENU:** Accesses the DVD disc menu.

- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms a selection in menus.
- **CANCEL:** Cancels an operation or exits a menu.
- **TOP MENU:** Returns to the top menu of a DVD.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back):** Standard media playback functions.
- **RTN (Return):** Returns to the previous screen or menu.
- **RPT (Repeat):** Repeats a track, chapter, or disc.
- **SLOW:** Activates slow-motion playback.
- **ANGLE:** Changes camera angle on compatible DVDs.
- **MARKER:** Sets a marker point during playback.
- **SLOW+:** Increases slow-motion speed.
- **GAME:** Activates game mode (if supported by the device).

MAINTENANCE

Cleaning the Remote

To maintain the remote's appearance and functionality, clean it periodically:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Check battery polarity (+/-). Replace all four AAA batteries with new ones.
Remote has limited range or intermittent response.	Low batteries; Obstruction between remote and device; Infrared sensor on device is blocked or dirty.	Replace batteries. Ensure a clear line of sight to the device. Clean the device's IR sensor.
Certain buttons do not work.	Remote not compatible with all functions of the device; Button malfunction.	Verify the remote's compatibility with your specific device model. If the remote is damaged, consider replacement.
Remote does not control auxiliary devices.	This remote is designed for a single specific unit.	This remote cannot be programmed to control auxiliary devices. This is a design limitation.

SPECIFICATIONS

- Product Dimensions:** 7 x 3 x 1 inches
- Item Weight:** 5 ounces
- Model Number:** RTAE006056 (also compatible with 076D0KG01A, AE006056, DCSB1, MD13Q11, MD13Q41)
- Batteries:** 4 AAA batteries required (included)
- Manufacturer:** Redi-Remote
- Special Feature:** No Programming Required
- Color:** Black (with blue and red accents)
- Max Number of Supported Devices:** 1
- Compatible Devices:** Television (specific models as listed)
- First Available Date:** September 18, 2012

WARRANTY AND SUPPORT

Warranty Information

As a replacement remote control, specific warranty terms may vary. Please refer to the warranty information provided by your original retailer or the Redi-Remote manufacturer at the time of purchase. Typically, replacement parts may carry a limited warranty against manufacturing defects.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the seller from whom you purchased this Redi-Remote. Provide your purchase details and the model number (RTAE006056 or AE006056) for efficient support.

© 2023 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009D5R5H4>

More documents and user manuals: <https://manuals.plus/>