

Redi-Remote RTAE009085

Redi-Remote Replacement Remote Control User Manual

Model: RTAE009085

1. INTRODUCTION

This manual provides instructions for the Redi-Remote RTAE009085 replacement remote control. This remote is designed to function as a direct replacement for specific Toshiba units, requiring no programming. It replicates the functions of the original remote control number AE009085.

Compatible Toshiba Models:

- AE009085
- SDKV260KU
- SDV295KU
- SDV295
- SER0262

2. SETUP

2.1 Battery Installation

The Redi-Remote RTAE009085 requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for immediate use with your compatible Toshiba unit. No additional programming is required.



Image 1: Redi-Remote RTAE009085 Replacement Remote Control. This image displays the front view of the remote control, highlighting its button layout and overall design.

3. OPERATING INSTRUCTIONS

The Redi-Remote RTAE009085 is designed for straightforward operation. Point the remote directly at your Toshiba unit and press the desired function button.

3.1 Basic Functions

- **Power:** Turns the unit on or off.
- **Channel/Track Selection:** Navigates through channels or tracks.
- **Volume Control:** Adjusts the audio output level.
- **Playback Controls:** Includes Play, Pause, Stop, Fast Forward, and Rewind for media playback.

3.2 Sliding Cover for Additional Buttons

A sliding cover is located on the lower half of the remote. Slide this cover downwards to reveal additional function buttons, which may include menu navigation, input selection, or specific DVD/VCR controls.

Note: This remote control is specifically designed to operate the designated Toshiba unit only. It cannot be programmed to control auxiliary devices such as televisions, sound systems, or other media players.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

4.2 Battery Replacement

Replace the batteries when the remote's response becomes sluggish or stops functioning. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation.

4.3 Storage

When storing the remote for extended periods, remove the batteries to prevent potential leakage and damage to the remote's internal components.

5. TROUBLESHOOTING

If you encounter issues with your Redi-Remote RTAE009085, refer to the following common solutions:

- **Remote is not responding:**
 - Ensure the batteries are correctly installed with the proper polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Verify there are no obstructions between the remote and the Toshiba unit's infrared sensor.
 - Ensure you are within the effective range of the remote control.
- **Specific buttons are not working as expected:**
 - Confirm that the button corresponds to the intended function on your specific Toshiba model. For example, the DVD eject function might be labeled as "OP/CL" (Open/Close) rather than a generic "Eject" button.
 - Ensure the sliding cover is positioned correctly to access the desired buttons.

- **Remote does not control other devices:**
 - This remote is designed exclusively for the specified Toshiba units and cannot be programmed to control auxiliary devices.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RTAE009085
Compatible Devices	Toshiba DVD/VCR units (AE009085, SDKV260KU, SDV295KU, SDV295, SER0262)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1
Batteries Required	4 AAA batteries (included)
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces

7. SUPPORT

For any concerns or questions regarding your Redi-Remote RTAE009085 replacement remote control after purchase, please contact the seller directly for assistance. Provide your purchase details and a clear description of the issue to facilitate a prompt resolution.