

[manuals.plus](#) /› [Redi-Remote](#) /› **Redi-Remote Replacement Remote Control User Manual for PANASONIC PV9451, PV9400, PVQ920, VSQS1598, PV966H, PV9662**

## Redi-Remote RTVSQS1598

# Redi-Remote Replacement Remote Control User Manual

Model: RTVSQS1598

For PANASONIC PV9451, PV9400, PVQ920, VSQS1598, PV966H, PV9662, and other compatible models.

## 1. INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, model RTVSQS1598. This remote is designed to function as a direct replacement for the original PANASONIC remote control number VSQS1598 and is compatible with a range of PANASONIC VCR units.

**Compatibility:** This remote control is specifically designed to be compatible with the following PANASONIC models:

- PV9451
- PV9400
- PVQ920
- VSQS1598
- PV966H
- PV9662
- NVHD9060PX
- PV9661
- PV9664
- NVHD9070PX
- PV9405S
- PV9450K
- VSQS1578
- PV9401
- PVHD1000
- VSQS1596
- PVS9670
- PV8665S
- PV9450

This remote control requires no programming and will operate the specified PANASONIC units directly upon battery installation.

## 2. SETUP

---

### 2.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. *Note: Four AAA batteries are included with the remote.*
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Redi-Remote Replacement Remote Control. This image shows the front view of the remote control, typically displaying the array of buttons.

### 3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with your compatible PANASONIC VCR unit. No additional programming is required.

- **Point and Operate:** Aim the remote control directly at the infrared receiver on your PANASONIC VCR unit.
- **Button Functions:** Press the corresponding buttons for desired functions such as Power, Play, Stop, Rewind, Fast Forward, Record, Channel Up/Down, Volume Up/Down, Menu, etc.
- **Sliding Cover:** The remote features a sliding cover over the lower half. Slide this cover downwards to reveal additional buttons for advanced functions.
- **Dedicated Control:** This remote is designed to control only the specific PANASONIC unit it is intended for. It cannot be programmed to control auxiliary devices (e.g., TVs, DVD players).

### 4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance degrades or it stops responding. Do not mix old and new batteries.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as dropping it may cause damage.

### 5. TROUBLESHOOTING

#### Remote is not responding:

- Ensure the remote is pointed directly at the VCR's infrared sensor.
- Check the batteries. Replace all four AAA batteries with new ones, ensuring correct polarity.
- Verify there are no obstructions between the remote and the VCR.
- Confirm the VCR unit is powered on.

#### Some buttons are not working:

- Ensure the sliding cover is positioned correctly to access the desired buttons.
- Clean the remote's surface, especially around the buttons, to remove any debris that might be obstructing them.
- If only specific buttons fail, and others work, it might indicate a hardware issue.

### 6. SPECIFICATIONS

<b>Model Number</b>	RTVSQS1598
<b>Brand</b>	Redi-Remote
<b>Compatible Devices</b>	PANASONIC VCR units (refer to Introduction for specific models)
<b>Power Source</b>	4 x AAA Batteries (included)
<b>Dimensions</b>	7 x 2.5 x 1 inches (approximately)
<b>Item Weight</b>	4.5 ounces (approximately)

<b>Special Feature</b>	No Programming Required
<b>Max Number of Supported Devices</b>	1

## 7. WARRANTY AND SUPPORT

For any concerns regarding the remote control after purchase, please contact the manufacturer, Redi-Remote, or your retailer directly for assistance. Specific warranty details may vary and are typically provided at the point of purchase or by the manufacturer.

Manufacturer: Redi-Remote