

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for KLH R3000, R3100 Receivers

Redi-Remote RTR3100

Redi-Remote Replacement Remote Control User Manual

For KLH R3000 and R3100 Receivers

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for seamless compatibility with KLH R3000 and R3100 audio/video receivers. This remote offers direct functionality without the need for programming.

SETUP

1. Battery Installation

The remote control requires four (4) AAA batteries, which are included. To install:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert the four AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

This Redi-Remote is pre-programmed for KLH R3000 and R3100 units. No additional programming is required. Simply install the batteries, point the remote at your KLH receiver, and begin operation.

OPERATING INSTRUCTIONS

The remote control features a standard layout for common functions and a sliding cover to access additional controls.

Main Control Panel

The upper section of the remote provides primary control functions:

- **PWR (Power):** Turns the receiver on or off.
- **SLEEP:** Activates the sleep timer function (if supported by the receiver).

- **TVI/VIDEO:** Switches between TV and Video input sources.
- **DISP (Display):** Changes the display mode or shows information on the receiver.
- **VOL +/- (Volume):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio output.
- **CH +/- (Channel):** Changes channels or navigates menus.
- **MENU:** Accesses the receiver's main menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Buttons (0-9, 100):** Direct input for channels or settings.
- **ENT (Enter):** Confirms selections or inputs.

Hidden Control Panel (Slide Down)

A cover slides down to reveal additional functions for specific receiver operations:

- **AUTO:** Initiates automatic setup or tuning.
- **MEMORY:** Stores or recalls settings.
- **P.SCAN (Program Scan):** Scans for available programs or stations.
- **TUNING ▲/▼:** Fine-tunes radio frequencies or other settings.
- **Source Selection Buttons (CD, TAPE, AM/FM, VCR, TV):** Directly selects the corresponding audio/video input source on your receiver.

Note: This remote control is designed to operate only the specific KLH R3000 or R3100 unit it is intended for and cannot be programmed to control auxiliary devices.



Figure 1: Redi-Remote Replacement Remote Control. The image displays the full remote, with the lower panel slid down to reveal additional function buttons for source selection and tuning.

MAINTENANCE

Battery Replacement

If the remote control's performance degrades or it stops responding, replace all four AAA batteries. Always replace all batteries at the same time with new ones of the same type. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the proper polarity.
 - Replace the batteries with fresh ones.
 - Verify there are no obstructions between the remote control and the receiver's infrared sensor.
 - Ensure you are within the effective operating range of the receiver.
- **Specific buttons not working:**
 - Check for any debris or stickiness around the button.
 - If the issue persists after cleaning and battery replacement, the remote may require service.

SPECIFICATIONS

Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA (included)
Connectivity Technology	Infrared
Compatible Devices	KLH R3000, KLH R3100 Receivers
Special Feature	No Programming Required

WARRANTY AND SUPPORT

This Redi-Remote replacement control is designed for reliable operation. If you encounter any concerns with the remote after purchase, please contact the seller directly for assistance. Refer to your purchase documentation for specific contact details.

