

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for KLH R5100, R5000 User Manual

Redi-Remote RTR5100

Instruction Manual: Redi-Remote Replacement Remote Control for KLH R5100, R5000

Model: RTR5100

1. INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control, specifically designed to operate KLH audio/video units models R5100 and R5000. This remote is a custom-built replacement and is not an original KLH remote control. It is engineered to perform all essential functions for the specified KLH units without requiring any programming.

The remote control measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness. It is not equipped with laser pointers or LED lights.

2. SETUP AND BATTERY INSTALLATION

The Redi-Remote Replacement Remote Control is designed for immediate use with compatible KLH R5100 and R5000 units and does not require any complex programming steps.

2.1. Battery Installation

To install or replace batteries:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. Four AAA batteries are included with the remote.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for operation.

3. OPERATING THE REMOTE CONTROL

The remote control features a primary set of buttons for common functions and a hidden section with additional controls, accessible by sliding down the lower cover.



Figure 1: Redi-Remote Replacement Remote Control showing both visible and hidden buttons.

This image displays the full remote control. The top section contains frequently used buttons such as power, volume, channel, and number pad. The lower section, initially covered, slides down to reveal advanced controls for tuning,

memory, and audio settings.

3.1. Top Section Buttons

- **PWR (Power):** Turns the KLH unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Changes or shows on-screen display information.
- **VOL +/- (Volume):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH +/- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Pad (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms numerical entries or selections.

3.2. Hidden Section Buttons (Slide Down)

To access these buttons, gently slide the lower cover of the remote control downwards. This reveals additional controls for advanced functions.

- **TUNER:** Selects the tuner mode.
- **PRESET EQ:** Cycles through preset equalizer settings.
- **SLEEP:** (Duplicate function, may offer additional sleep timer options or be a redundant button).
- **DIMMER:** Adjusts the display brightness of the KLH unit.
- **- TUNING +:** Manually tunes radio frequencies up or down.
- **MEMORY:** Saves or recalls tuner presets.
- **- CHANNEL +:** (Duplicate function, may be for preset channel navigation).
- **DIGITAL:** Activates digital audio modes.
- **TEST:** Initiates a test tone or system diagnostic.
- **SURR MODE (Surround Mode):** Cycles through surround sound modes.
- **LEVEL:** Adjusts individual speaker levels in surround sound.
- **Navigation Arrows (Up, Down, Left, Right):** Used for menu navigation and selection.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace all four AAA batteries when the remote's responsiveness decreases or it stops functioning. Always replace with new, high-quality batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Clean the remote control periodically with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the remote in a dry place, away from extreme temperatures, direct sunlight, and high humidity.

5. TROUBLESHOOTING

If you experience issues with your Redi-Remote Replacement Remote Control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check battery orientation: Ensure batteries are inserted with correct polarity.
 - Replace batteries: Install fresh AAA batteries.
 - Clear line of sight: Ensure there are no obstructions between the remote and the KLH unit's infrared receiver.
 - Proximity: Operate the remote within a reasonable distance from the KLH unit.
- **Buttons Require Hard Pressing:**
 - This can sometimes occur due to wear or minor debris under the buttons. Ensure the remote is clean. If the issue persists after battery replacement and cleaning, contact support.
- **Remote Controls Other Devices:**
 - This Redi-Remote is designed to control only the specific KLH units (R5100, R5000) it was made for. It cannot be programmed to control auxiliary devices. If it appears to be controlling other devices, ensure you are pointing it directly at the intended KLH unit.

6. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTR5100
Compatible Devices	KLH R5100, KLH R5000 (Receiver units)
Connectivity Technology	Infrared (IR)
Batteries Required	4 x AAA (included)
Product Dimensions	7.5 x 2.25 x 0.75 inches (approximate)
Item Weight	4.5 ounces
Special Feature	No Programming Required
Max Number of Supported Devices	1 (specific KLH unit)

7. SUPPORT

For any concerns or issues with your Redi-Remote Replacement Remote Control after purchase, please contact the seller directly for assistance. Provide your purchase details and a clear description of the issue to facilitate a prompt resolution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question