

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EatSmart](#) /

› Eat Smart ESKS-10 Precision Elite Digital Kitchen Scale Instruction Manual

EatSmart ESKS-10

Eat Smart ESKS-10 Precision Elite Digital Kitchen Scale Instruction Manual

Model: ESKS-10 | Brand: EatSmart

INTRODUCTION

The Eat Smart ESKS-10 Precision Elite Digital Kitchen Scale is designed for accurate and reliable food measurement in your kitchen. This manual provides essential information for setting up, operating, and maintaining your scale to ensure optimal performance. It features a 15 lb / 7 kg capacity, UltraBright display, and a durable stainless steel platform, making it suitable for various culinary tasks from portion control to baking.

PRODUCT FEATURES

- Precision Weighing:** Measures in 0.05 oz / 1 g increments for accurate results.
- High Capacity:** Accurately weighs up to 15 lbs / 7 kg.
- Tare Function:** Easily subtracts the weight of a container to measure only the ingredients.
- Large Stainless Steel Platform:** Durable and easy-to-clean surface accommodates various bowls and plates.
- UltraBright Display:** Crystal-white backlight ensures easy reading in any lighting condition.
- Multiple Measurement Units:** Switch between ounces, pounds, grams, and kilograms.
- Battery Operated:** Includes 4 AAA batteries for immediate use.

SETUP

- Unpack the Scale:** Carefully remove the scale and all packaging materials from the box.
- Install Batteries:** Locate the battery compartment on the underside of the scale. Insert the 4 AAA batteries, ensuring correct polarity. Close the battery compartment securely.
- Placement:** Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces, or near heat sources or strong electromagnetic fields.



Image: The Eat Smart ESKS-10 Precision Elite Digital Kitchen Scale with its UltraBright display showing '0.000 lb' on a kitchen countertop.

OPERATING INSTRUCTIONS

- Power On/Off:** Press the power button (usually marked with a power symbol or "On/Off") to turn the scale on. The display will show "0.00" or "0g". To turn off, press and hold the power button for a few seconds, or the scale will automatically shut off after a period of inactivity to conserve battery life.
- Select Unit:** Press the "UNIT" button to cycle through the available measurement units: grams (g), ounces (oz), pounds (lb), and kilograms (kg). Select your desired unit before weighing.
- Tare Function:**
 - Place an empty container on the scale. The display will show its weight.
 - Press the "TARE" button. The display will reset to "0.00" or "0g".
 - Add your ingredients to the container. The display will now show only the weight of the ingredients.
 - You can repeat the tare function to add multiple ingredients to the same container.
- Weighing Items:** Place the item(s) directly onto the stainless steel platform or into a tared container. The weight will be displayed on the UltraBright screen.



Image: The Eat Smart ESKS-10 scale displaying "1.40 oz" with a small bowl of blueberries on its platform, surrounded by other baking ingredients.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale's stainless steel platform and body with a damp cloth. Do not immerse the scale in water or use abrasive cleaners. Ensure the scale is completely dry before storage or next use.
- **Storage:** Store the scale in a cool, dry place. Avoid placing heavy objects on the scale when not in use, as this may affect its accuracy over time.
- **Battery Replacement:** If the display indicates low battery or becomes dim, replace all 4 AAA batteries with new ones.

TROUBLESHOOTING

Inaccurate Readings:

Ensure the scale is on a hard, flat, and stable surface. Avoid placing it on carpets or uneven countertops. Check if the batteries are low and replace them if necessary. Make sure no objects are touching the scale's platform other than the item being weighed.

Display Not Turning On:

Check if the batteries are correctly installed and have sufficient charge. Replace batteries if needed.

"Err" or Overload Message:

This indicates that the weight on the scale exceeds its maximum capacity (15 lbs / 7 kg). Remove some weight immediately to prevent damage to the scale.

SPECIFICATIONS

Brand:	EatSmart
Model Number:	ESKS-10
Weight Limit:	15 Pounds / 7 Kilograms
Readout Accuracy:	1 Grams / 0.05 Ounces
Display Type:	LCD with UltraBright Backlight
Material:	Stainless Steel Platform
Power Source:	4 AAA Batteries (Included)
Product Dimensions:	10 x 7.5 x 1 inches
Item Weight:	1.8 Pounds

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact EatSmart customer service. Refer to the product packaging or the official EatSmart website for the most current contact details.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of the Eat Smart ESKS-10 Digital Kitchen Scale.