

PlayGo 3149

PlayGo Delicious Coffee Maker Toy (Model 3149) Instruction Manual

1. INTRODUCTION

Thank you for choosing the PlayGo Delicious Coffee Maker Toy, Model 3149. This pretend play coffee machine is designed to provide an engaging and imaginative experience for children, allowing them to mimic adult coffee-making activities. It features realistic lights, sounds, and a water flow function, making it a delightful addition to any children's kitchen set.

This manual provides essential information for the safe setup, operation, and maintenance of your PlayGo Delicious Coffee Maker Toy. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- **WARNING: CHOKING HAZARD - Small parts.** Not suitable for children under 36 months (3 years) due to small parts that could be swallowed.
- Adult supervision is recommended during play, especially when using water.
- Ensure all components are securely assembled before use.
- Do not immerse the electronic parts of the toy in water. Wipe clean only.
- Batteries should be inserted with the correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly.

3. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- PlayGo Delicious Coffee Maker Toy (Model 3149)
- 1 x Pretend Coffee Cup
- 1 x Pretend "Foam" Disk

- Pretend "Beans"
- Bonus Play Food (e.g., milk carton, sugar cubes, coffee packet)
- 3 x AA Batteries (included)

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside or back of the coffee maker.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

4.2 Water Reservoir Filling

1. Locate the water reservoir on the side or top of the coffee maker.
2. Carefully pour 1-2 cups of clean water into the reservoir. Do not overfill.

4.3 Adding Pretend Coffee Beans

1. Open the lid on top of the coffee maker where the pretend beans are stored.
2. Place the pretend coffee beans into the designated compartment.



Image 1: The PlayGo Delicious Coffee Maker Toy, ready for use.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- Locate the On/Off switch, typically on the front or side of the machine.
- Press the switch to turn the coffee maker On. Lights and sounds may activate.
- Press the switch again to turn the coffee maker Off.



Image 2: Pressing the power button to activate the toy coffee maker.

5.2 Selecting a Beverage

- Use the selection switch or buttons to choose a desired beverage type, such as Latte, Cappuccino, or Macchiato. The display screen will show the selected option.



Image 3: Turning the dial to select a beverage type.

5.3 Brewing Coffee

1. Place the pretend coffee cup under the spout.
2. Press the brew button. The machine will simulate grinding, perking, dripping, and steaming sounds.
3. Observe as water drips into the cup and the realistic "foam" disk rises, simulating a freshly brewed drink.

6. MAINTENANCE

- **Cleaning:** To clean the toy, wipe surfaces with a slightly damp cloth. Do not use abrasive cleaners. Ensure no water enters the battery compartment or electronic components.
- **Water Drainage:** After play, empty any remaining water from the reservoir and drip tray to prevent

stagnation.

- **Battery Care:** If the toy will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on, no lights or sounds.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AA batteries.
Water is not flowing into the cup.	Water reservoir is empty or too low.	Refill the water reservoir with clean water. Ensure the brew button is pressed.
Sounds or lights are intermittent or weak.	Low battery power.	Replace all 3 AA batteries with new ones.

8. SPECIFICATIONS

- **Model Number:** 3149
- **Brand:** PlayGo
- **Material:** Plastic
- **Dimensions (L x W x H):** Approximately 8 x 4 x 9 inches (20.4 x 15 x 24.5 cm)
- **Item Weight:** Approximately 2 pounds
- **Batteries:** 3 x AA batteries (included)
- **Recommended Age:** 36 months - 12 years

9. WARRANTY AND SUPPORT

This product is intended for pretend play and is subject to standard consumer rights. For any questions, concerns, or support regarding your PlayGo Delicious Coffee Maker Toy, please contact the retailer or manufacturer directly. Please retain your proof of purchase for any warranty claims.