

Miele W5877 WPS

Miele W5877 WPS Washing Machine User Manual

Model: W5877 WPS

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Miele W5877 WPS washing machine. Designed for optimal performance, this front-loading appliance features an 8 kg capacity and a maximum spin speed of 1600 RPM, ensuring thorough cleaning and efficient water extraction. Please read this manual carefully before using the appliance for the first time to ensure correct operation and to prevent damage.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Read all instructions before operating the washing machine.
- Keep children and pets away from the appliance during operation.
- Do not overload the washing machine; refer to the capacity specifications.
- Unplug the appliance from the power supply before performing any cleaning or maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Ensure the power cord is not damaged and is properly grounded.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

3.1 Unpacking

Carefully remove all packaging materials, including the transport bolts at the rear of the machine. Retain packaging for future transport if needed.

3.2 Location

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and access.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Position the drain hose securely into a standpipe or sink, ensuring it is not kinked.

3.4 Electrical Connection

Plug the washing machine into a properly grounded electrical outlet. Do not use extension cords or adapters. Verify that the voltage and frequency match the specifications on the appliance's rating plate.

3.5 Leveling

Adjust the feet of the washing machine using a wrench until the appliance is perfectly level and stable. This will minimize vibration and noise during operation.



Figure 1: Front view of the Miele W5877 WPS washing machine, showing the control panel, detergent dispenser, and large front-loading door. This image illustrates the compact design suitable for various home environments.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe use of your washing machine.

4.1 Loading Laundry

Open the door and load laundry loosely into the drum. Do not overfill; ensure there is enough space for the clothes to tumble freely. Close the door firmly.

4.2 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and any fabric softener or pre-wash detergent to their respective compartments. Refer to detergent packaging for dosage recommendations.

4.3 Selecting a Program

Turn the program selector dial or use the touch controls to choose the desired wash program. The Miele W5877 WPS offers 11 different programs, including options for cottons, delicates, synthetics, and more. The display will show the selected program and estimated cycle time.

4.4 Adjusting Settings

Depending on the selected program, you may be able to adjust temperature, spin speed, or add extra options like pre-wash or extra rinse using the touch controls on the panel.

4.5 Starting a Wash Cycle

Press the 'Start/Stop' button to begin the wash cycle. The door will lock, and the machine will start filling with water.

4.6 End of Cycle

Once the wash cycle is complete, the machine will signal with an audible alert or a message on the display. The door will unlock. Remove laundry promptly to prevent creasing.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to remove any detergent residue.

5.2 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to clean the drum and remove any build-up.

5.3 Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Open the cover, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean any lint or debris and reinsert it securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, try these solutions for common issues.

- Machine not starting:** Check if the power cord is plugged in, the door is fully closed, and the water supply is turned on.
- Water not draining:** Inspect the drain hose for kinks or blockages. Clean the drain pump filter.
- Excessive vibration/noise:** Ensure the machine is level and all transport bolts have been removed. Check if the load is balanced inside the drum.
- Detergent residue in dispenser:** Clean the dispenser drawer thoroughly. Ensure water pressure is adequate.
- Error codes:** If an error code appears on the display, consult the specific error code section in the full Miele service manual or contact Miele customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Miele W5877 WPS washing machine.

Feature	Specification
Manufacturer	Miele
Model Identifier	W5877 WPS
Product Dimensions (W x D x H)	59.5 x 61.5 x 85 cm
Energy Efficiency Class	A+++
Capacity	8 Kilograms
Maximum Spin Speed	1600 Revolutions per Minute
Installation Type	Freestanding
Color	White
Control Type	Touch

Feature	Specification
Door Opening	Front-loader
Item Depth	615 Millimeters
ASIN	B009FXILYK
Available on Amazon.de since	September 24, 2012
Recommended Product Use	Home
Operating Mode	Fully Automatic
Number of Programs	11

8. WARRANTY AND SUPPORT

For detailed warranty information, terms, and conditions, please refer to the warranty card included with your appliance or visit the official Miele website. For technical support, spare parts, or service requests, please contact Miele customer service directly. Have your model number (W5877 WPS) and serial number ready when contacting support.

Documents - Miele – W5877 WPS



[\[pdf\] Borchure](#)

Laundry Range 2013 Miele Brochure armaghelectrical sites default files |||

Useful contact details 0845 365 0555 info miele.co.uk For more information or to find your nearest s ... tures:H oneycomb Drum, Water Control System, Time Left, Delay Start, Express Wash 20 Tumble dryer **W5877 WPS** 8kg RPM Spin Speed: 1600 max Energy Rating: A Dimensions*: 851 x 595 x 615mm Decibe...
lang:en score:19 filesize: 3.28 M page_count: 10 document date: 2015-04-28