

[manuals.plus](#) /› [Brookstone](#) /› [Brookstone Max 2 Cordless Dual-Node Percussion Massager User Manual](#)**Brookstone 792451**

# Brookstone Max 2 Cordless Dual-Node Percussion Massager User Manual

## INTRODUCTION

Thank you for choosing the Brookstone Max 2 Cordless Dual-Node Percussion Massager. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your device. Please read this manual thoroughly before using the massager and retain it for future reference.

The Brookstone Max 2 is designed to deliver a powerful, deep tissue percussion massage, helping to soothe sore muscles and promote relaxation. Its cordless design offers convenience and flexibility for use anywhere.

## IMPORTANT SAFETY INSTRUCTIONS

### **WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:**

- Always unplug the massager from the electrical outlet immediately after charging and before cleaning.
- Do not use while bathing or in a shower.
- Do not place or store the massager where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Never use pins or other metallic fasteners with this appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact customer service for examination and repair.
- Keep the cord away from heated surfaces.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening.
- Do not use outdoors.

- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use on sensitive skin areas or where circulation is poor.
- The use of the massager by children or incapacitated persons may be dangerous.
- Consult your doctor before using this massager if you are pregnant, have a pacemaker, or have any concerns regarding your health.

## PRODUCT OVERVIEW

---

The Brookstone Max 2 features a durable, lightweight machined-aluminum body with two ergonomic handles for comfortable use. The dual percussion nodes deliver targeted massage.





Image: The Brookstone Max 2 Cordless Dual-Node Percussion Massager, showing its silver body, dual massage nodes, and ergonomic handle design.

Key components include:

- **Dual Percussion Nodes:** Deliver deep tissue massage.
- **Ergonomic Handles:** Provide a secure and comfortable grip for easy maneuverability.
- **Control Panel:** For power and speed adjustments (location not explicitly shown in image, but implied by functionality).
- **Charging Port:** For connecting the AC adapter.

## CHARGING THE MASSAGER

---

The Brookstone Max 2 is powered by a rechargeable Lithium-Ion battery, providing cordless operation. Before first use, fully charge the massager.

1. Locate the charging port on the massager.
2. Connect the included AC adapter to the charging port.
3. Plug the AC adapter into a standard electrical outlet.
4. Allow the massager to charge until the battery indicator shows a full charge (refer to device for specific indicator behavior).
5. Once fully charged, unplug the AC adapter from both the outlet and the massager.

**Note:** The massager can be used while plugged in, but the battery will not charge until the unit is turned off. For optimal battery life, it is recommended to recharge the Lithium-Ion battery as needed rather than waiting for it to be completely drained.

## OPERATING INSTRUCTIONS

---

Follow these steps to operate your Brookstone Max 2 Percussion Massager:

- Power On:** Press the Power button to turn on the massager. It will start at the lowest speed setting.
- Adjust Speed:** Use the speed control buttons (or dial, depending on model variation) to select one of the 5 available speed intensities. The speeds range from 1,750 to 2,550 RMS (Rotations Per Minute).
- Apply Massage:** Gently place the dual percussion nodes on the desired muscle area. Use the ergonomic handles to guide the massager and apply appropriate pressure. The weight of the unit can assist in applying pressure.
- Target Areas:** The dual nodes are designed to effectively massage larger muscle groups and can pass on either side of the spine for back massage. Avoid direct contact with bones or joints.
- Automatic Shut-off:** The massager is equipped with a 20-minute auto-off feature to prevent overheating and ensure safety. After 20 minutes of continuous use, the device will automatically power down. You can restart it if further massage is desired.
- Power Off:** Press the Power button again to turn off the massager when finished.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your massager.

- Cleaning:** Ensure the massager is turned off and unplugged before cleaning. Wipe the unit with a soft, slightly damp cloth. Do not use abrasive cleaners, solvents, or immerse the unit in water.
- Storage:** Store the massager in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the massager.
- Cord Care:** Do not wrap the power cord around the massager. Store the cord loosely to prevent damage.

## TROUBLESHOOTING

---

| Problem                    | Possible Cause                        | Solution   |
|----------------------------|---------------------------------------|--|
| Massager does not turn on. | Battery is depleted.                  | Charge the massager using the provided AC adapter.   |
| Massager stops during use. | 20-minute auto-off feature activated. | This is normal operation. You can restart the massager if desired.   |
| Reduced massage intensity. | Low battery charge.                   | Recharge the massager.   |
| AC adapter not charging.   | Faulty adapter or connection.         | Ensure the adapter is securely connected to both the massager and the power outlet. If issues persist, contact customer support. |

## SPECIFICATIONS

---

- Model Number:** 792451
- Power Source:** Rechargeable Lithium-Ion Battery
- Speed Settings:** 5 (1,750 to 2,550 RMS)

- **Auto-off Timer:** 20 minutes
- **Product Dimensions:** 6 x 6.5 x 13 inches
- **Product Weight:** 3.8 Pounds
- **Manufacturer:** Brookstone Stores, Inc.

## **WARRANTY AND CUSTOMER SUPPORT**

---

Brookstone products are designed for quality and performance. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Brookstone website.

If you encounter any issues or have questions not addressed in this manual, please contact Brookstone customer support for assistance. Keep your purchase receipt as proof of purchase for warranty claims.