

[manuals.plus](#) /› [Cuisinart](#) /› [Cuisinart 4-Slice Compact Plastic Toaster CPT-142P1 Instruction Manual](#)**Cuisinart CPT-142P1**

# Cuisinart 4-Slice Compact Plastic Toaster CPT-142P1 Instruction Manual

Model: CPT-142P1

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Cuisinart 4-Slice Compact Plastic Toaster, Model CPT-142P1. Please read all instructions thoroughly before using the appliance and retain this manual for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

15. Do not attempt to dislodge food when toaster is plugged into electrical outlet.
16. To avoid possibility of fire, do not leave toaster unattended during use.
17. This appliance is for household use only.

## PRODUCT FEATURES

---

- **Multiple Toasting Functions:** This compact unit has versatile toasting functions such as Toast, Bagel, Defrost, Reheat, and Cancel, ensuring your toasting needs are met.
- **Shade Control Settings:** A 7-setting shade dial offers a full range of browning options to allow perfect customization of any piece of bread. Settings include light shade, medium shade, and dark shade.
- **Compact Design:** Includes 1.5-inch wide slots allowing for a wide variety of items to be toasted.
- **High Lift Lever:** Pops up when toast is finished for easy retrieval.
- **Dual Independent Toasting Controls:** Allows you to toast two different sets of toast at the same time with separate settings.
- **Easy Cleanup:** Features a removable crumb tray.
- **Cord Wrap:** Located underneath the unit to manage unsightly power cords while not in use.
- **BPA Free:** This product is BPA free.

## SETUP

---

1. **Unpack:** Carefully remove the toaster from its packaging. Remove all packing materials, labels, and tags.
2. **Placement:** Place the toaster on a clean, dry, and stable surface. Ensure there is adequate clearance around the toaster for proper ventilation.
3. **First Use (Burn-Off):** Before using for the first time, operate the toaster without bread on shade setting 4. This will burn off any manufacturing residues and eliminate any odor. It is normal for a slight odor to be present during this initial operation.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

---

Your Cuisinart 4-Slice Compact Plastic Toaster features dual independent controls, allowing you to toast different items or shades simultaneously in each two-slice section.

1. **Insert Bread:** Place up to two slices of bread, bagels, or other items into each set of toasting slots. The 1.5-inch wide slots accommodate various bread types.
2. **Select Shade Setting:** Turn the shade control dial (located on each side) to your desired browning level, from 1 (lightest) to 7 (darkest).
3. **Select Function (Optional):** Press the desired function button for each side:
  - **BAGEL:** Toasts the cut side of the bagel more than the other side.
  - **DEFROST:** Defrosts and then toasts frozen bread.
  - **REHEAT:** Reheats previously toasted items without additional browning.
  - **CANCEL:** Stops the toasting cycle at any time.
4. **Start Toasting:** Press the carriage lever down until it locks into place. The selected function button (if any) will illuminate, and toasting will begin.
5. **Retrieve Toast:** When the toasting cycle is complete, the toast will automatically pop up, and the carriage lever will return to its original position. Use the high lift lever to raise smaller items for easier retrieval.

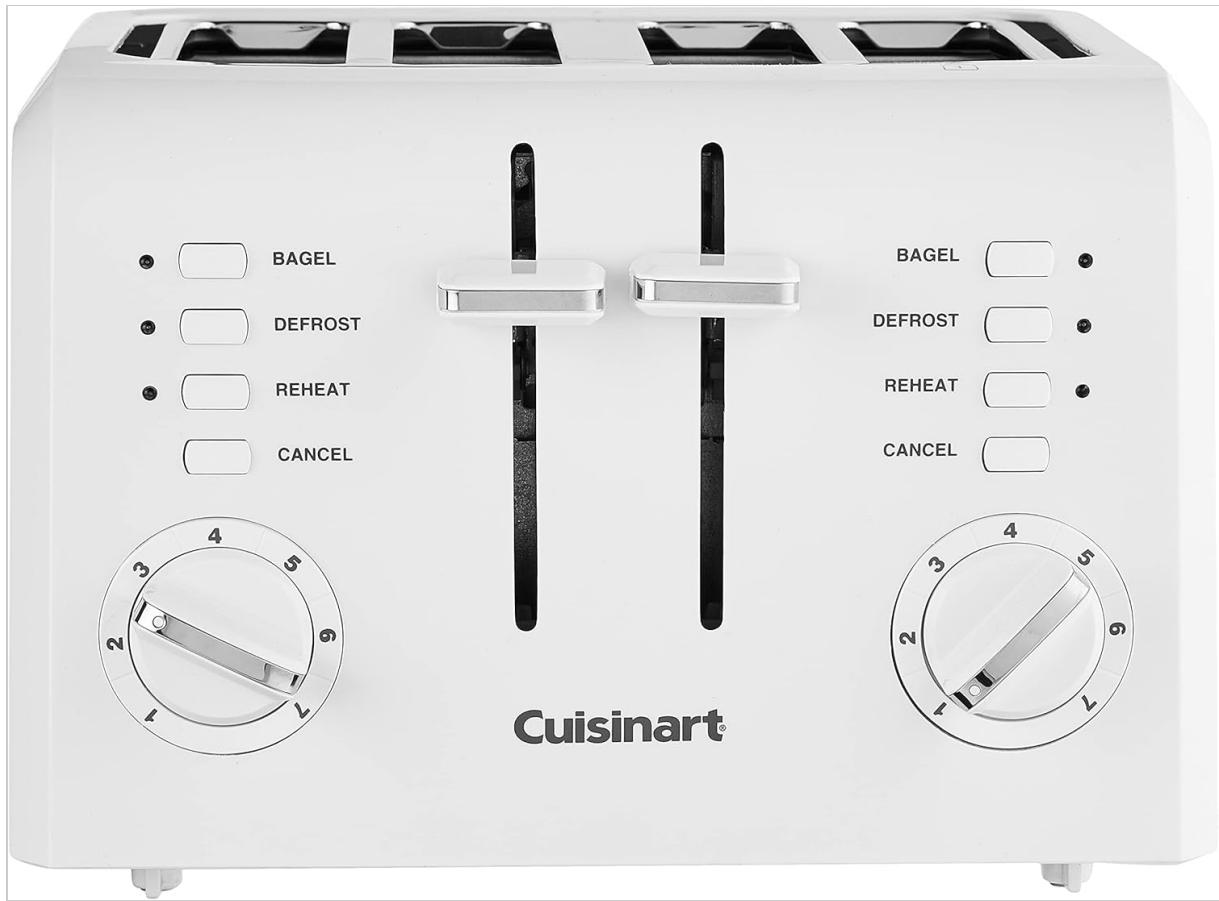


Figure 1: Front view of the Cuisinart 4-Slice Toaster, highlighting the dual control panels for independent operation of each two-slice section.



Figure 2: Detailed view of a control panel, illustrating the shade dial and function buttons for precise toasting control.

## MAINTENANCE AND CLEANING

- 1. Unplug and Cool:** Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
- 2. Crumb Tray:** The toaster features two removable crumb trays located at the back of the unit. Slide out each tray, discard crumbs, and wipe the trays clean with a damp cloth. Dry thoroughly before reinserting.
- 3. Exterior Cleaning:** Wipe the exterior of the toaster with a damp cloth and dry thoroughly. Do not use abrasive cleaners or harsh chemicals.
- 4. Cord Storage:** The power cord can be wrapped around the cord storage area underneath the toaster when not in use.



Figure 3: Rear view of the toaster, showing the location of the two removable crumb trays for easy cleaning.



Figure 4: Underside of the toaster, illustrating the integrated cord wrap for tidy storage.

## TROUBLESHOOTING

- **Toaster Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker if necessary.
- **Uneven Toasting:** Different types of bread toast at different rates. Adjust the shade setting accordingly. Ensure bread slices are centered in the slots.
- **Toast Not Popping Up:** If toast does not pop up, ensure the carriage lever was fully depressed and locked into place. If the issue persists, unplug the unit and contact customer support.
- **Smoke or Burning Smell:** Immediately press the CANCEL button and unplug the toaster. Remove any lodged food particles after the toaster has cooled. Clean the crumb tray.

## SPECIFICATIONS

Specification	Detail
Brand	Cuisinart

Model Number	CPT-142P1
Color	White
Material	Plastic
Product Dimensions	10.7"D x 10.8"W x 7.2"H
Wattage	825 watts
Number of Slices	4
Number of Settings	7 (Shade Dial)
Voltage	120 Volts
Item Weight	4.5 Pounds
Special Features	Compact Design; 7-Setting Shade Dial; Reheat, Defrost and Bagel Controls; Slide-out Crumb Tray



Figure 5: Product dimensions of the Cuisinart 4-Slice Compact Plastic Toaster.

## WARRANTY AND SUPPORT

This Cuisinart product is covered by a **LIMITED 3-YEAR WARRANTY**. For detailed warranty information, troubleshooting steps, or any questions regarding warranty policies, please refer to the official Cuisinart website or contact Cuisinart customer support directly. Keep your purchase receipt as proof of purchase.

