

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Replacement Remote Control for DURABRAND DVD1002, PDV705

Redi-Remote RTDVD1002

Instruction Manual

Replacement Remote Control for DURABRAND DVD1002, PDV705

INTRODUCTION

This manual provides comprehensive instructions for the use and maintenance of your Redi-Remote replacement remote control, specifically designed for DURABRAND DVD1002 and PDV705 units. This remote is a custom-built replacement and is not an original DURABRAND product. It is engineered to perform all essential functions of the original remote without requiring any programming.

PRODUCT OVERVIEW



Figure 1: Redi-Remote Replacement Remote Control. This image displays the full remote control, featuring the upper section with primary navigation and number buttons, and the lower section, which slides down to reveal additional playback and setup controls.

The Redi-Remote replacement control features a durable design with clearly labeled buttons. A unique feature of this remote is the sliding cover located on the lower half, which conceals additional function buttons. To access these buttons, gently slide the cover downwards.

SETUP

1. Battery Installation

Your remote control requires four (4) AAA batteries, which are included. To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

This Redi-Remote replacement control is pre-programmed and requires no additional setup or programming to operate your DURABRAND DVD1002 or PDV705 unit. Simply install the batteries, and the remote is ready for use.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The remote is divided into two main sections: the upper primary control area and the lower advanced function area, accessible by sliding down the cover.

Upper Section Buttons:

- **PWR (Power):** Turns the DVD player on or off.
- **SLEEP:** Activates or deactivates the sleep timer function.
- **TV/VIDEO:** Switches the input source on your television (if supported by the DVD player's output).
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **CH +/- (Channel):** Navigates through channels (if applicable to the connected device).
- **MENU:** Accesses the main menu of the DVD player.
- **RECALL:** Recalls the previous channel or function.
- **Number Buttons (0-9, 100):** Directly input channel numbers, track numbers, or menu selections.
- **ENT (Enter):** Confirms a selection or input.

Lower Section Buttons (Slide Down to Access):

- **TITLE:** Accesses the DVD title menu.
- **SETUP:** Enters the system setup menu.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection.
- **Playback Controls (Play/Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Backward):** Standard controls for media playback.
- **SUB-T (Subtitle):** Toggles subtitle display.

- **AUDIO:** Selects audio tracks or languages.
- **SEARCH:** Initiates search functions within media.
- **REPEAT:** Toggles repeat playback modes.
- **PROG/ANGLE:** Accesses programming functions or changes camera angles on DVDs.
- **SLOW/ZOOM:** Controls slow-motion playback or zoom features.

For specific functions related to your DURABRAND DVD1002 or PDV705 unit, refer to the original device's user manual.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, consider the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the DVD player's infrared sensor. Obstructions can block the signal.
- **Limited Functionality:**
 - Confirm that the remote is pointed directly at the DVD player.
 - Ensure the sliding cover is fully open to access all advanced functions if you are trying to use those buttons.
- **Interference:** Strong light sources (like direct sunlight or fluorescent lights) can sometimes interfere with infrared signals. Try operating the remote in a different lighting condition.

If problems persist after attempting these steps, please refer to the support information provided.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces

Model Number	RTDVD1002
Batteries	4 AAA batteries (included)
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	DURABRAND DVD1002, PDV705 (DVD/Blu-ray Player)
Connectivity Technology	Infrared

WARRANTY AND SUPPORT

This Redi-Remote replacement control is designed for reliable performance. While specific warranty details are not provided in this manual, the manufacturer stands behind its product.

Customer Support: If you encounter any concerns or issues with your remote control after purchase, please contact the seller directly for assistance. They are equipped to provide support and resolve any product-related inquiries.

For contact information, please refer to your purchase documentation or the seller's details on the platform where the product was acquired.