

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for SANSUI Models VHF6010, GOJ12313, VR5005, 07660CA030

Redi-Remote RT07660CA030

Redi-Remote Replacement Remote Control Instruction Manual

Model: RT07660CA030

1. PRODUCT OVERVIEW

This Redi-Remote replacement remote control is specifically designed to operate various SANSUI units, including models VHF6010, GOJ12313, VR5005, 07660CA030, VAHFA6741GST, VAHFA6741GSTA, MVR4046A, and 07660CA03B. It functions as a direct replacement for the original SANSUI remote control number 07660CA030.

The remote is pre-programmed and ready for use with compatible devices. It is not an original SANSUI remote but a custom-built replacement by Redi-Remote.



Image 1.1: The Redi-Remote replacement remote control. Note the sliding cover on the lower half.

The remote features a sliding cover over its lower half. This cover can be moved down to reveal additional

buttons for extended functionality.

2. SETUP AND BATTERY INSTALLATION

The Redi-Remote requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for use. No programming is required for the specified SANSUI units.

3. OPERATING INSTRUCTIONS

This remote control is designed to perform all functions of the original SANSUI remote for the compatible units. It operates using infrared (IR) technology.

- **Direct Operation:** Point the remote control directly at the infrared receiver on your SANSUI unit (VCR/DVD player).
- **Button Functions:** Press the corresponding buttons on the remote to control functions such as power, play, pause, stop, fast forward, rewind, channel selection, volume, and menu navigation.
- **Sliding Cover:** If certain functions are not immediately visible, slide down the lower cover of the remote to access additional buttons.
- **Auxiliary Devices:** This Redi-Remote cannot be programmed to control any auxiliary devices (e.g., televisions, cable boxes) other than the specific SANSUI unit it is designed for.

The maximum effective operating range for the remote is approximately 20 feet (6 meters).

4. MAINTENANCE

- **Battery Replacement:** Replace all four AAA batteries when the remote's performance diminishes or it stops responding. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).

- Replace old batteries with new ones.
- Check for any obstructions between the remote and the SANSUI unit's IR receiver.
- Ensure you are within the maximum operating range (approximately 20 feet).
- **Certain buttons not working:**
 - Verify that the sliding cover is positioned correctly to reveal the desired buttons.
 - Confirm that the SANSUI unit supports the specific function you are trying to use.
- **Remote does not control other devices:**
 - This remote is designed exclusively for the specified SANSUI units and cannot be programmed for auxiliary devices.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT07660CA030
Compatible Devices	SANSUI VCR/DVD (VHF6010, GOJ12313, VR5005, 07660CA030, VAHFA6741GST, VAHFA6741GSTA, MVR4046A, 07660CA03B)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Button Quantity	58
Maximum Range	20 Feet (approx. 6 meters)
Power Source	4 x AAA Batteries (included)
Item Dimensions (L x W x H)	7.5" x 2.25" x 0.75" (19.05 cm x 5.72 cm x 1.91 cm)
Item Weight	4.5 Ounces (approx. 127.57 grams)
Special Features	Ergonomic design, Sliding lower cover

7. WARRANTY AND SUPPORT

This product is a custom replacement remote manufactured by Redi-Remote. Specific warranty details are not provided in the product information. For any concerns with the remote after purchase, please contact the seller directly for assistance.

For further support or inquiries, refer to the contact information provided by your retailer or the Redi-Remote manufacturer.