

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for ILIVE REMITP180 and ITP180B

Redi-Remote RTREMITP180

Redi-Remote Replacement Remote Control User Manual

For ILIVE Models REMITP180 and ITP180B

INTRODUCTION

This document provides comprehensive instructions for the Redi-Remote replacement remote control, specifically designed for compatibility with ILIVE REMITP180 and ITP180B units. This remote offers direct functionality without the need for programming.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries, which are included with the product. To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

2. Initial Use

This Redi-Remote replacement control is pre-programmed for the specified ILIVE models. No additional programming steps are required. Simply install the batteries, and the remote is ready for use.

OPERATING INSTRUCTIONS

The remote control features a two-part design: an upper section with primary controls and a lower section with advanced functions, accessible by sliding down the cover.



Image 1: Front view of the Redi-Remote replacement remote control. The image displays the full layout of buttons, including the upper section with power, volume, channel, and number pad, and the lower section revealed by a sliding cover, which contains media playback, audio adjustment, and source selection buttons.

Upper Section Controls

- **PWR (Power):** Turns the ILIVE unit on or off.
- **TV/VIDEO:** Switches between TV and video input sources.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **DISP (Display):** Shows on-screen display information.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **CH+ / CH-:** Changes channels up or down.
- **MUTE:** Silences or restores audio output.
- **MENU:** Accesses the system menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Numeric Keypad (0-9, 100, ENT):** Used for direct channel entry and other numerical inputs.

Lower Section Controls (Slide Down to Access)

To access these buttons, slide the lower cover of the remote control downwards.

- **EJECT:** Ejects media (if applicable to the ILIVE unit).
- **ALARM:** Sets or adjusts alarm functions.
- **CLOCK:** Sets or displays the clock.
- **SLEEP:** (Duplicate function, may offer additional sleep timer options).
- **REPEAT:** Repeats playback of a track or playlist.
- **[DOT]:** Used for decimal input or specific functions.
- **- BASS +:** Adjusts bass levels.
- **- TREBLE +:** Adjusts treble levels.
- **SHUFFLE:** Toggles shuffle playback mode.
- **EQ:** Cycles through equalizer presets.
- **Navigation Arrows (Left, Right, Up, Down):** Used for menu navigation and selection.
- **MEM (Memory):** Stores or recalls settings.
- **SELECT:** Confirms a selection.
- **IPOD:** Selects iPod input source or controls iPod functions.
- **TUNE/SKIP (|<> / >>|):** Skips to the previous or next track/station.
- **Play/Pause (▶ / ||):** Starts or pauses playback.
- **Stop (■):** Stops playback.
- **ALBUM + / ALBUM -:** Navigates through albums.
- **CHAPTER + / CHAPTER -:** Navigates through chapters.
- **MEMORY + / MEMORY -:** Adjusts memory settings.
- **PLAYLIST + / PLAYLIST -:** Navigates through playlists.
- **SOURCE:** Cycles through input sources.
- **DISPLAY:** Toggles display information.

MAINTENANCE

Battery Replacement

When the remote control's performance diminishes or it stops responding, replace all 4 AAA batteries with new ones. Refer to the "Battery Installation" section for instructions.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed and not depleted. Replace if necessary.
 - Check for any obstructions between the remote control and the ILIVE unit's infrared receiver.
 - Ensure you are within the effective operating range and pointing the remote directly at the unit.
- **Certain functions not working:**
 - Verify that the ILIVE unit supports the specific function you are trying to use.
 - Ensure the lower cover is fully slid down to access all buttons if you are attempting to use advanced functions.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTREMITP180
Compatible Devices	ILIVE REMITP180, ITP180B (Soundbar)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries	4 AAA batteries (included)

WARRANTY INFORMATION

Specific warranty details for this Redi-Remote replacement control are not provided in the product information. Please refer to your purchase documentation or contact the seller directly for warranty inquiries.

SUPPORT

For further assistance or questions regarding your Redi-Remote replacement control, please refer to the contact information provided by your retailer or the seller at the time of purchase.