

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for MAGNAVOX Models TS2773C104, TS2773, TS2773C101

Redi-Remote RT483521917601

Redi-Remote Replacement Remote Control User Manual

For MAGNAVOX Models: TS2773C104, 483521917601, TS2773, TS2773C101, 00M145DABA02, TS2773C102

1. PRODUCT OVERVIEW

This document provides instructions for the Redi-Remote replacement remote control, designed to function with specific MAGNAVOX television models. This remote is a custom replacement and is not an original MAGNAVOX product.

1.1 Compatible Models

This remote control is compatible with the following MAGNAVOX units:

- TS2773C104
- 483521917601
- TS2773
- TS2773C101
- 00M145DABA02
- TS2773C102

1.2 Remote Control Layout



Image 1.1: Front view of the Redi-Remote replacement remote control. The remote features a top section with primary controls and a lower section with additional functions, accessible by sliding down a cover.

2. SETUP

2.1 Battery Installation

The remote control requires 4 AAA batteries for operation. These batteries are typically included with the remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by an arrow (if present).
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: This remote control does not require programming. It is pre-configured for the specified MAGNAVOX models.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement control.

3.1 Top Section Buttons

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen information.
- **VOL +/- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH +/- (Channel Up/Down):** Changes the television channel.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Pad (0-9):** Directly enters channel numbers.
- **100:** Used for entering three-digit channel numbers (e.g., for channel 101, press 100 then 1).
- **ENT (Enter):** Confirms channel selection or menu options.

3.2 Lower Section Buttons (Sliding Cover)

To access the lower section buttons, slide down the cover located below the number pad. This section contains controls primarily for media playback and advanced television functions.

- **STATUS/EXIT:** Displays status information or exits current menu/function.
- **PLAY ▲:** Initiates playback of media.
- **A/CH:** Likely for audio channel selection or advanced channel functions.
- **◀ REW (Rewind):** Rewinds media playback.
- **STOP/MENU:** Stops media playback or accesses a media menu.
- **FF ▶:** Fast forwards media playback.
- **SMART PICTURE:** Adjusts picture settings for optimal viewing.
- **SOUND:** Adjusts audio settings.
- **PAUSE ■■:** Pauses media playback.
- Additional unlabeled buttons are typically for specific functions related to the connected device or

television model. Refer to your television's original manual for their exact purpose.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.

5. TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following:

- **No Response:** Ensure the batteries are correctly inserted and are not depleted. Replace with fresh batteries if necessary.
- **Interference:** Make sure there are no obstructions between the remote control and the television's infrared sensor.
- **Range:** Operate the remote within a reasonable distance and angle from the television.
- **Specific Functions:** If certain buttons do not work, verify that your television model supports that specific function. This remote is designed to replicate the original remote's functions for the listed compatible models.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT483521917601
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Compatible Devices	Television
Special Feature	No Programming Required

7. SUPPORT

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the seller directly for assistance.