

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Technics Audio Systems

Redi-Remote RTEUR647133

Redi-Remote Replacement Remote Control Instruction Manual

For Technics Audio System Models: SUG88, SADX930, SAAX7, SDS9225, EUR646498, SAAX730, EUR647133, SADA8, EUR646496, SCS2250, SADX1040

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Redi-Remote replacement remote control. This remote is a custom-built replacement designed to be compatible with specific Technics audio system models, ensuring full functionality for the designated unit without requiring any programming.

2. PRODUCT FEATURES

- **Direct Compatibility:** Pre-programmed to work immediately with specified Technics audio system models. No additional setup or programming is required.
- **Dedicated Functionality:** Designed to perform every function of the original remote for the specific unit it controls. It cannot be programmed to control auxiliary devices.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Sliding Cover:** Features a protective cover over the lower half of the remote, which slides down to reveal additional buttons for advanced functions.
- **Infrared Technology:** Utilizes standard infrared (IR) signals for communication with your audio system.



Figure 1: Redi-Remote Replacement Remote Control. This image displays the front view of the remote control, highlighting its button layout and overall design.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. (Batteries are included with the remote).
4. Close the battery compartment cover securely.

3.2 Initial Use

Your Redi-Remote replacement control is pre-programmed and ready for use immediately after battery installation. No additional setup or code entry is required. Simply point the remote at your Technics audio system and begin operation.

4. OPERATION

4.1 Basic Functions

Point the remote control directly towards the infrared receiver on your Technics audio system. Press the desired function buttons (e.g., Power, Volume Up/Down, Input Select, Play/Pause) to control your device.

4.2 Accessing Lower Buttons

The remote features a sliding cover on its lower half. To access additional or advanced function buttons, gently slide this cover downwards. Once revealed, these buttons can be used for their intended functions on your Technics audio system.

4.3 Device Control Limitations

This Redi-Remote is specifically designed to control only the Technics audio system for which it is intended. It cannot be programmed or used to control other auxiliary devices such as televisions, DVD players, or other audio components.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

5.3 Storage

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the audio system's IR receiver.

- Verify that you are within the effective range and pointing the remote directly at the receiver.

- **Certain functions not working:**

- Confirm that the specific function is supported by your Technics audio system and the original remote.
- Ensure the sliding cover is open if the desired button is located underneath.
- Note that while this remote aims to replicate all original functions, some highly specific or advanced audio settings (e.g., individual rear speaker level adjustments) might be dependent on the original unit's interface or specific original remote features that may not be fully replicated by a replacement.

- **Remote appears damaged:**

- If the remote has been dropped or sustained physical damage, its functionality may be compromised.

7. SPECIFICATIONS

Model Number	RTEUR647133
Product Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Dedicated to the specified Technics audio system)
Special Feature	No Programming Required

8. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement control after purchase, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5KZCW>

More documents and user manuals: <https://manuals.plus/>