

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTS7694

Redi-Remote Replacement Remote Control User Manual

For GPX Models S7794 and S7694

1. INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, specifically designed to operate GPX models S7794 and S7694. This remote is a custom-built replacement and is not an original GPX remote control. It is engineered to perform all functions of the specific unit it is designed to control without requiring any programming.



Figure 1: Front view of the Redi-Remote replacement remote control. The remote is black with various control buttons. The upper section features power, volume, channel, mute, menu, display, and recall buttons, along with a numeric keypad. The lower section, which is revealed by sliding down a cover, contains additional function buttons for media playback, tuning, clock adjustment, and other features.

2. SETUP

2.1 Battery Installation

Your Redi-Remote replacement remote control requires four (4) AAA batteries, which are included with the remote. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2.2 Initial Setup

This Redi-Remote is designed for immediate use with compatible GPX models S7794 and S7694. **No programming is required.** Simply install the batteries, and the remote is ready to operate your device.

3. OPERATING INSTRUCTIONS

To operate your device, point the remote control directly at the infrared sensor on your GPX unit and press the desired button. Ensure there are no obstructions between the remote and the device.

3.1 Main Control Buttons (Upper Section)

- **PWR (Power):** Turns the device on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / VOL - (Volume):** Increases or decreases the volume level.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the device's main menu.
- **RECALL:** Recalls the previously viewed channel.
- **Numeric Keypad (0-9, 100, ENT):** Used for direct channel entry or other numerical inputs. Press 'ENT' to confirm direct channel entry.
- **SLEEP:** Activates the sleep timer function.

3.2 Advanced Function Buttons (Lower Section)

The lower half of the remote control is covered by a sliding panel. Slide this panel down to reveal additional function buttons for advanced operations.

- **OPEN/CLOSE:** Opens or closes the disc tray (for compatible devices).
- **CD DISC SKIP / PLAY/PAUSE / RANDOM:** Controls CD playback functions.
- **TUNER/BAND:** Selects tuner bands (e.g., AM/FM).
- **MODE/REMAIN:** Changes operating modes or displays remaining time.
- **PROG MEM/CLOCK (ADJ):** Programs memory settings or adjusts the clock.
- **TAPE:** Selects tape deck function.
- **SKIP/TUNING/CLOCK:** Used for skipping tracks, tuning radio frequencies, or setting the clock.
- **PHONO:** Selects phono input.

- **STOP/MEM:** Stops playback or stores memory settings.
- **INTRO:** Plays the introductory part of tracks.
- **TIMER:** Activates or sets timer functions.
- **EQ (Equalizer):** Adjusts audio equalizer settings.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it is time to replace the batteries. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or benzene, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, high temperatures, and humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control has limited range or is unresponsive.	Obstruction between remote and device; low batteries.	Ensure clear line of sight to the device's infrared sensor. Replace batteries.
Remote does not control other devices (e.g., TV, DVD player).	This remote is a dedicated replacement.	This Redi-Remote is specifically designed for GPX S7794 and S7694 units and cannot be programmed to control any auxiliary devices.
Buttons feel sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote control as described in the Maintenance section.

6. SPECIFICATIONS

- **Model Number:** RTS7694
- **Compatible GPX Models:** S7794, S7694
- **Dimensions:** 7 inches (L) x 2.5 inches (W) x 1 inch (H)
- **Weight:** Approximately 4.5 ounces (without batteries)
- **Power Source:** 4 x AAA Batteries (included)
- **Connectivity Technology:** Infrared (IR)
- **Special Features:** No programming required, dedicated functionality for specified GPX models.

7. WARRANTY INFORMATION

Specific warranty details for this Redi-Remote replacement remote control are not provided in this manual. Please refer to the product packaging or contact the seller, RemotesPro, directly for information regarding warranty coverage and terms.

8. CUSTOMER SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the seller, RemotesPro. They can provide assistance with product functionality, troubleshooting, and any post-purchase inquiries. You can typically find seller contact information through your purchase history on the platform where the item was acquired.

© 2024 Redi-Remote. All rights reserved.

GPX is a registered trademark of its respective owner. This product is a replacement remote control and is not manufactured by GPX.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5L7TC>

More documents and user manuals: <https://manuals.plus/>