

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Executive EXC9150, STS93, EXC9100 User Manual

Redi-Remote RTSTS93

Redi-Remote Replacement Remote Control User Manual

For Executive Models: EXC9150, STS93, EXC9100

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed specifically for Executive audio/video units. This remote is a custom-built replacement for the original remote control number STS93 and is compatible with Executive models EXC9150, STS93, and EXC9100. It requires no programming and is ready for use upon battery installation.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries (included). To install:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Note: This remote control does not require any programming. It is pre-configured for immediate use with compatible Executive units.



Image: Front view of the Redi-Remote replacement remote control. It features a silver and black design with various control buttons, including a sliding cover over the lower half.

2. Sliding Cover Operation

The remote control features a sliding cover over its lower half. To access the additional buttons located underneath, gently slide the cover downwards. To protect these buttons when not in use, slide the cover back upwards.

OPERATING INSTRUCTIONS

This remote control is designed to operate all functions of your compatible Executive unit (EXC9150, STS93, EXC9100). Point the remote directly at the infrared receiver on your Executive unit.

- **Power Button:** Press to turn the unit on or off.
- **Volume Controls:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Channel/Track Selection:** Use the **CH+** and **CH-** buttons or number pad to select channels or tracks.
- **Playback Controls:** Buttons such as Play, Pause, Stop, Fast Forward, and Rewind control media playback.
- **Menu Navigation:** Use the arrow keys and OK/Enter button to navigate through the unit's menus.

The maximum effective operating range for this remote control is approximately 20 feet (6 meters). Ensure there are no obstructions between the remote and the Executive unit's infrared receiver.

Important: This Redi-Remote is specifically designed for the listed Executive units and cannot be programmed to control any auxiliary devices.

MAINTENANCE

Battery Replacement

When the remote control's performance diminishes or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period (e.g., several months), it is recommended to remove the batteries to prevent leakage and potential damage to the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the Executive unit's infrared receiver.
 - Verify that you are within the effective operating range (approximately 20 feet).
 - Point the remote directly at the unit.
- **Limited Functionality / Not Controlling Other Devices:**
 - This remote is a dedicated replacement for specific Executive models (EXC9150, STS93, EXC9100) and is not designed to control other brands or auxiliary devices. It cannot be programmed for universal control.

SPECIFICATIONS

Brand	Redi-Remote
Model Name	RTSTS93
Model Number	RTSTS93
Compatible Executive Models	EXC9150, STS93, EXC9100
Special Feature	No Programming Required
Connectivity Technology	Infrared
Maximum Range	20 feet (6 meters)
Number of Buttons	58
Batteries Required	4 AAA batteries (included)
Item Dimensions (L x W x H)	7.5" x 2.25" x 0.75" (19.05 cm x 5.72 cm x 1.91 cm)
Item Weight	4.5 ounces (127.57 grams)

WARRANTY AND SUPPORT

Specific warranty information for this Redi-Remote replacement control is not provided in this manual. For details regarding warranty coverage, returns, or any operational concerns after purchase, please contact the seller directly through your purchase platform.

For further assistance or technical support, refer to the contact information provided by your retailer or the Redi-Remote brand.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5LH42>

More documents and user manuals: <https://manuals.plus/>