

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for SANYO MCDZ65 Series

Redi-Remote RT114955801

Redi-Remote Replacement Remote Control User Manual for SANYO MCDZ65 Series

Model: RT114955801

1. INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control. This remote is specifically designed to operate various SANYO units, including models MCDZ65, 6142405161, RBZ65, and 114955801. It is a custom-built replacement and not an original SANYO remote. Please read this manual carefully to ensure proper setup and operation of your new remote control.

2. PRODUCT OVERVIEW

The Redi-Remote replacement remote control is designed for ease of use and direct compatibility with specified SANYO models. It features a durable construction and a sliding cover that conceals the lower half buttons when not in use, protecting them from accidental presses and dust.



Image 1: Front view of the Redi-Remote Replacement Remote Control. Note the ergonomic design and button layout.

- **Approximate Dimensions:** The remote measures approximately 7 1/2 inches (19.05 cm) in length, 2 1/4

inches (5.72 cm) in width, and 3/4 inches (1.91 cm) in thickness.

- **Sliding Cover:** A protective cover slides down to reveal or conceal the lower half of the remote's buttons.
- **Functionality:** This remote is specifically designed to perform all functions for the designated SANYO unit. It cannot be programmed to control auxiliary devices.
- **Features:** The remote does not include laser pointers or LED lights.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Four AAA batteries are included with the remote.
4. Close the battery compartment cover securely.

3.2 Initial Use

No programming is required for this Redi-Remote. Once batteries are installed, the remote is ready for immediate use with your compatible SANYO unit.

4. OPERATING INSTRUCTIONS

The Redi-Remote operates using infrared (IR) technology. Ensure a clear line of sight between the remote control and the SANYO unit's IR receiver for optimal performance.

- **Point and Press:** Aim the remote control directly at your SANYO unit.
- **Button Functions:** Each button on the remote corresponds to a specific function on your SANYO unit. Refer to your SANYO unit's original manual for detailed descriptions of each function if needed.
- **Sliding Cover:** Slide the cover down to access additional buttons for advanced functions. Slide it up to protect these buttons.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** If the remote's performance degrades or it stops responding, replace all four AAA batteries with new ones. Do not mix old and new batteries.
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the SANYO unit's IR receiver.
 - Ensure you are within the effective range of the SANYO unit.
- **Some buttons not working:**
 - Verify that the sliding cover is fully open if you are trying to access lower-half buttons.

- Confirm the remote is compatible with your specific SANYO model.

If you continue to experience issues after following these troubleshooting steps, please contact the seller directly for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT114955801
Compatible Devices	SANYO MCDZ65, 6142405161, RBZ65, 114955801 (Stereo System)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Specific SANYO unit)
Special Feature	No Programming Required
Product Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Batteries	4 AAA batteries (included)

8. SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. Provide your purchase details and a description of the issue to facilitate a quicker resolution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B009H5LSAU>

More documents and user manuals: <https://manuals.plus/>